

ICP User Manual V1.0 2023.11

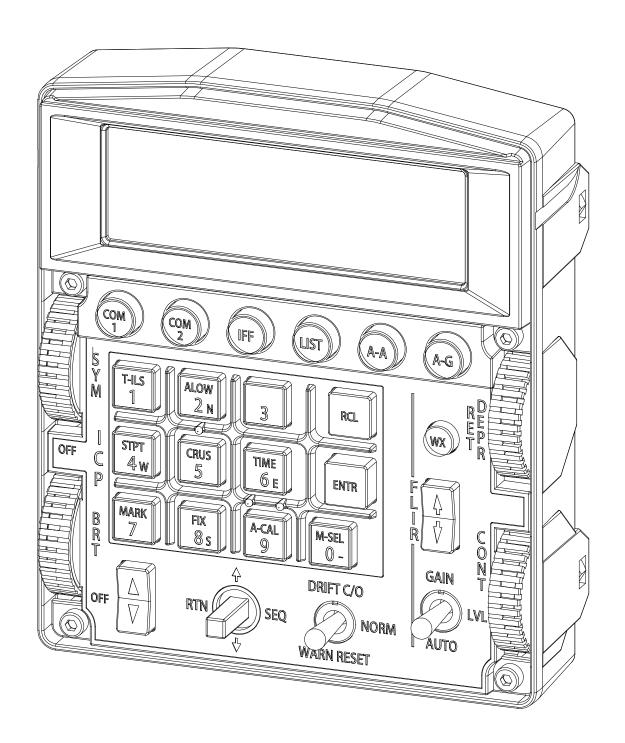

Catalogue:

Contents in the box	. 1
1 Parameters	. 2
1.1 Performance Parameters	. 2
1.2 Applicable Models	. 2
1.3 Dimensions	. 3
1.4 Installation Dimensions	. 4
2 Function	. 5
2.1 Mechanical/Special Functions	. 5
2.2 Buttons	. 6
2.3 Adjustment Methods	. 7
3 Assembly of Components	. 8
4 Installation Methods	. 8
4. 1 Bracket Mounting	. 8
4. 2 Gaming Seat Mounting	33
4. 3 Cockpit Mounting	33
4 4 Cascading	33


Contents in the box

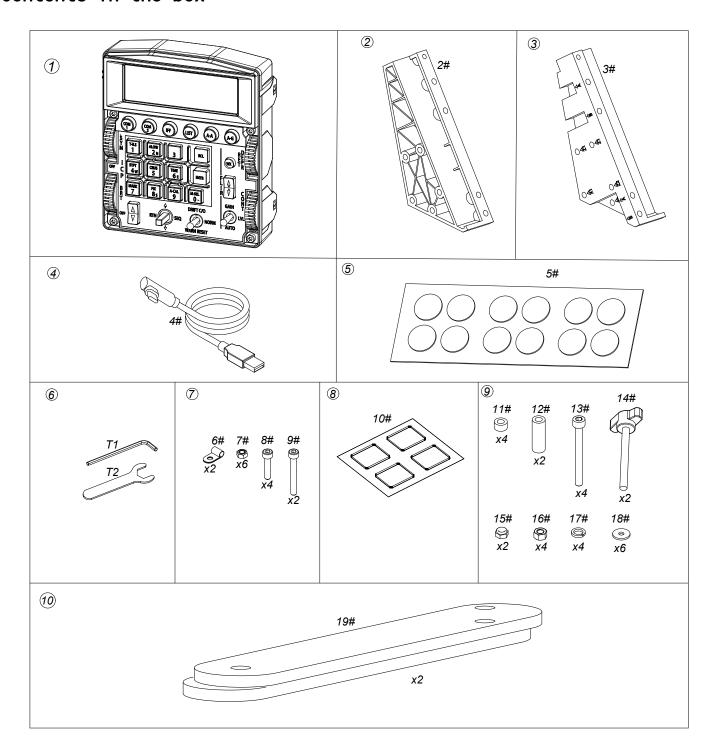

1	ICP (1#)	1						
2	Mounting Bracket - Left (2#)	1						
3	Mounting Bracket - Right (3#)	1						
4	Data Cable (4#)	1						
5	5 Nanometer Double Sided Adhesive Dots (5#)							
6	6 Tools Kit (T1, T2)							
7	Accessories Kit 1 (6#~9#)							
	6#: R-Type Line Clamp UC-0.5 Black							
	7#: Standard Nut M5							
	8#: Hexagon Socket Head Screw M5*20							
9#: Hexagon Socket Head Screw M5*40								
8	Silicone Pad (10#)							
9	Accessories Kit 2 (11#~18#) 1							
	11#: Nylon Spacer Outer Diameter 9mm*Inner Diameter M5*Height	5mm						
	12#: Nylon Spacer Outer Diameter 9mm*Inner Diameter M5*Height	25mm						
	13#: Hexagon Socket Head Screw M5*50							
	14#: Thumb Screw M5*50							
	15#: Locking Nut M5							
	16#: Standard Nut M5							
	17#: Spring Washer M5							
	18#: Flat Washer M5*10*1							
10	Mounting Bracket Connection Plate (19#) 1							

1 Parameters

1.1 Performance Parameters

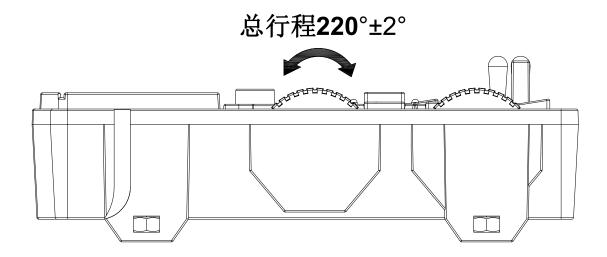


- \bigcirc 4 axes, individual travel range of 220° \pm 2°, resolution 0-4095
- 2 4 thumbwheels, rotational torque: 10-250gf.cm

1.2 Applicable Models


- 1) Can be used independently
- 2 Can be cascaded with various control panels through MP1 (sold separately)

1.3 Dimensions

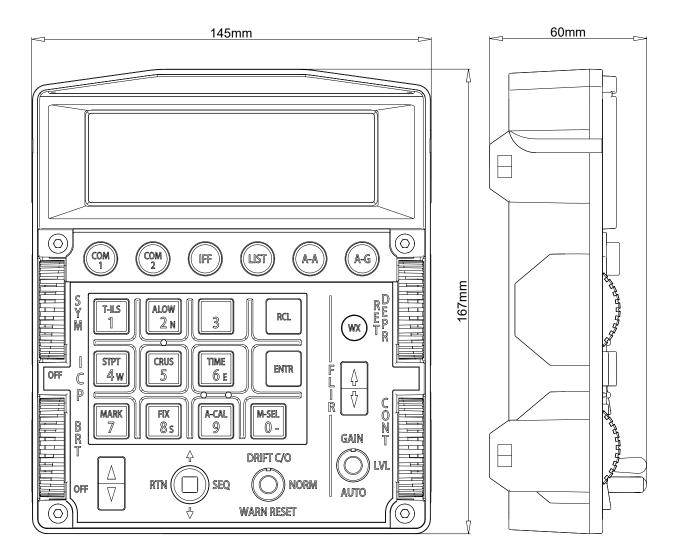


Product dimensions: 167mm*145mm*60mm; Weight: 0.5kg=1.10lb

1.4 Installation Dimensions

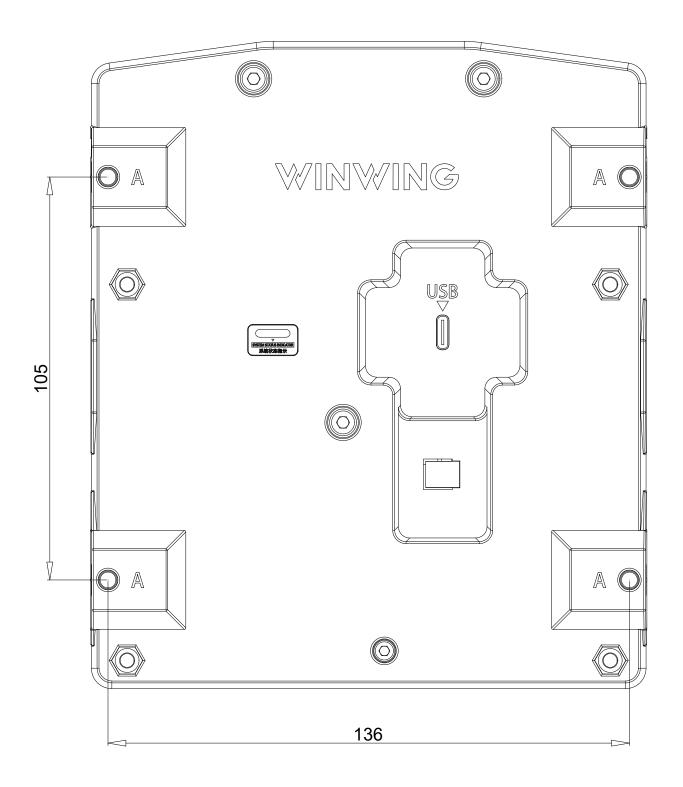


*Unit is in millimeters (mm).

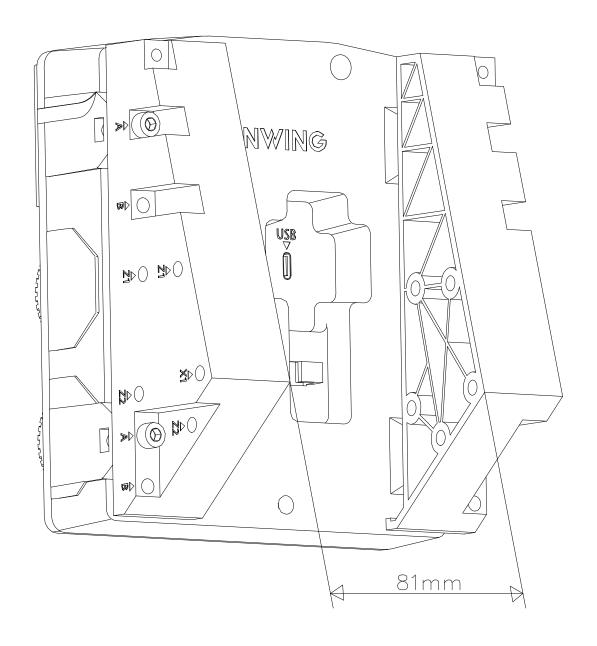


2 Function

2.1 Mechanical/Special Functions (None)

2. 2 Buttons

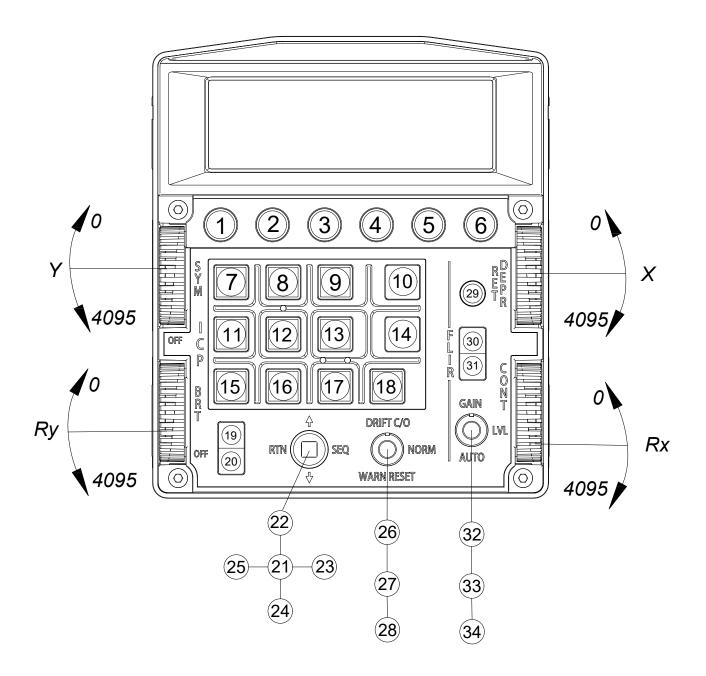

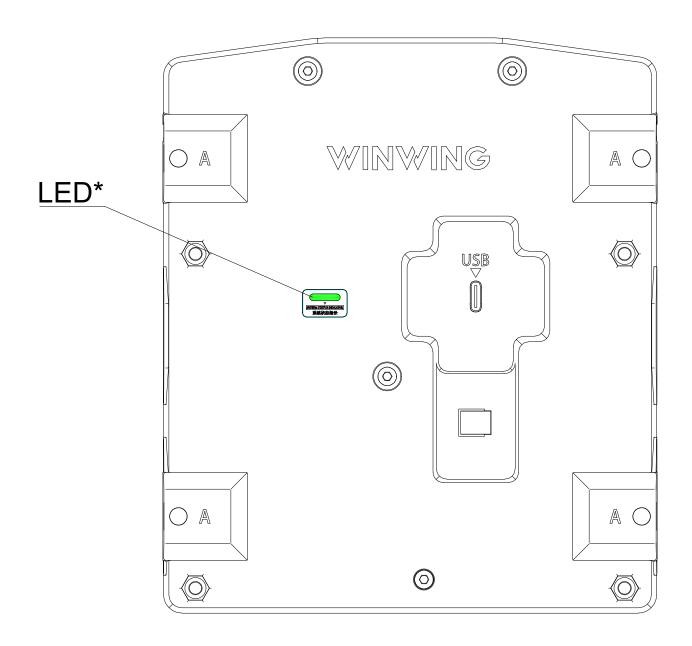

*LED Status Display:

Steady slow flashing in green (1s interval) - BOOT mode. Slow flashing in green (1s interval) for 5 times, then steady ON - Operational mode. Slow flashing in green (1s interval) for 5 times, then OFF - Power supply only mode.

2.3 Adjustment Methods

(None)


3 Assembly of Components


(None)

4 Installation Methods


4.1 Bracket Mounting

1. Bracket Mounting Methods(1): Installing at an angle of 51 degrees from the desktop

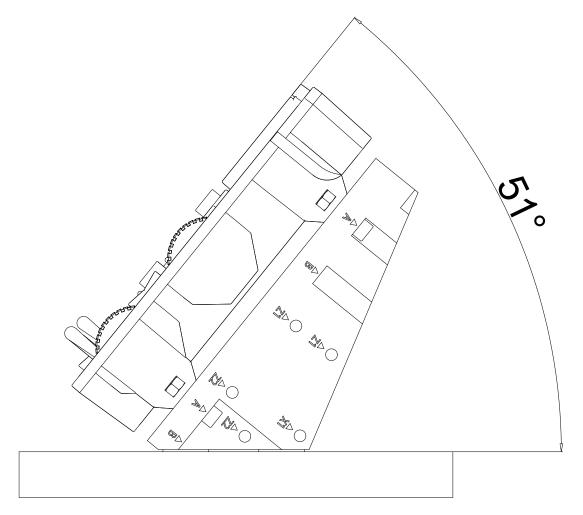


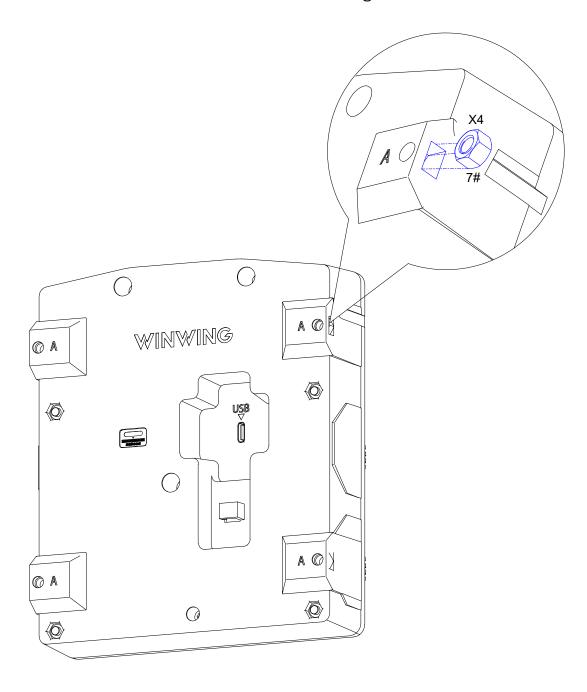


st For the backside A hole, insert the 7# (M5 Nut) from the side.

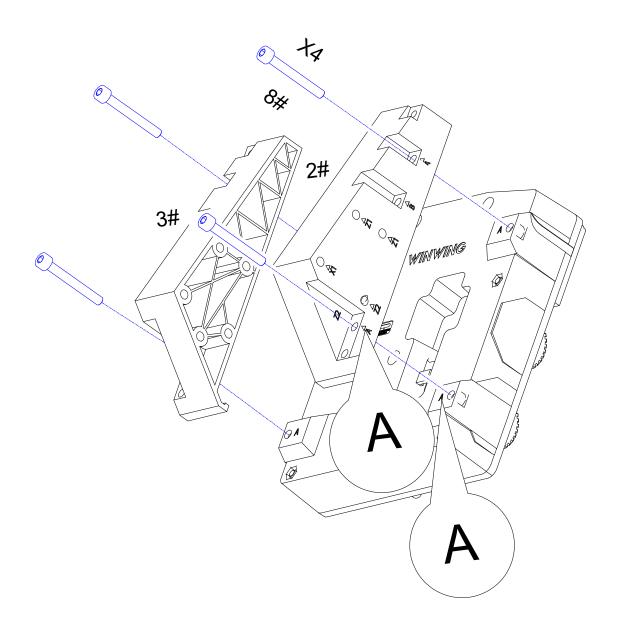

- f * Tighten the screws until there is no wobbling. Over-tightening may cause damage.
- * Specification for 8#: M5X20.

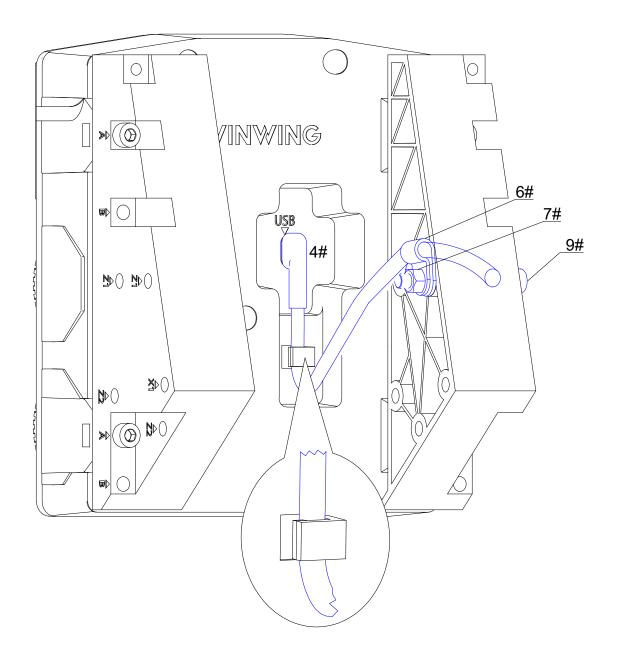


- * Tighten the screws until there is no wobbling. Over-tightening may cause damage.
- * Unused holes on the bracket can be used for installing line clamps.
- * Specification for 7#: M5; Specification for 9#: M5*40.

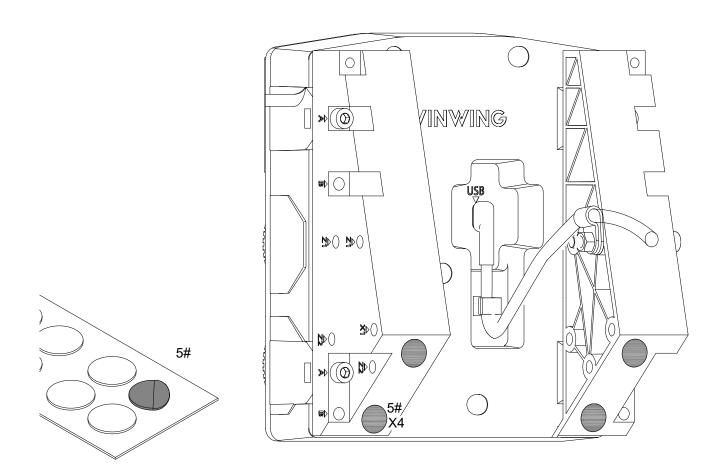


 $oldsymbol{*}$ Clean the surface of the bracket from dust before installation.


2. Bracket Mounting Methods2: Installing at an angle of 16 degrees from the desktop.

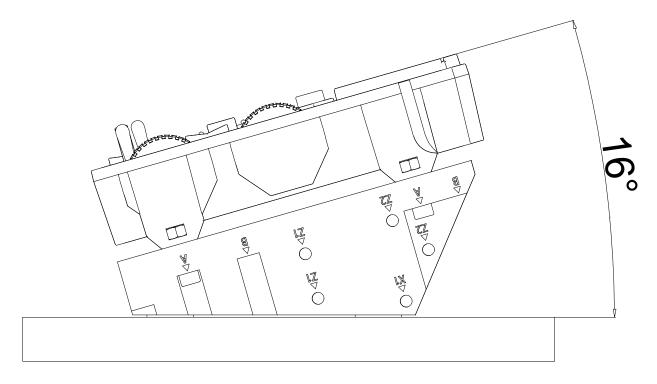

^{*} Hole mounting method, same as Method 1.

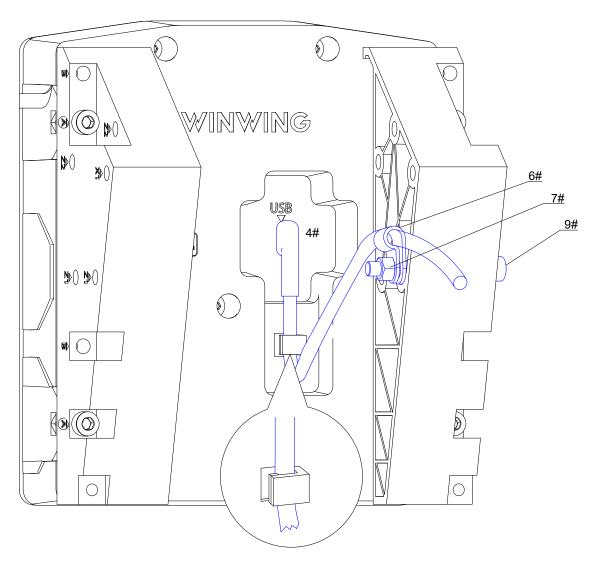


- * Tighten the screws until there is no wobbling. Over-tightening may cause damage.
- * Unused holes on the bracket can be used for installing line clamps.
- * Specification for 7#: M5; Specification for 9#: M5*40.

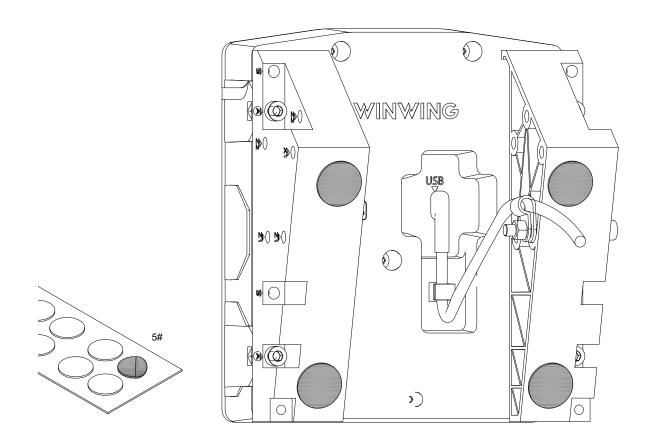


* Clean the surface of the bracket from dust before installation.

- 3. Install the ICP on the UFC1 for quick switching between two aircraft modules.
 - * UFC1 needs to be purchased separately.


Provide the following installation method: Installation Method

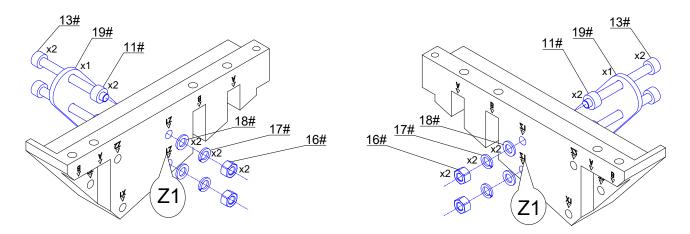


The left and right brackets have the same connection method.

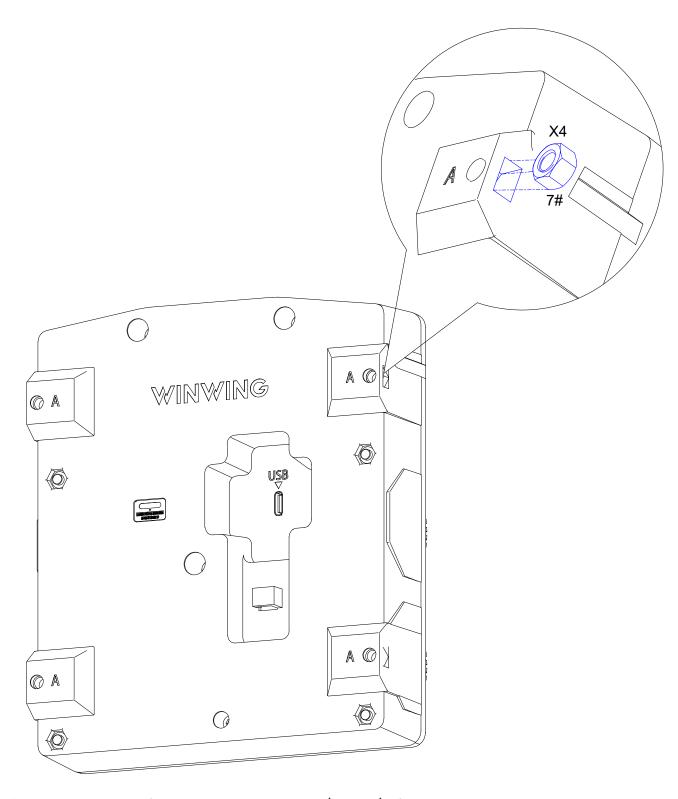



^{*} For the backside A hole, insert the 7# (M5 Nut) from the side.

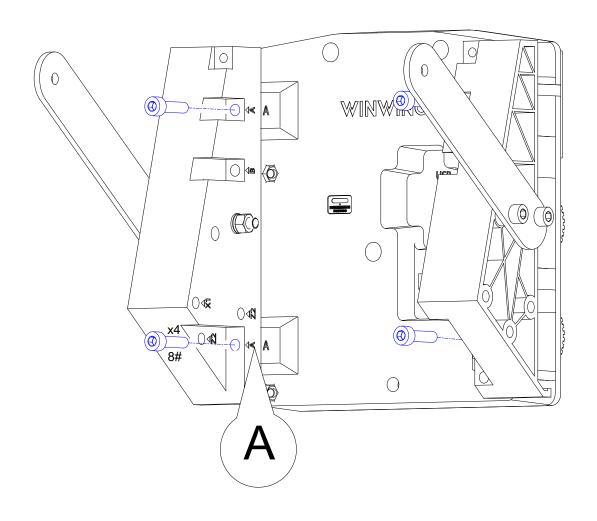


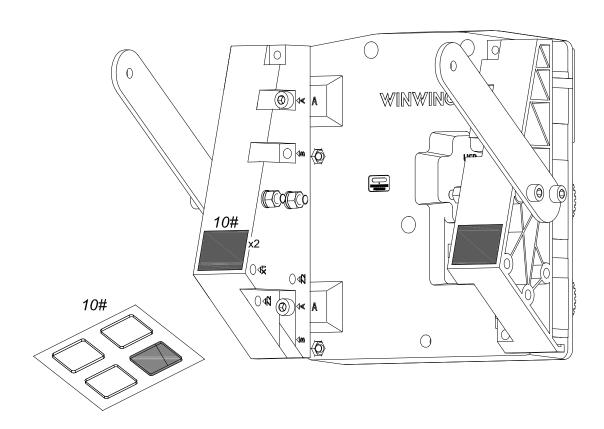


* Clean the	surface	of the	bracket	from	dust	before	installation.	

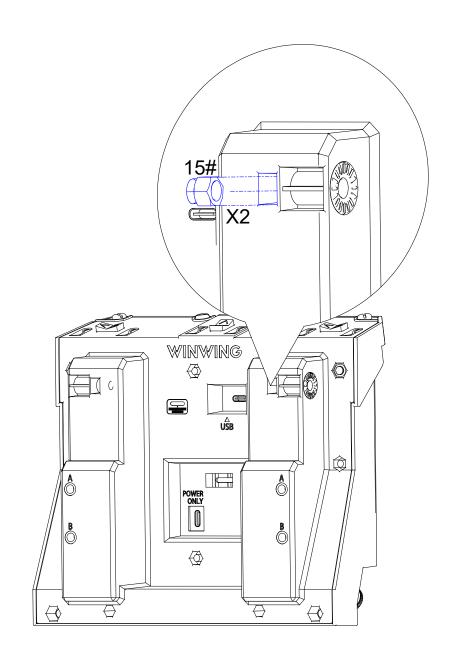

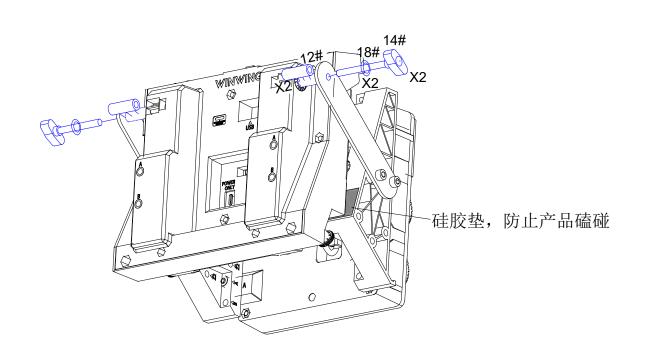

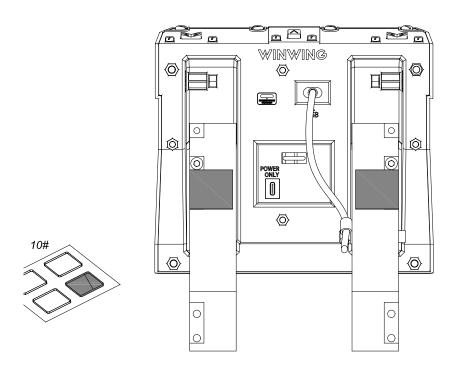


- * Clean the surface of the bracket from dust before installation.
- * Install a Silicone Pad (10#) on the UFC1.

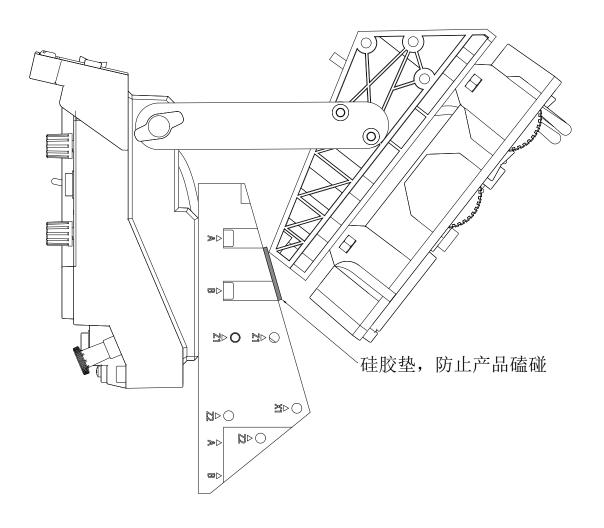


- 4. Install the ICP on the UFC1 for quick switching between two aircraft modules.
 - * UFC1 needs to be purchased separately.


Provide the following installation method: Installation Method

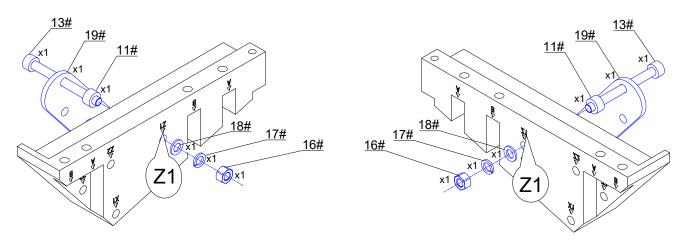



The left and right brackets have the same connection method.

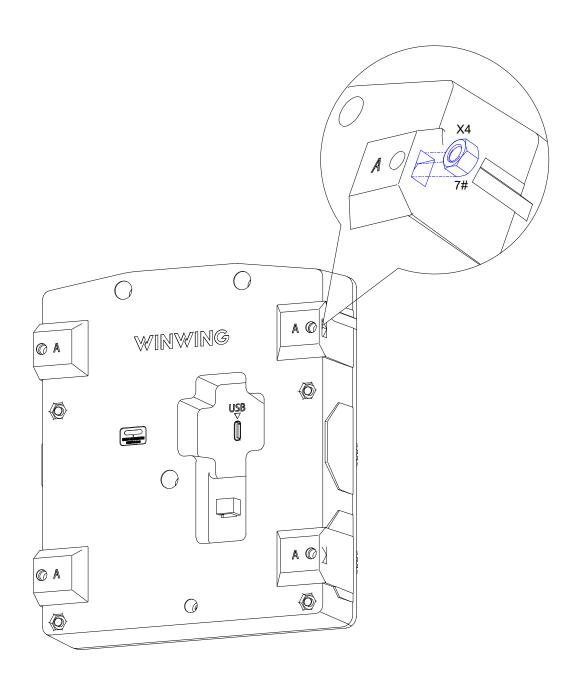


^{*} Insert the 7# (M5 Nut) into the backside A hole from the side.

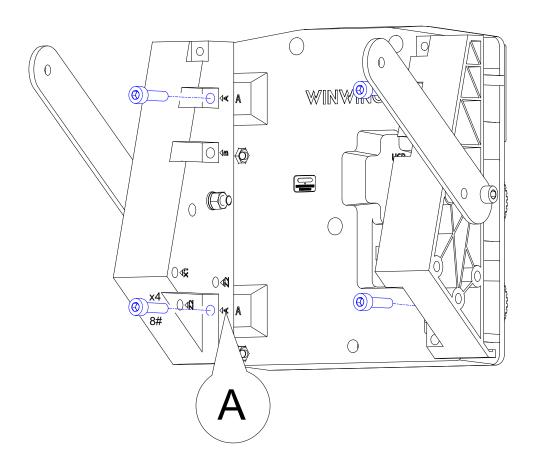


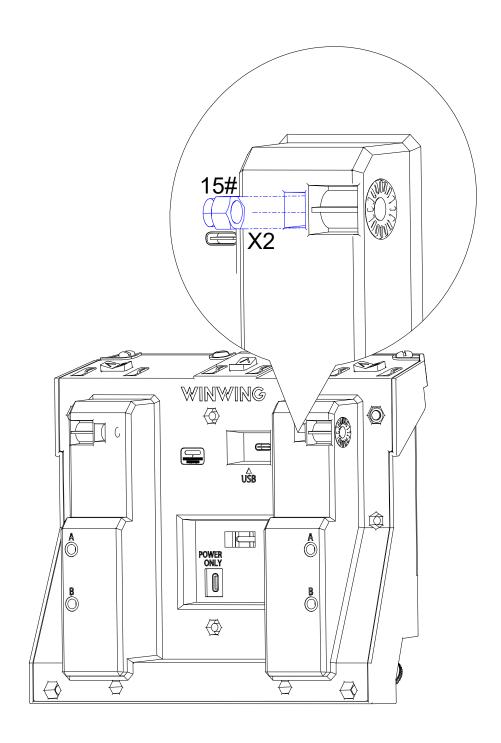

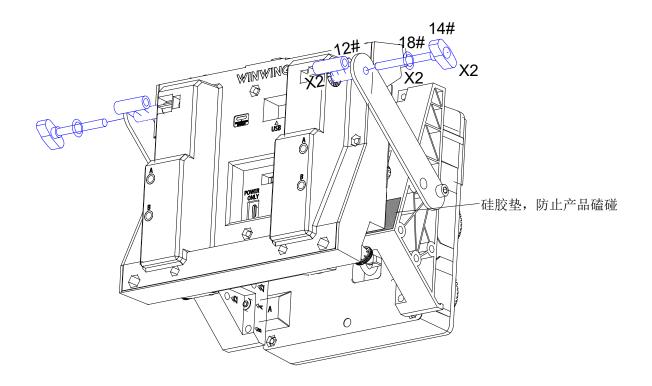


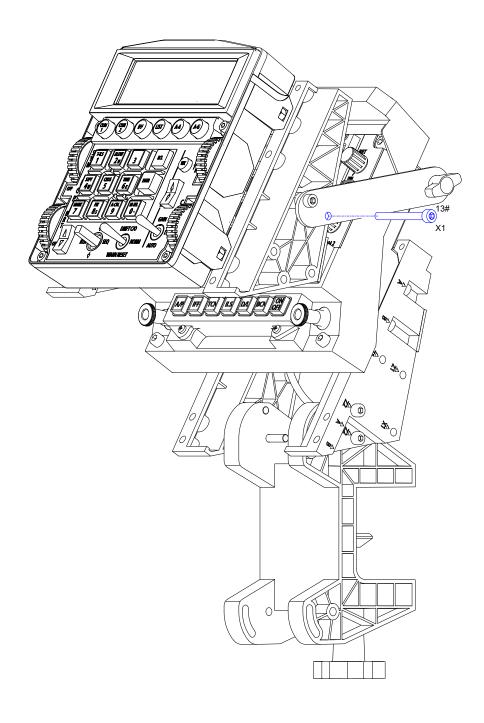

* Insert the M5X50 screw to secure the bracket and prevent wobbling.

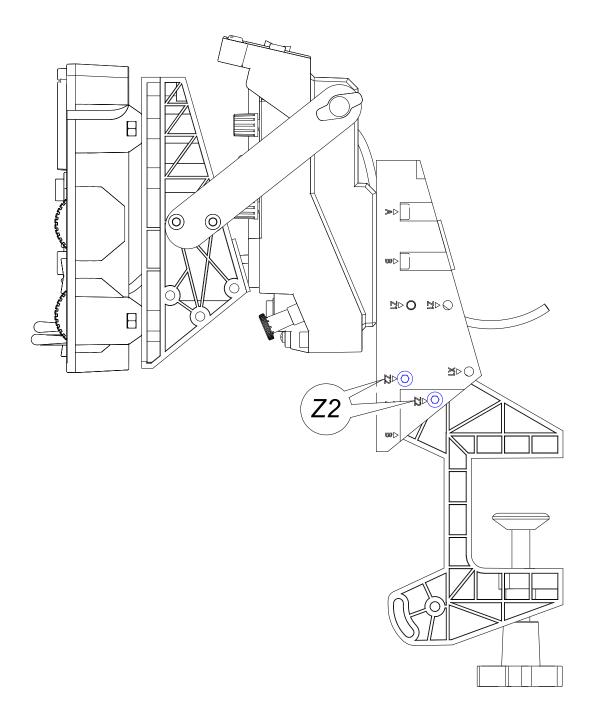


st Loosen the two M5 screws (Z2) to adjust the angle.

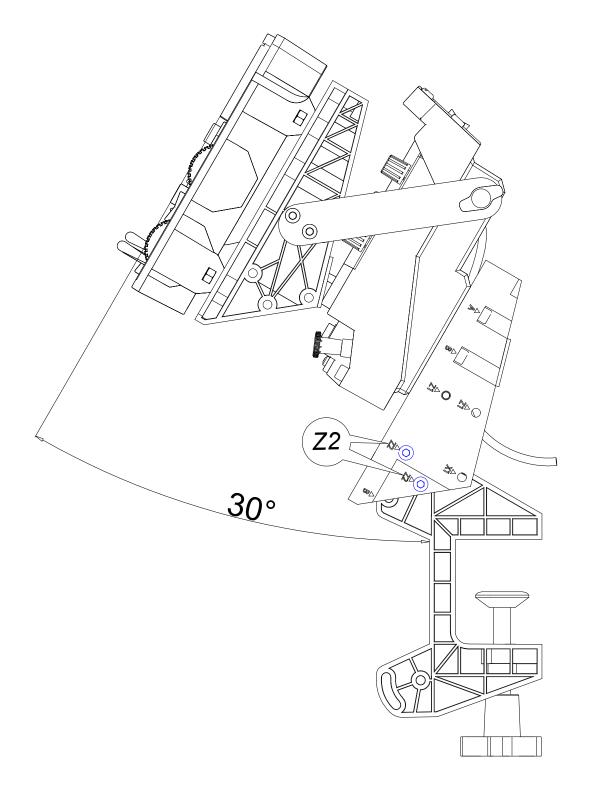

* Example:

Adjust the product to 30° to experience different angles. When the optimal angle is reached, tighten the two M5 screws (Z2) to secure it.

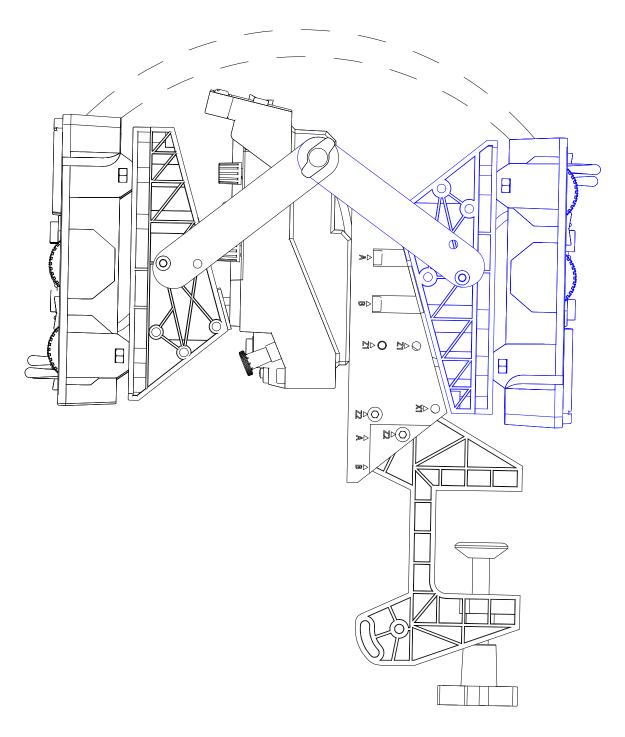


* Remove the M5X50 screw during operation of flipping the ICP .

5. Install the ICP on the MP1

* The MP1 and related accessories need to be purchased separately.

Provide the following installation method:

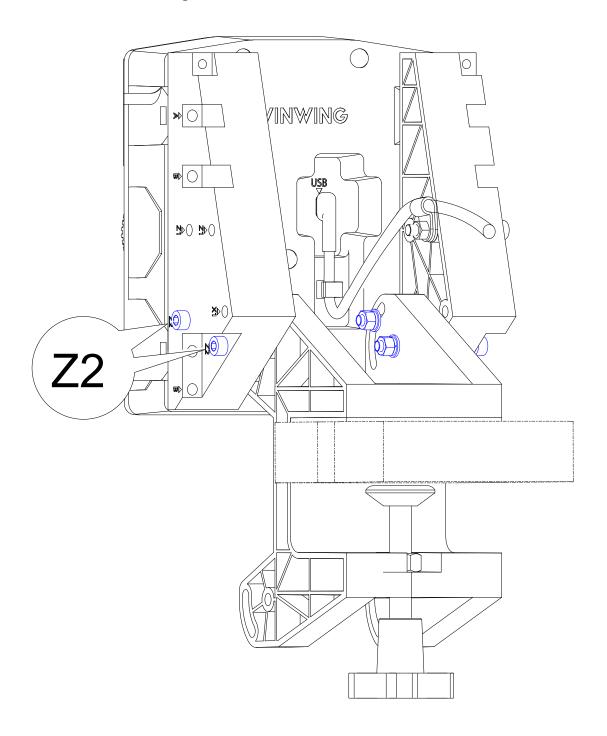

^{*} For more detailed installation instructions, refer to the "MP1 User Manual."

4.2 Gaming Seat Mounting

(None)

4.3 Cockpit Mounting

(None)

4.4 Cascading

(None)

Content may be updated without prior notice. *内容如有更新,恕不另行通知。

成都翼胜科技有限责任公司 Chengdu WINWING Tech Co., LTD

WWW. WINWING. CN

INFO@WINWING. CN

成都市郫都区现代工业港长生桥路 1111 号 19 栋

High-tech International Enterprise Zone No. 19 Building, Changshengqiao Road
1111#, Pidu District, Chengdu, China 610000