


HUD1


User Manual V1.2 2023.11

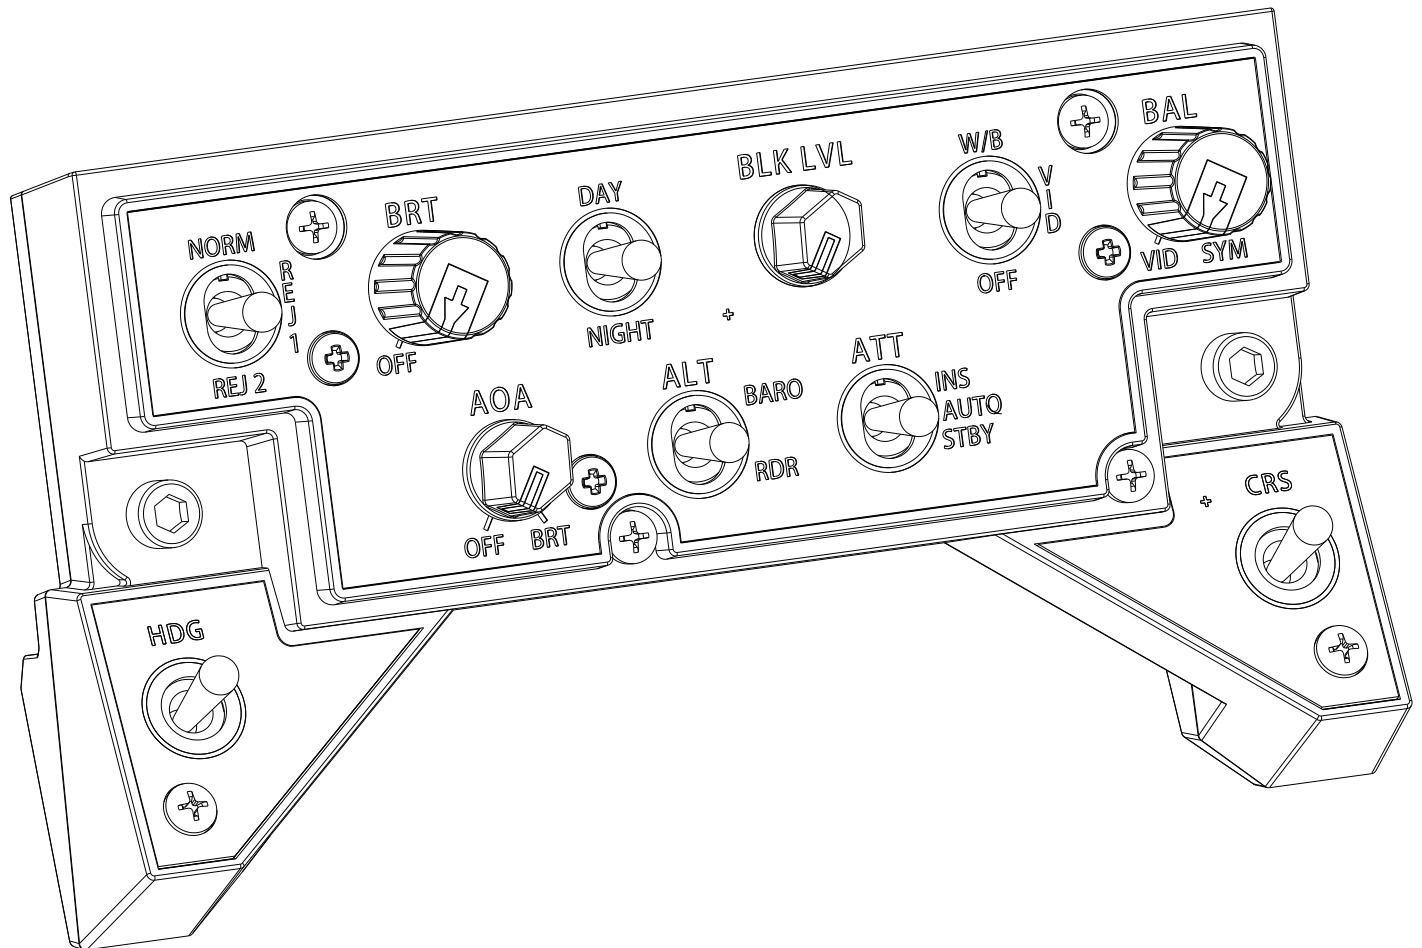

Catalogue:

Package list.....	1
1 Parameter	2
1.1 Performance parameter	2
1.2 Applicable models	2
1.3 Dimension.....	3
1.4 Installation dimension	3
2 Functions	4
2.1 Mechanical and special functions	4
2.2 Key positions.....	4
2.3 Adjustment methods.....	5
3 Parts installation and disassemble.....	5
4 Installation methods.....	5
4.1 Holders installation	5
4.2 Game seat installation.....	5
4.3 Cockpit installation.....	5
4.4 Connection	6


Package list

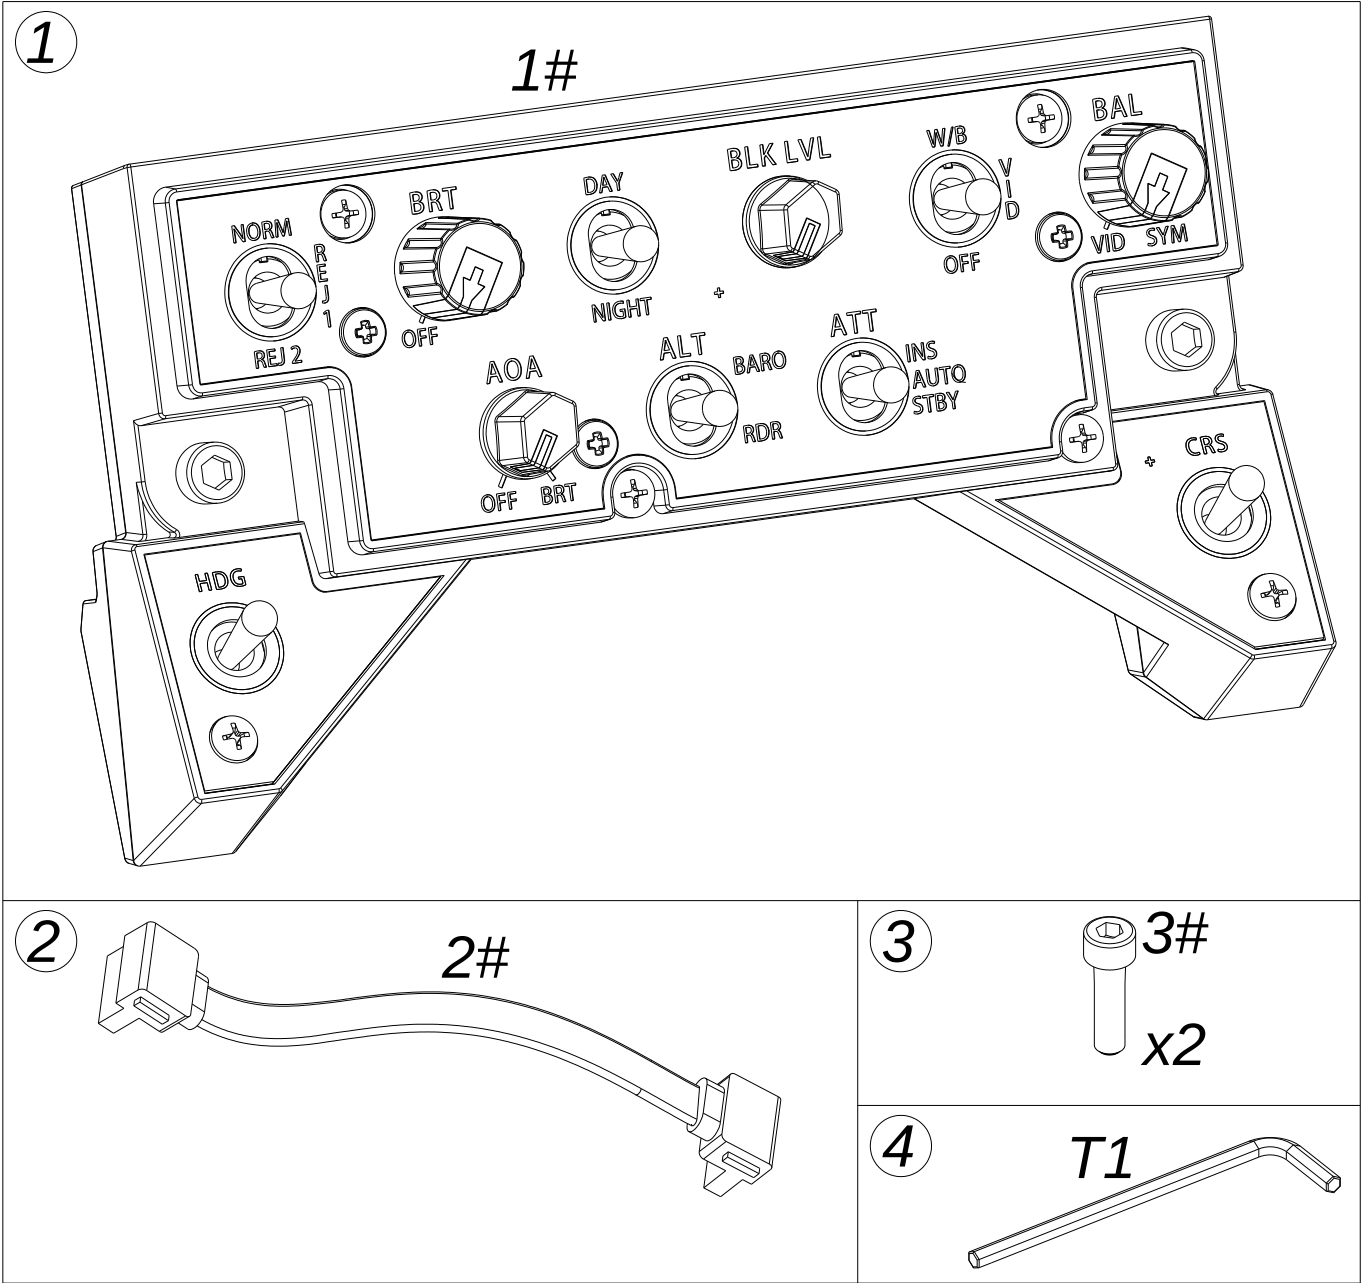

①	HUD1 (1#)	1
②	SATA data cable (2#)	1
③	Accessories package (3# : Hexagon Socket Head Cap Screws M5*18)	1
④	Tools package (T1)	1

1 Parameter

1.1 Performance parameter

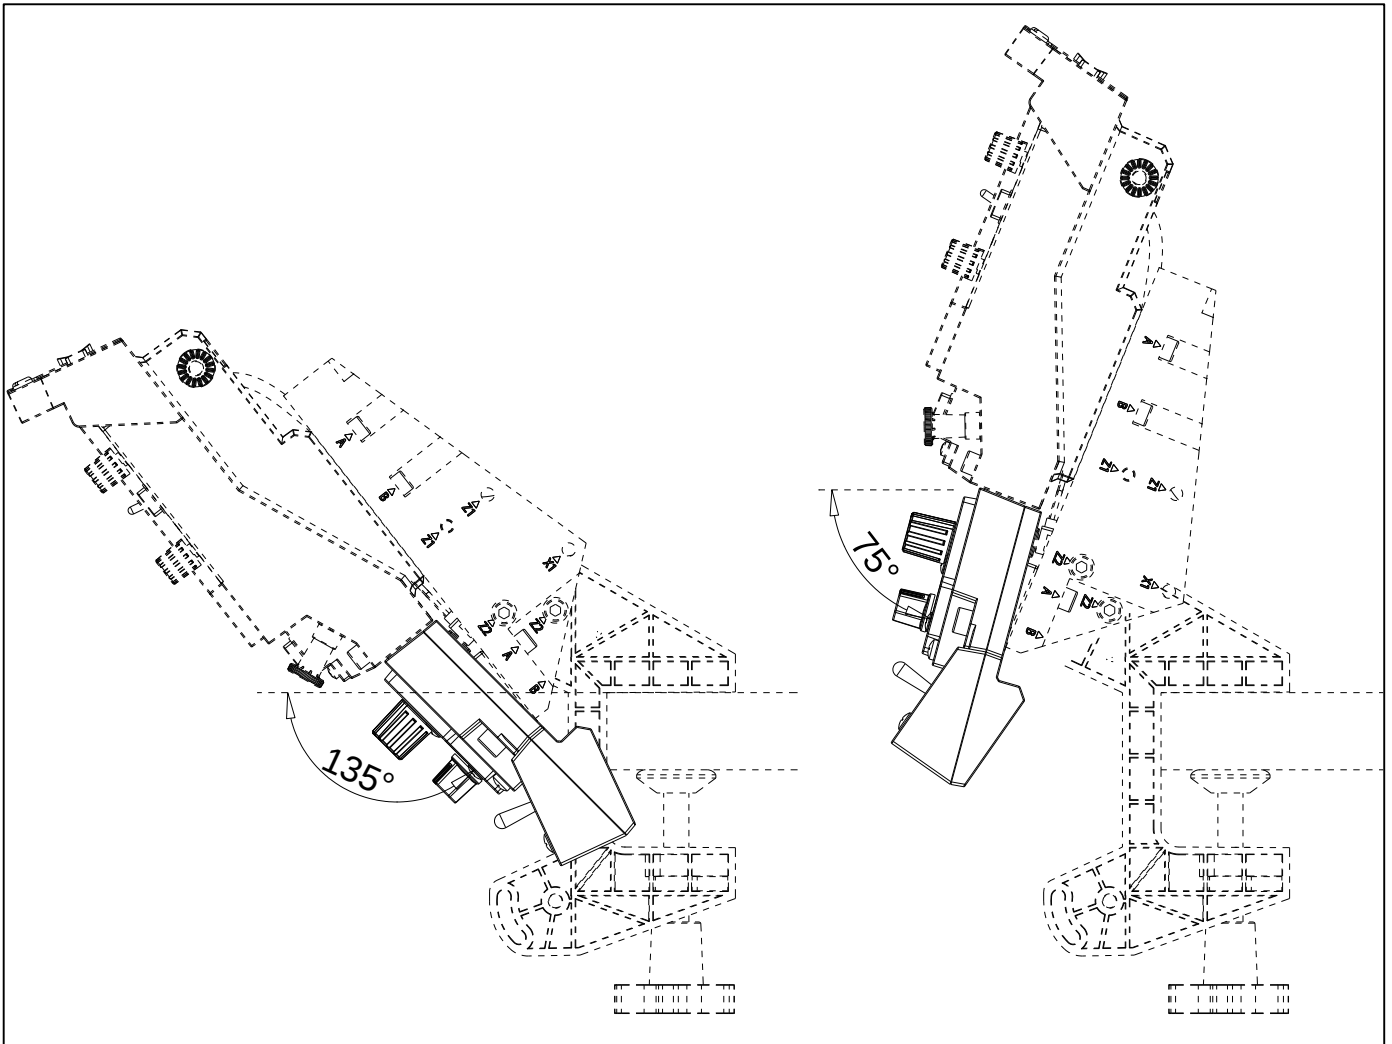


After connected with UFC1, it can be mounted on the clamp holders(need perchance), with an initial adjustable angle, adjustable range: 60 degrees.

*Please refer 4.4 for installation method.

1.2 Applicable models


- ① Connect with UFC1;
- ② Already connected with UFC1 and ready to mount it on clamp holders.

1.3 Dimension

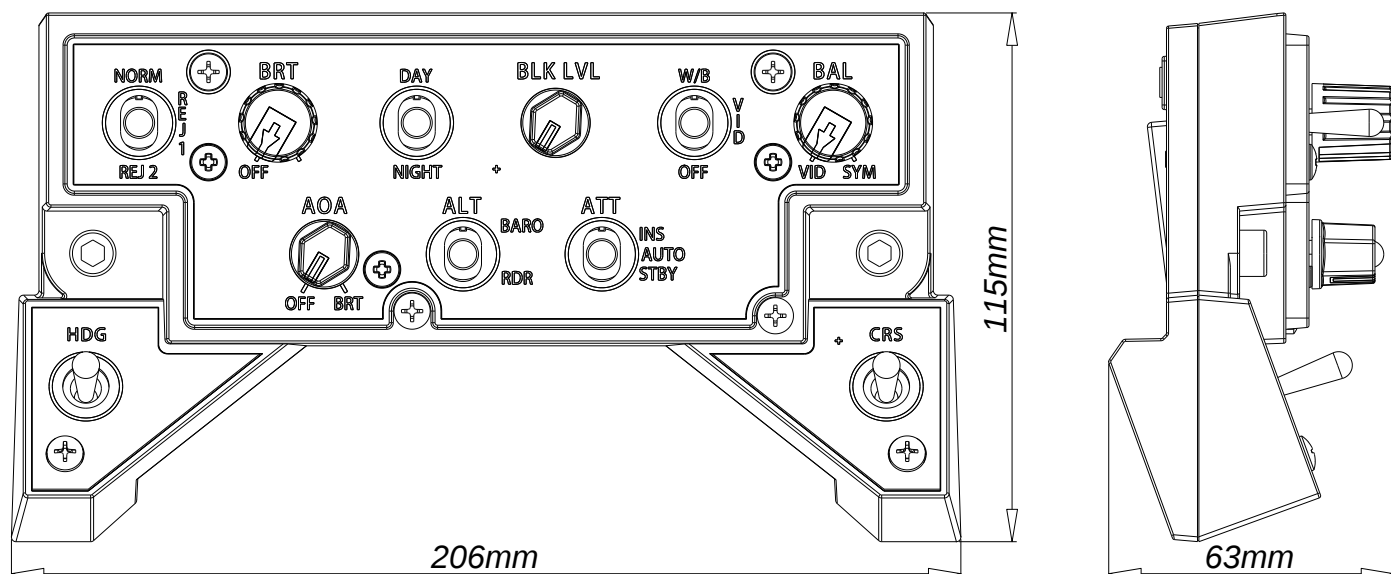

Lengths*width*height: 206mm*115mm*63mm; Mass: 0.88Kg=1.94lb.

1.4 Installation dimension

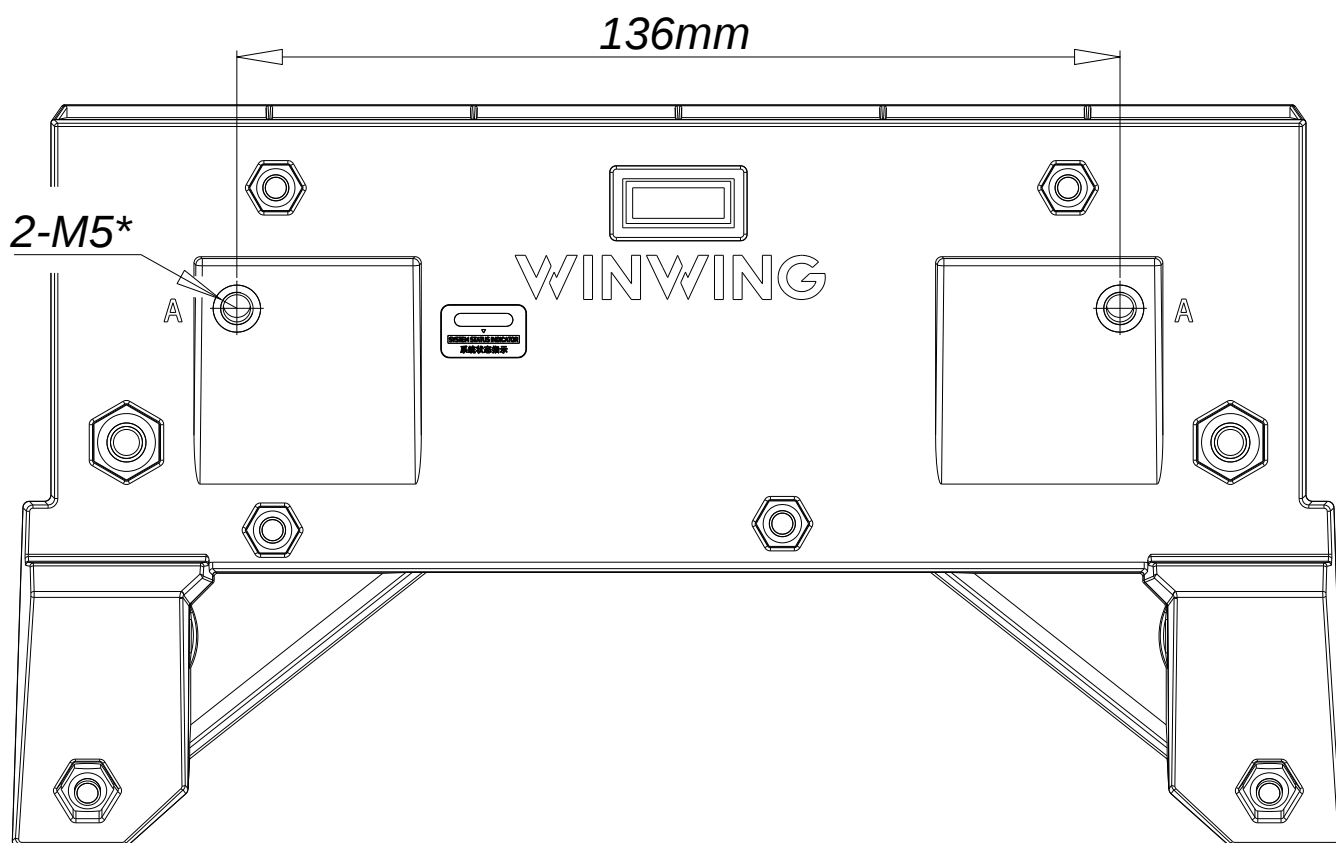


*2-M5 maximum depth: 5mm.

2 Functions

2.1 Mechanical and special functions

\

2.2 Key positions

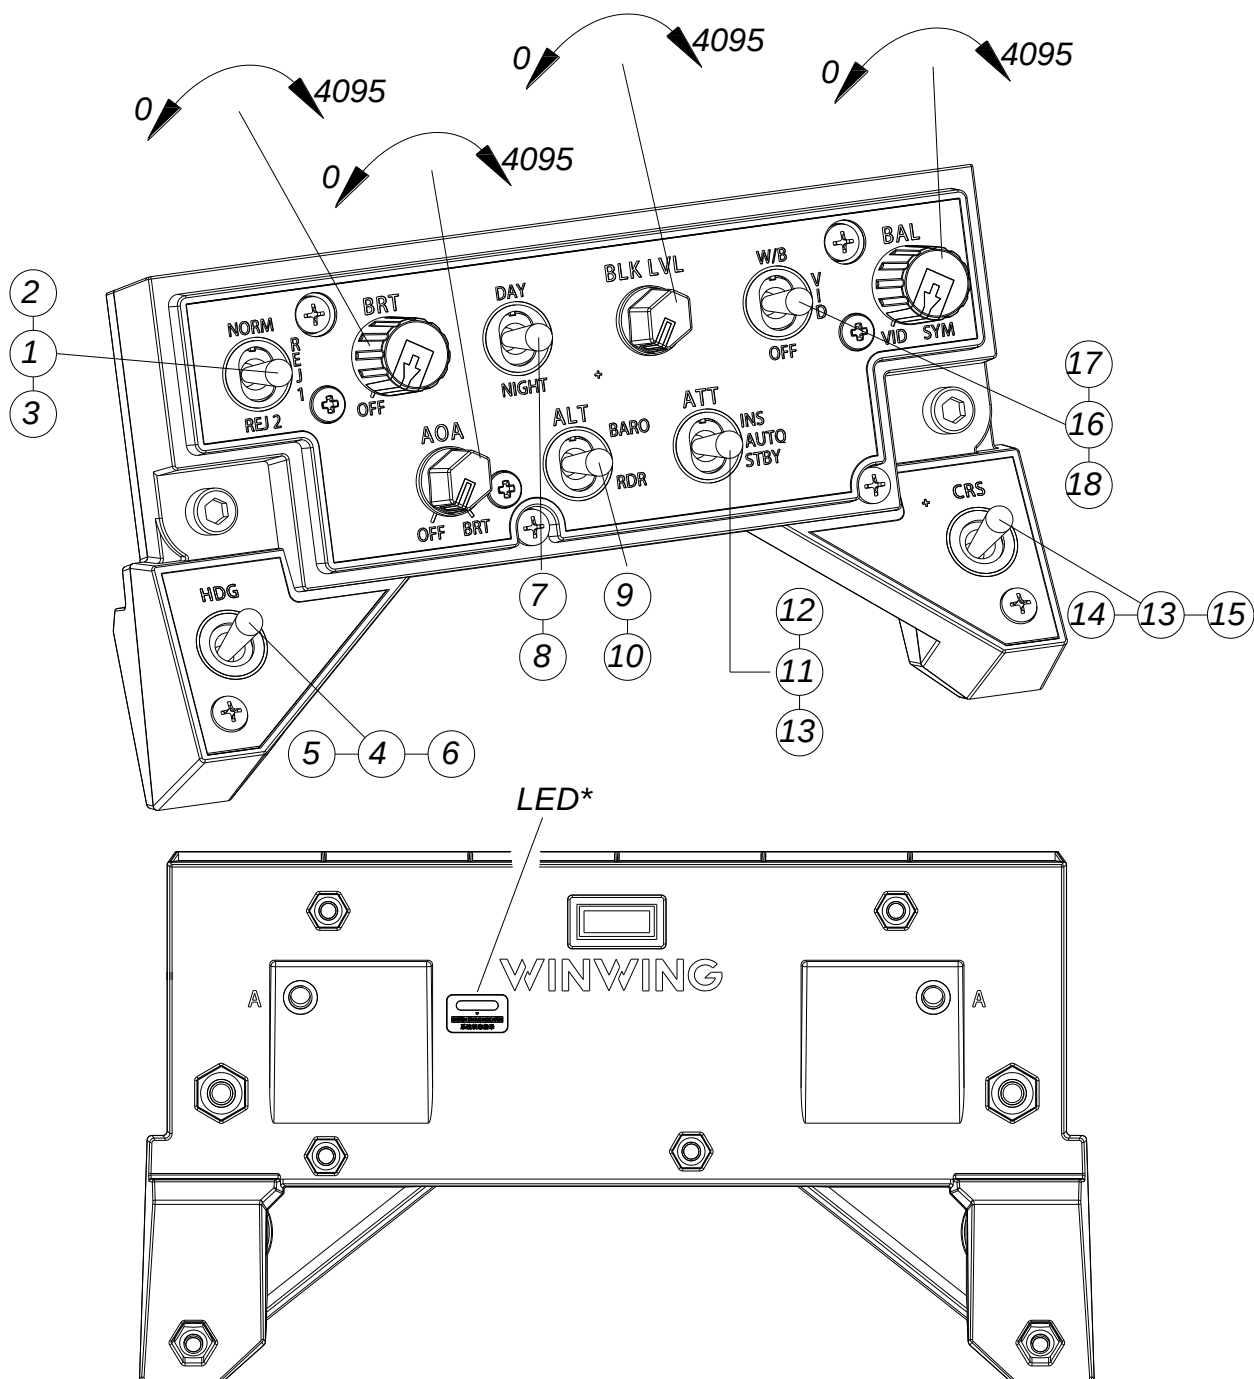

* LED status: Steady slow flashing in green (1s interval) - BOOT mode.

Slow flashing in green (1s interval) for 5 times, then steady ON - Operational mode.

Slow flashing in green (1s interval) for 5 times, then OFF - Power supply only mode

2.3 Adjustment methods

\

3 Parts installation and disassemble

\

4 Installation methods

4.1 Holders installation

\

4.2 Game seat installation


\


4.3 Cockpit installation



\


4.4 Connection

Connect with UFC1.

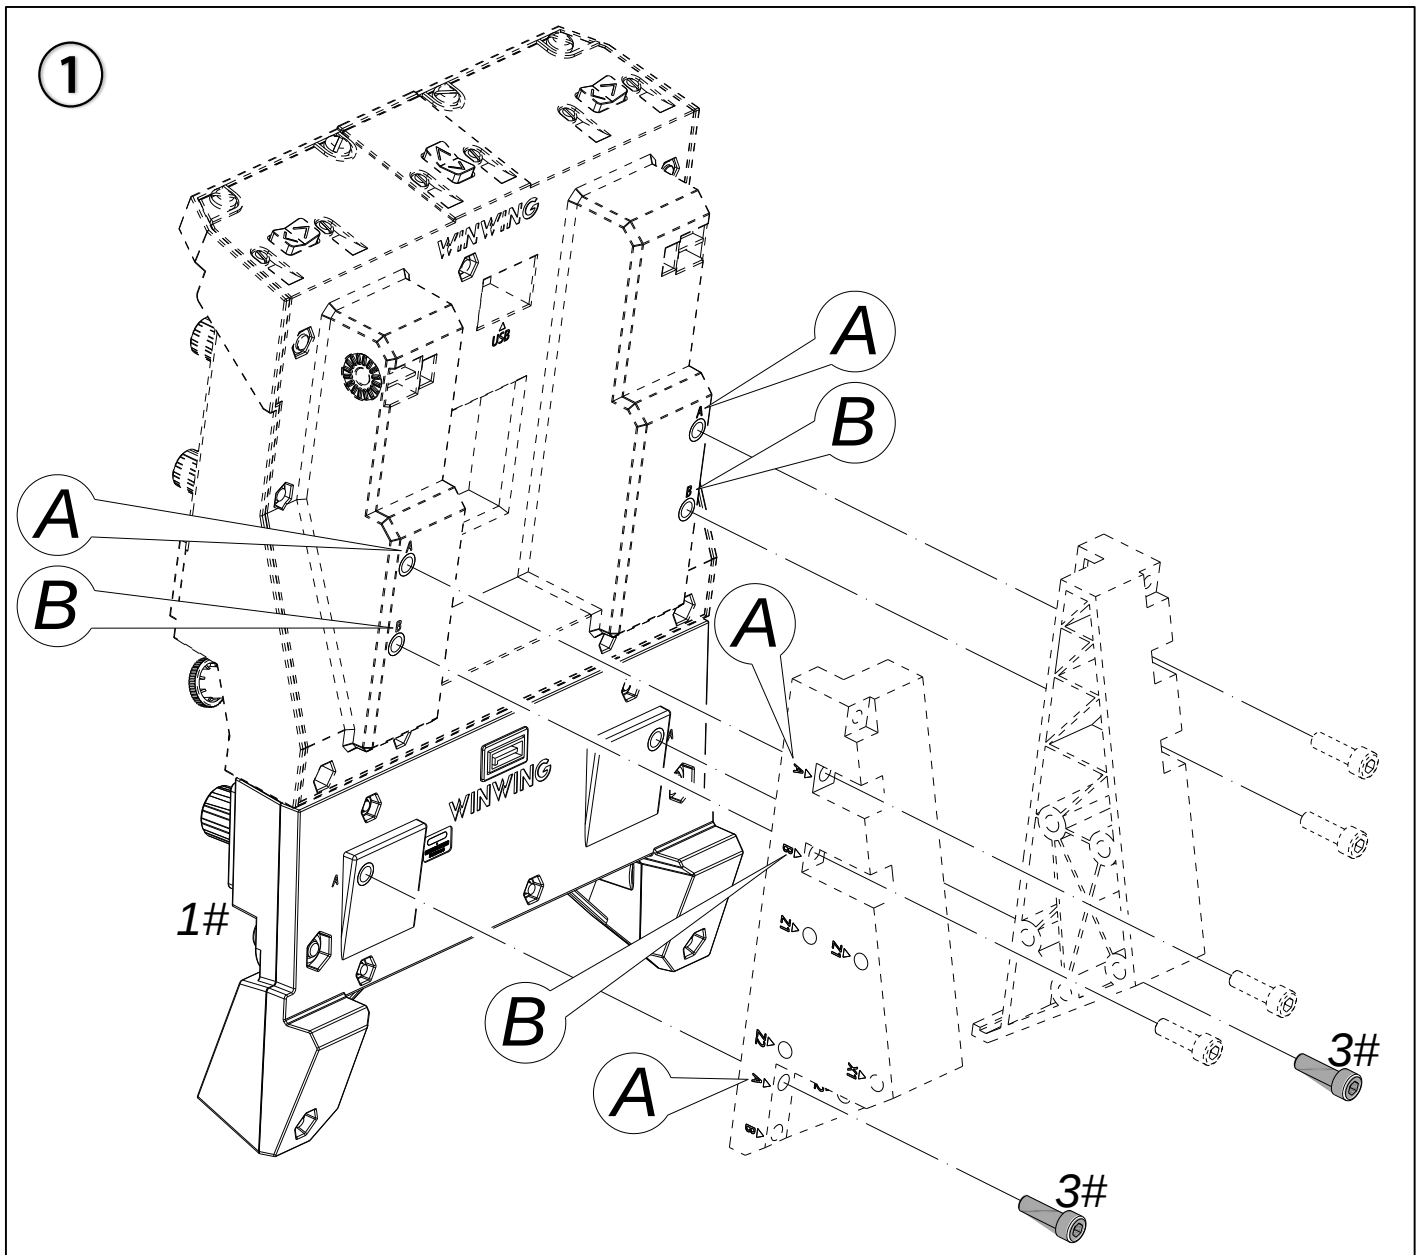

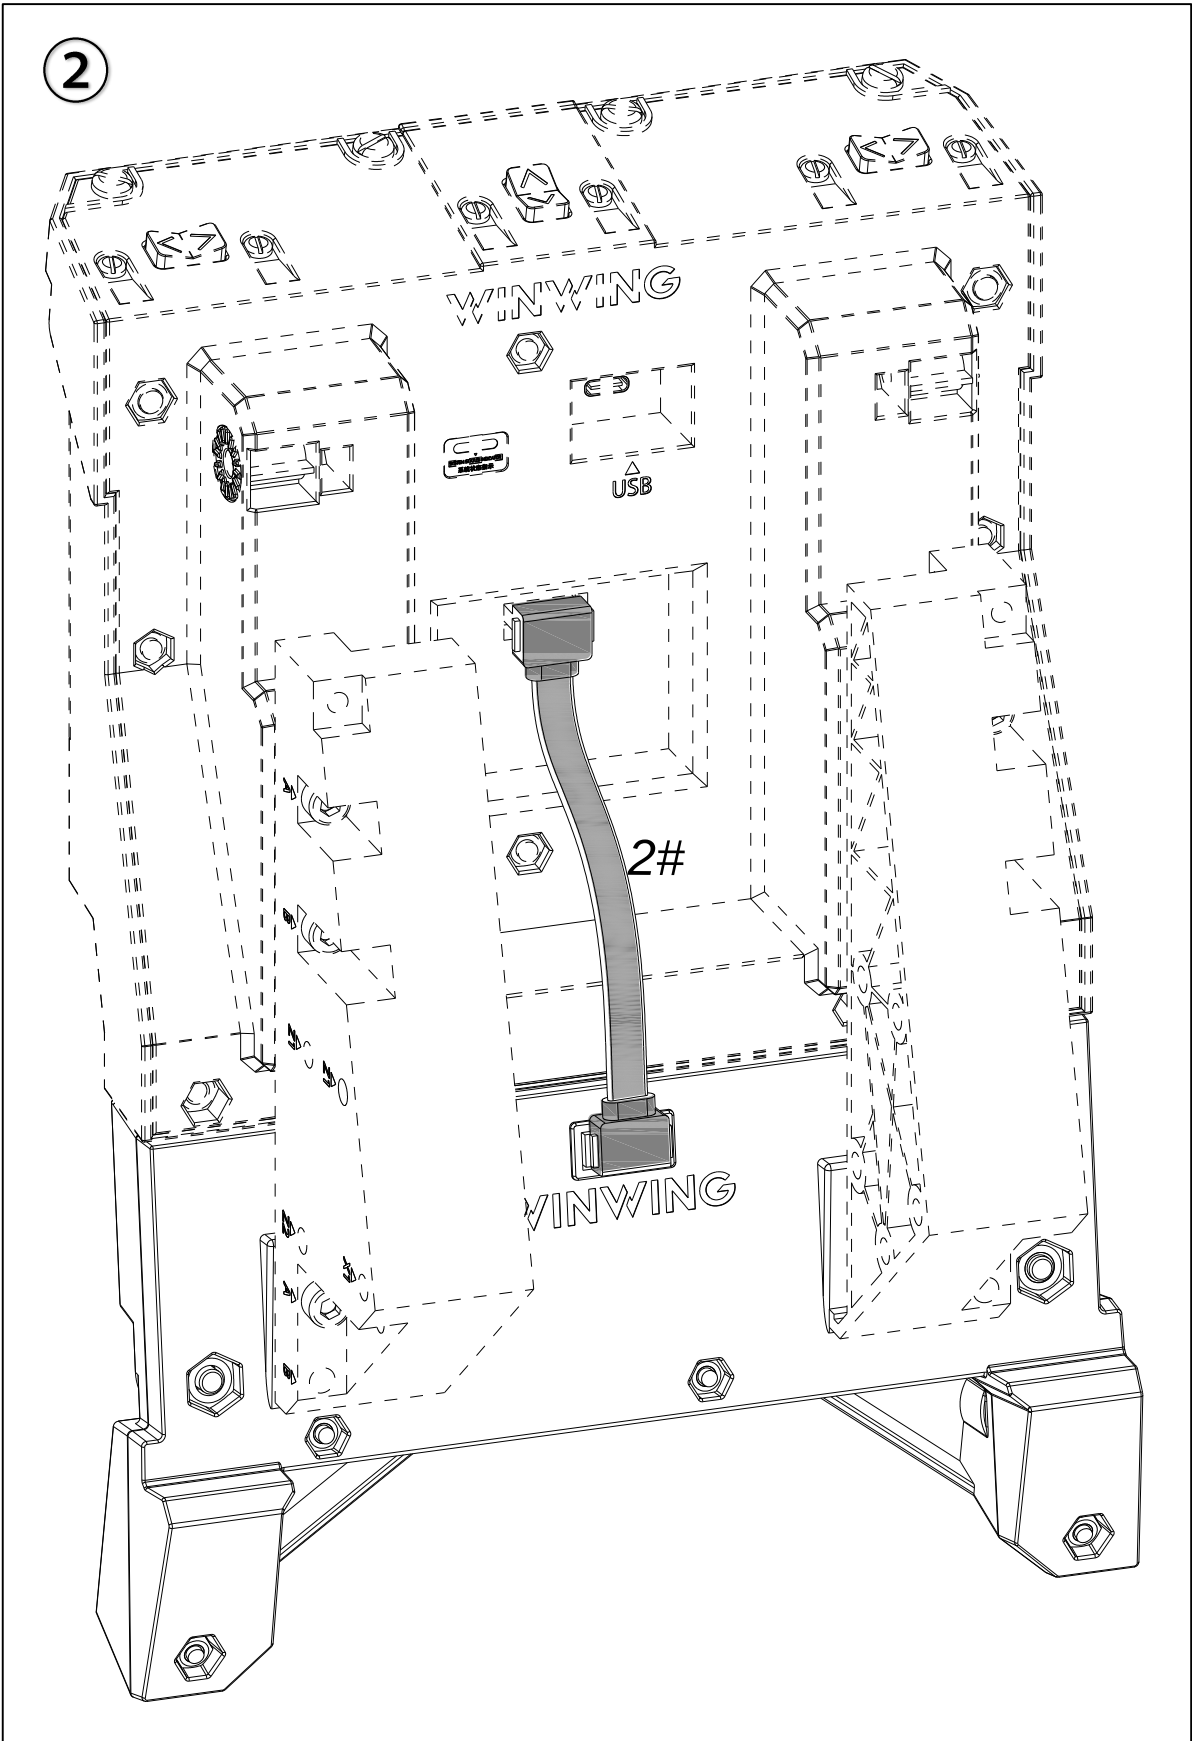

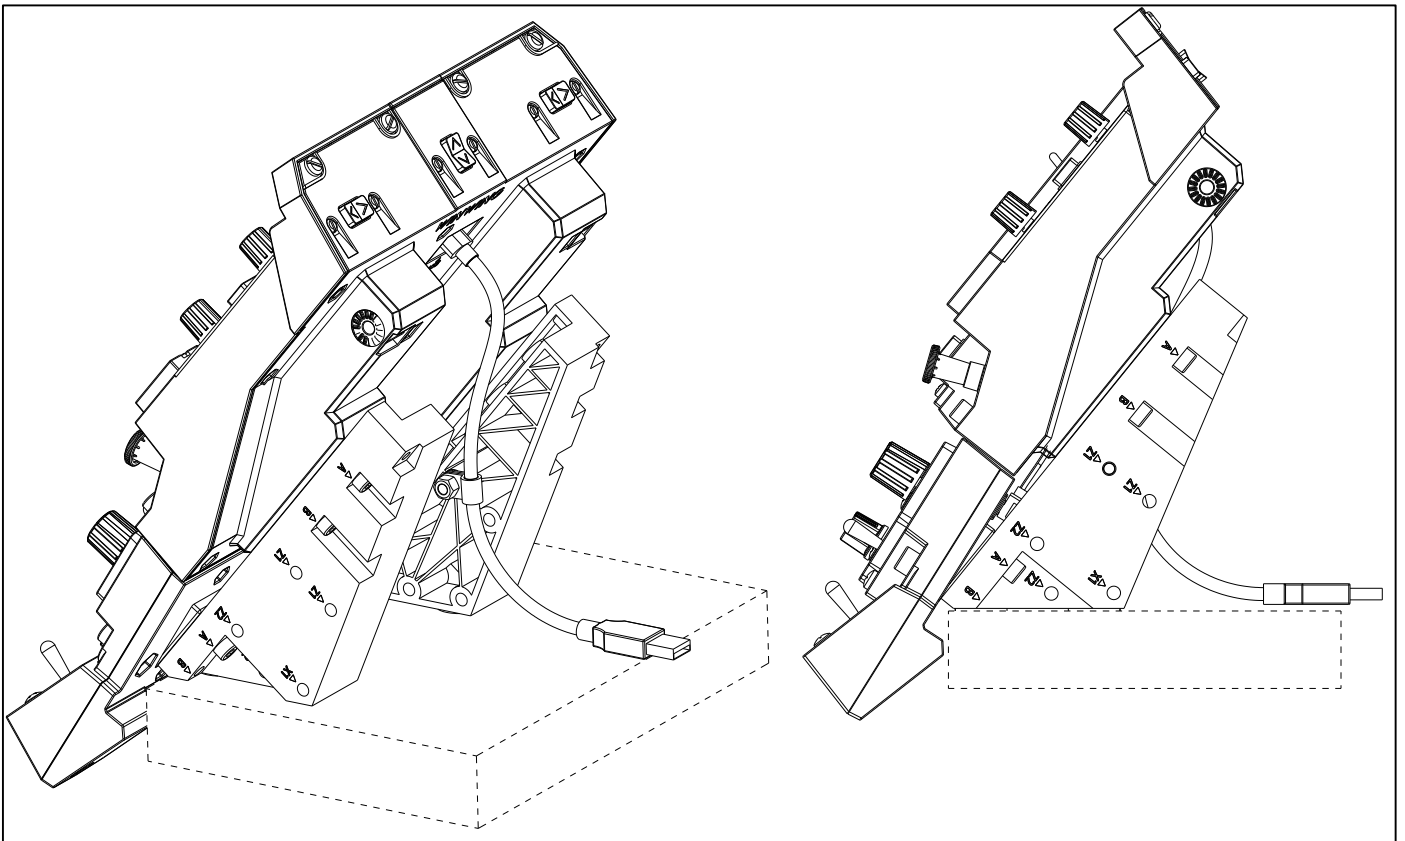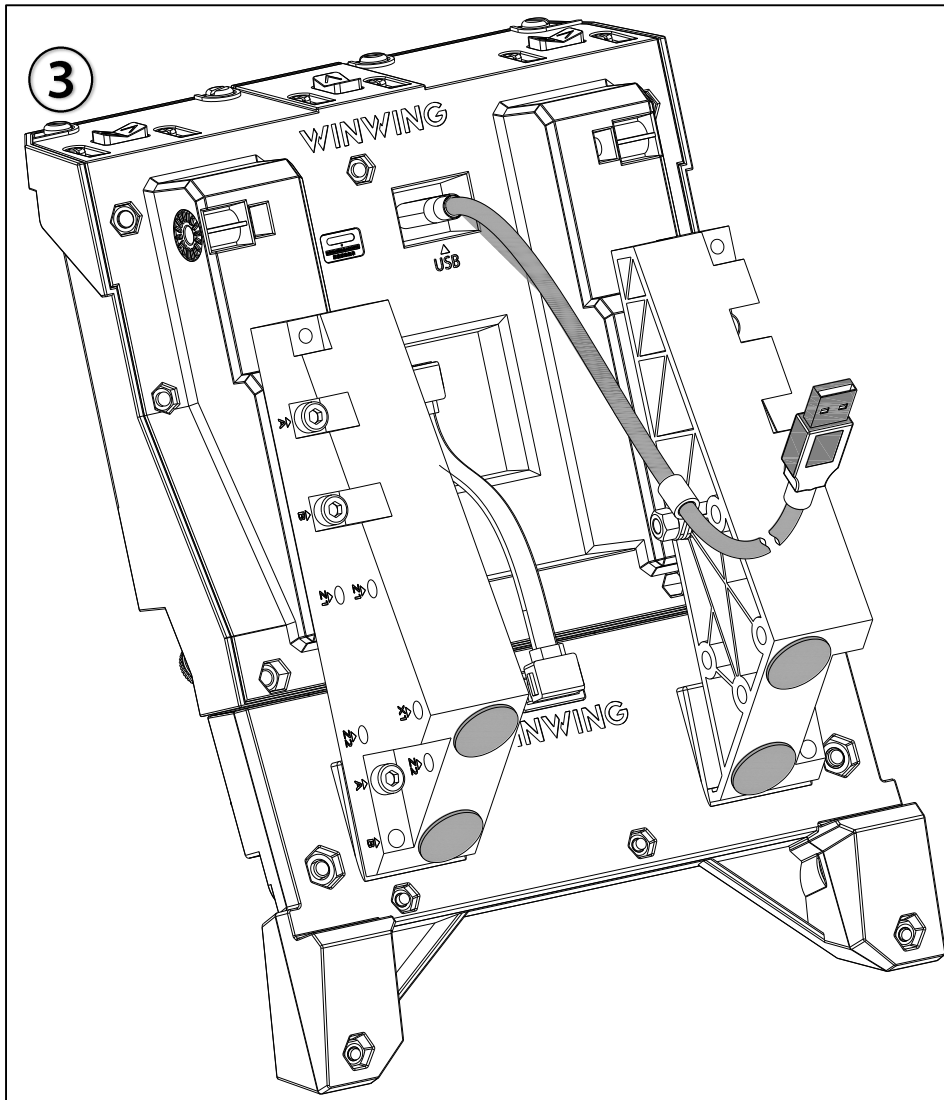

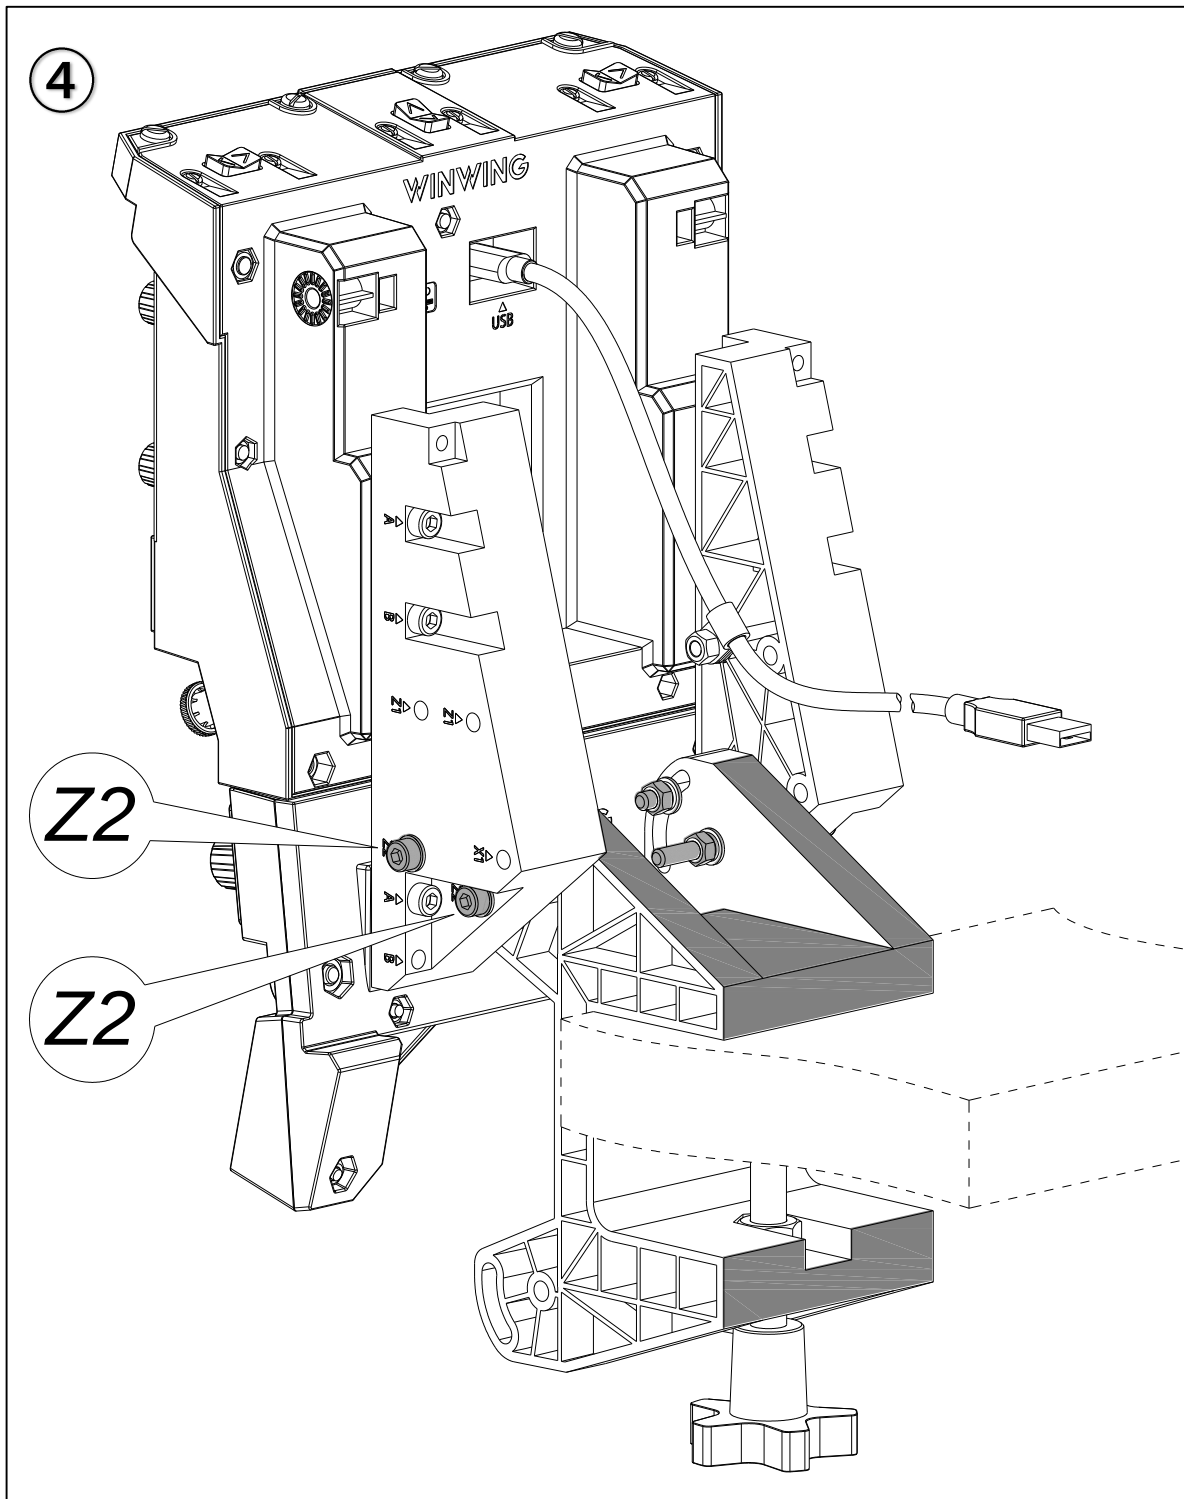

- ① Align installation holes on the holders, UFC1 and HUD1, please notice to match the signs on each device. Just tighten the screws properly, overtighten might result in damage.
- ② Insert data cables to connect HUD1 and UFC1
- ③ Adhere double size glue dots to the bottom and paste the whole set on table edge; or
- ④ Mount both HUD1 and UFC1 on the clamp holder, adjust them to a cozy initial angle and tighten the screws. * Fix them properly, overtighten would result in damages.

* This is the final version of the manual,all update will be made online.

成都翼胜科技有限责任公司

WWW.WINWING.CN

INFO@WINWING.CN

High-tech International Enterprise Zone No.19 Building,Changshengqiao Road

1111#, Pidu District, Chengdu,China 610000.