


D1


User Manual V1.4 2024.02

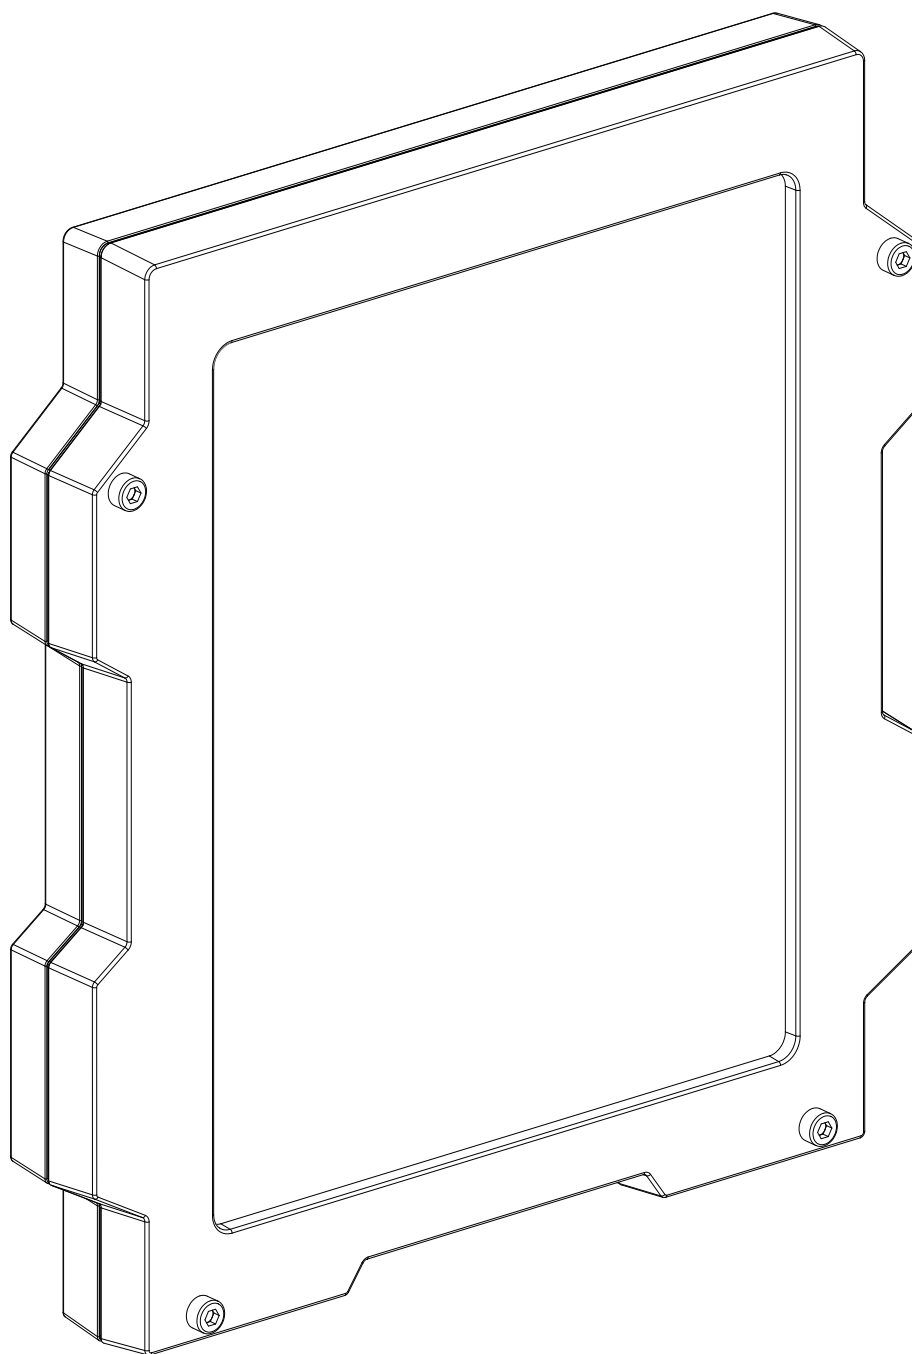

Catalogue :

Package list.....	1
1. Parameter	2
1.1. Performance parameter	2
1.2. Applicable models	2
1.3. Dimension	3
1.4. Installation dimension	4
2. Function	5
2.1. Mechanical and special functions	5
2.2. Key position	5
2.3. Adjustment method	5
3. Parts assemble and dismantle	5
4. Installation method	5
4.1. Frame installation	5
4.2. Game seat installation	6
4.3. Cockpit installation	6
4.4. Connection	6


Package list

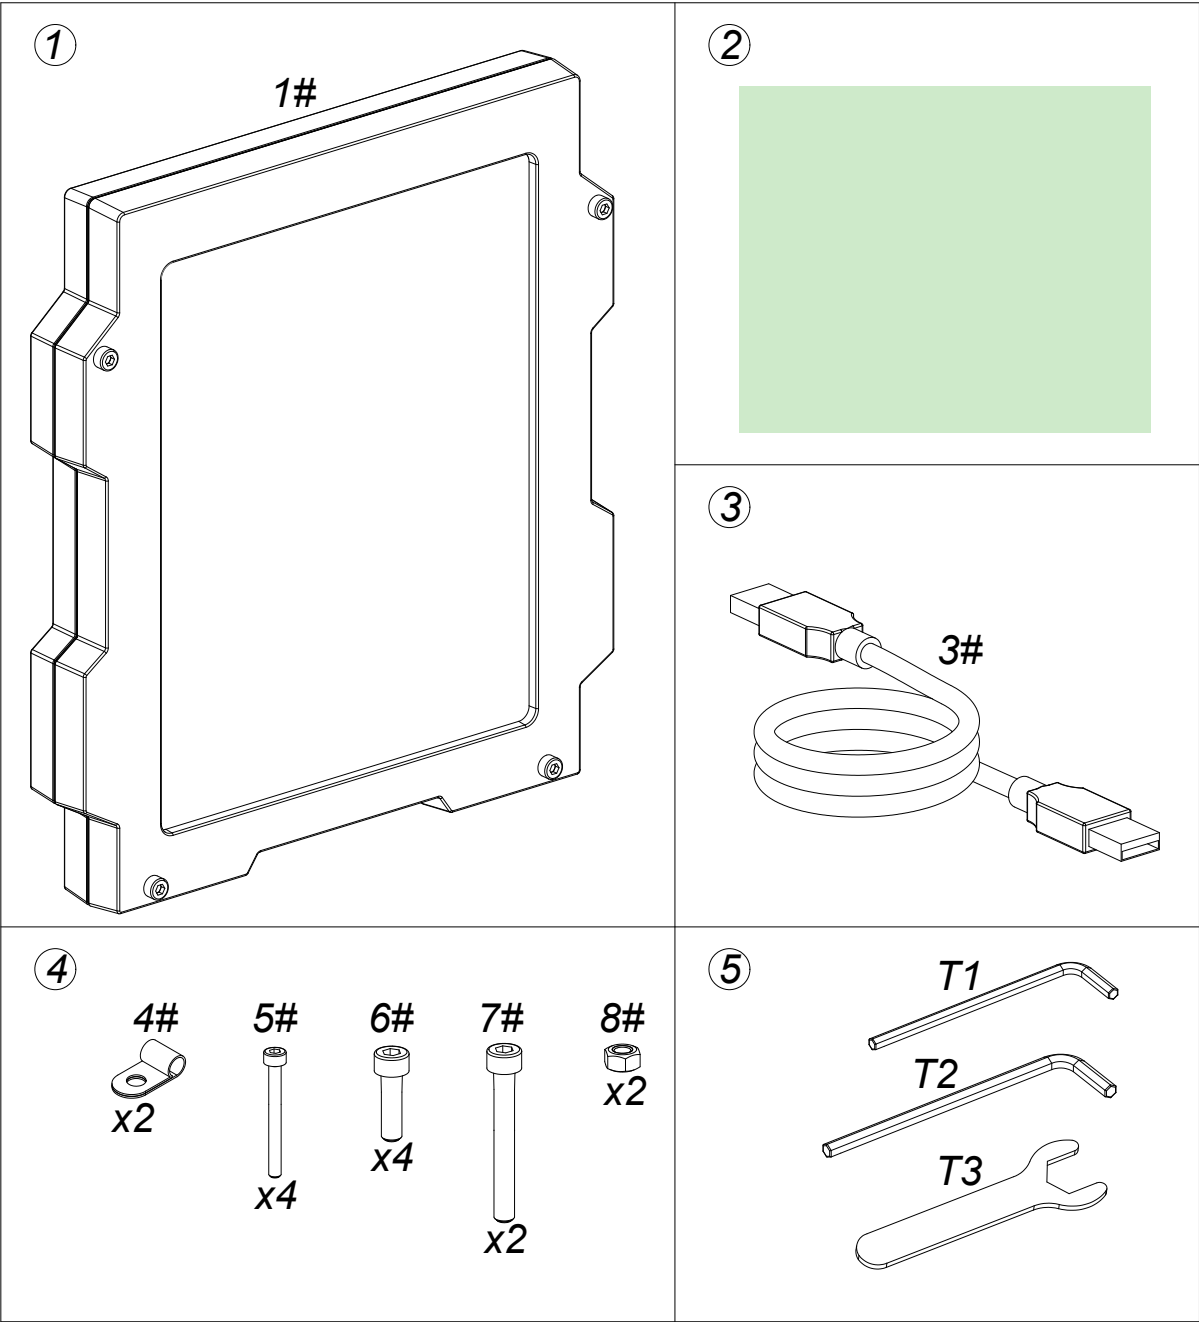

①	D1 (1#)	1	
②	—————	—	
③	Data cable (3#)	1	
④	Accessory package (4#~8#)	1	
4#	UC-0.5	5#	Hexagon Socket Head Cap Screw M3*30
6#	Hexagon Socket Head Cap Screw M5*18	7#	Hexagon Socket Head Cap Screw M5*40
8#	Hexagon Nut M5		
⑤	Tool package (T1、T2、T3)	1	

1. Parameter

1.1. Performance parameter

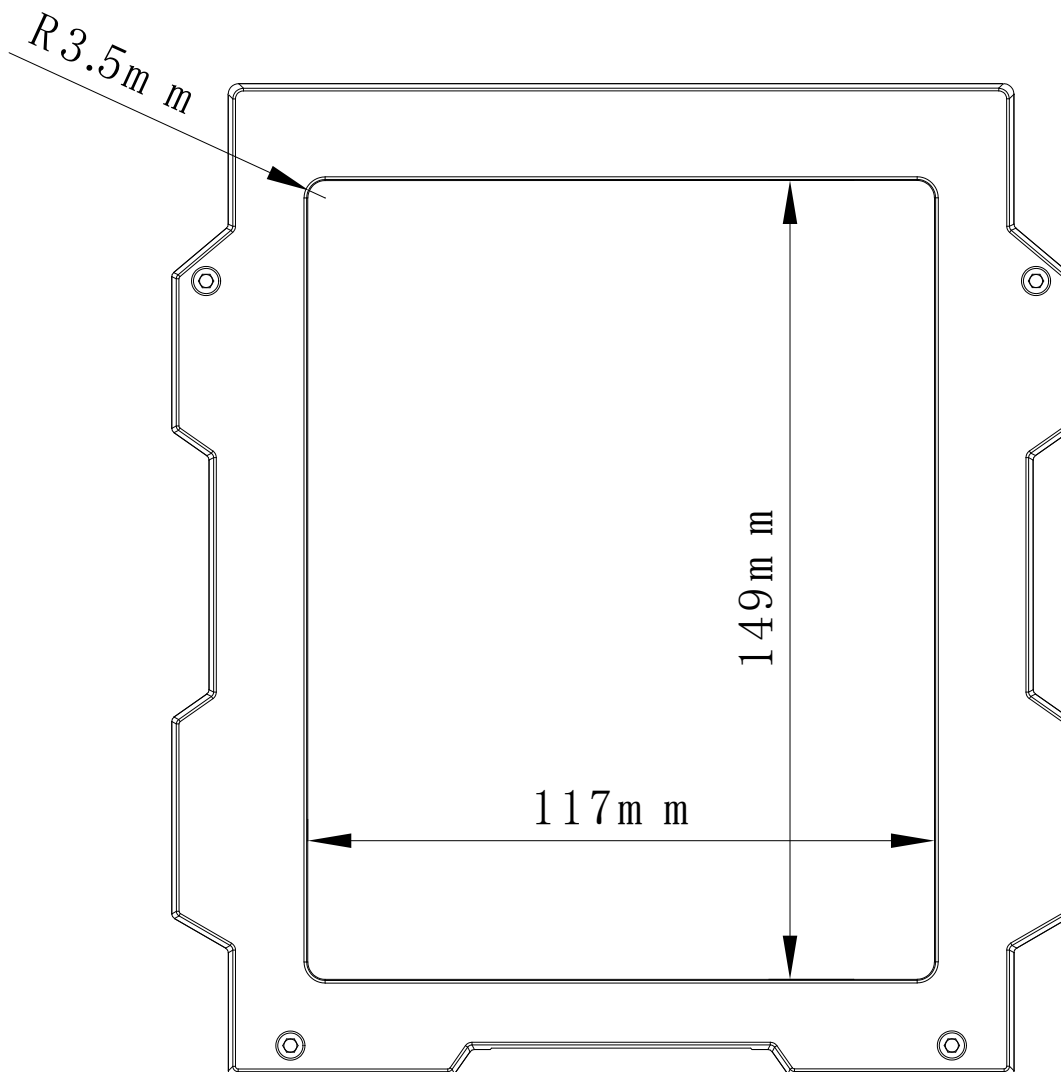


The product display area measures 117mm in width and 149mm in height;
The screen resolution is 1024*3 (RGB) *768. Please note that this is the screen resolution, not the display area resolution.

1.2. Applicable models


Applicable to MFD1.

1.3. Dimension

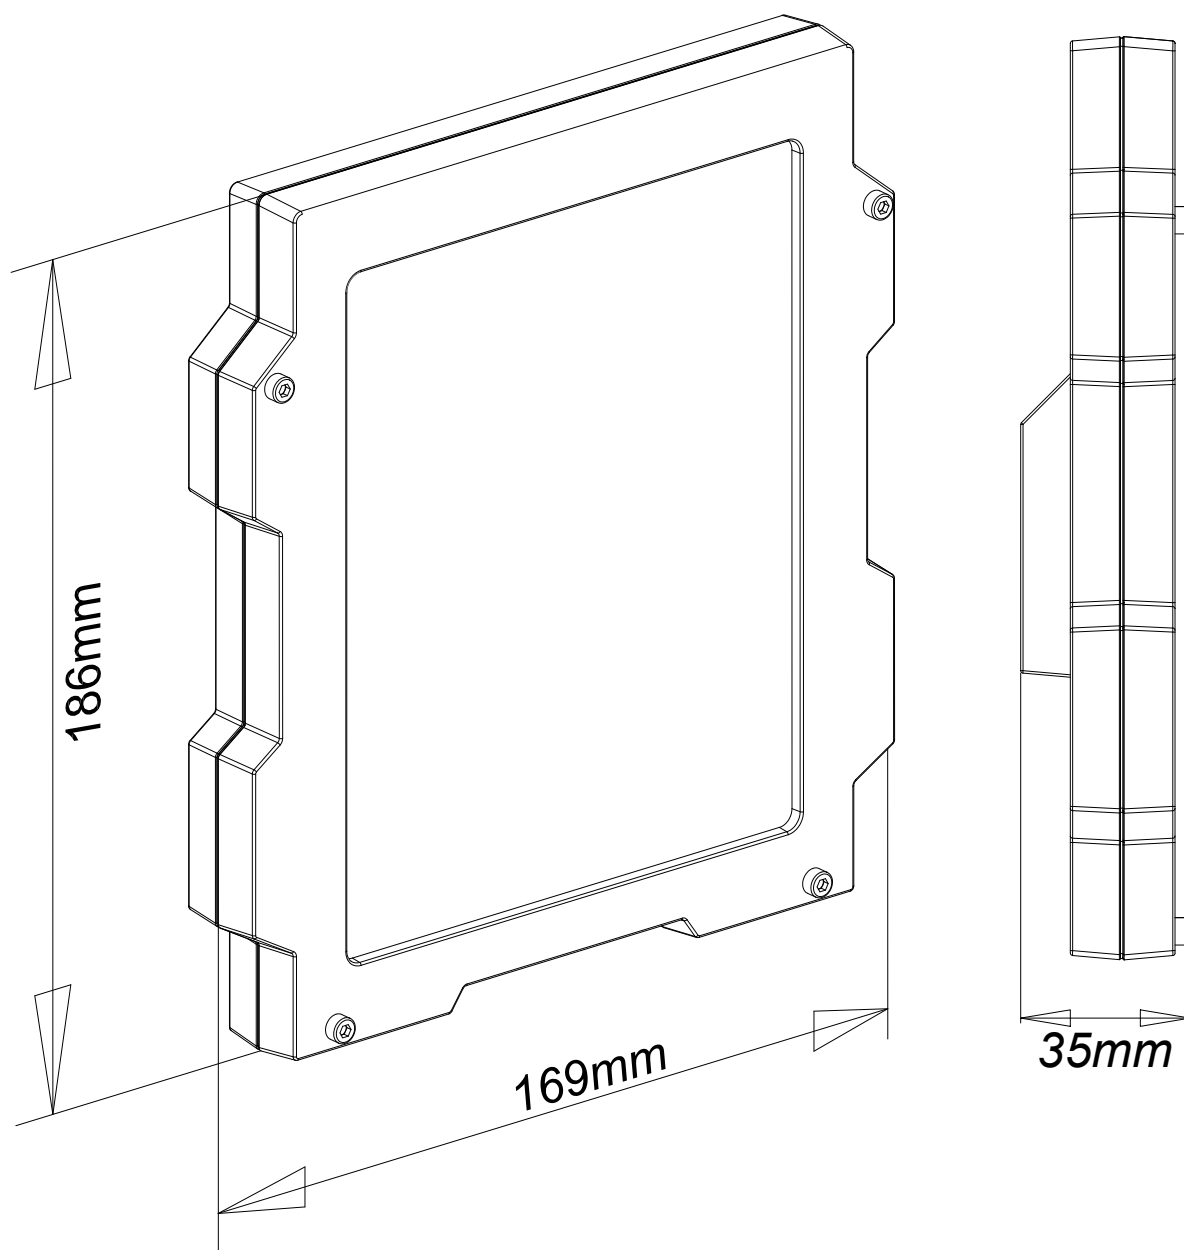

Length*width*height: 170mm*107*95mm; Mass: 0.97kg=2.13lb.

1.4. Installation dimension

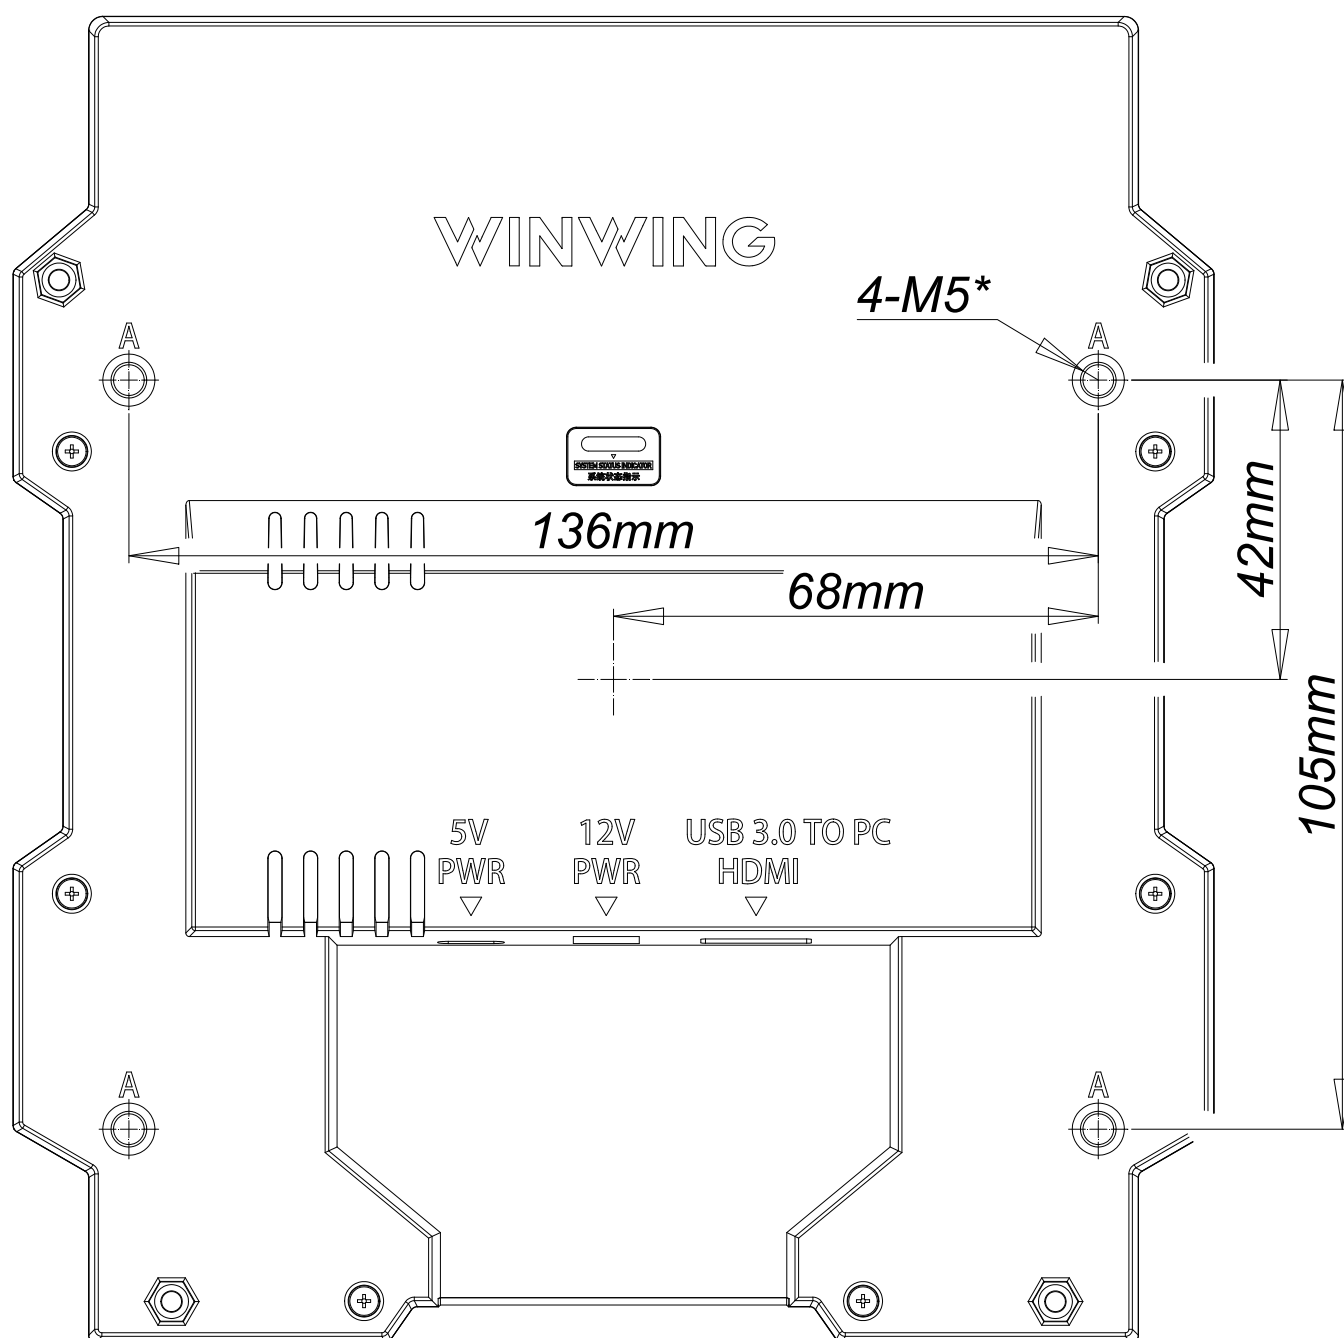


* 4-M5 Maximum depth: 5mm.

2. Function

2.1. Mechanical and special functions

\

2.2. Key position

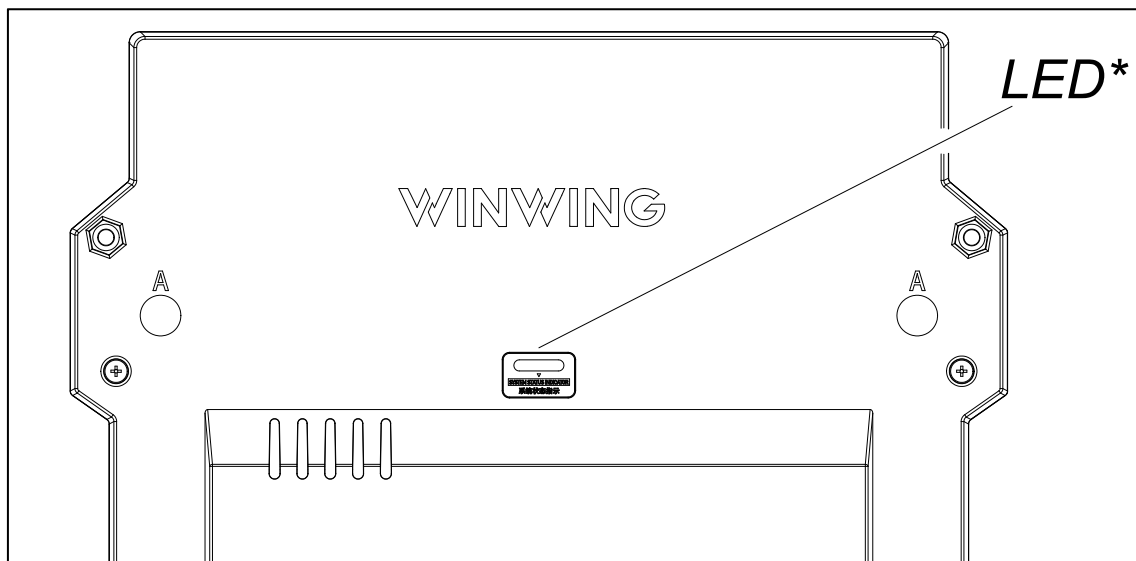

*LED status: Red——Power on, Yellow——USB2.0 communication, Purple——USB3.0 communication.

2.3. Adjustment method

\

3. Parts assemble and dismantle

\

4. Installation method

4.1. Frame installation

\

4.2. Game seat installation


\

4.3. Cockpit installation

\


4.4. Connection


1 Connect with MFD1


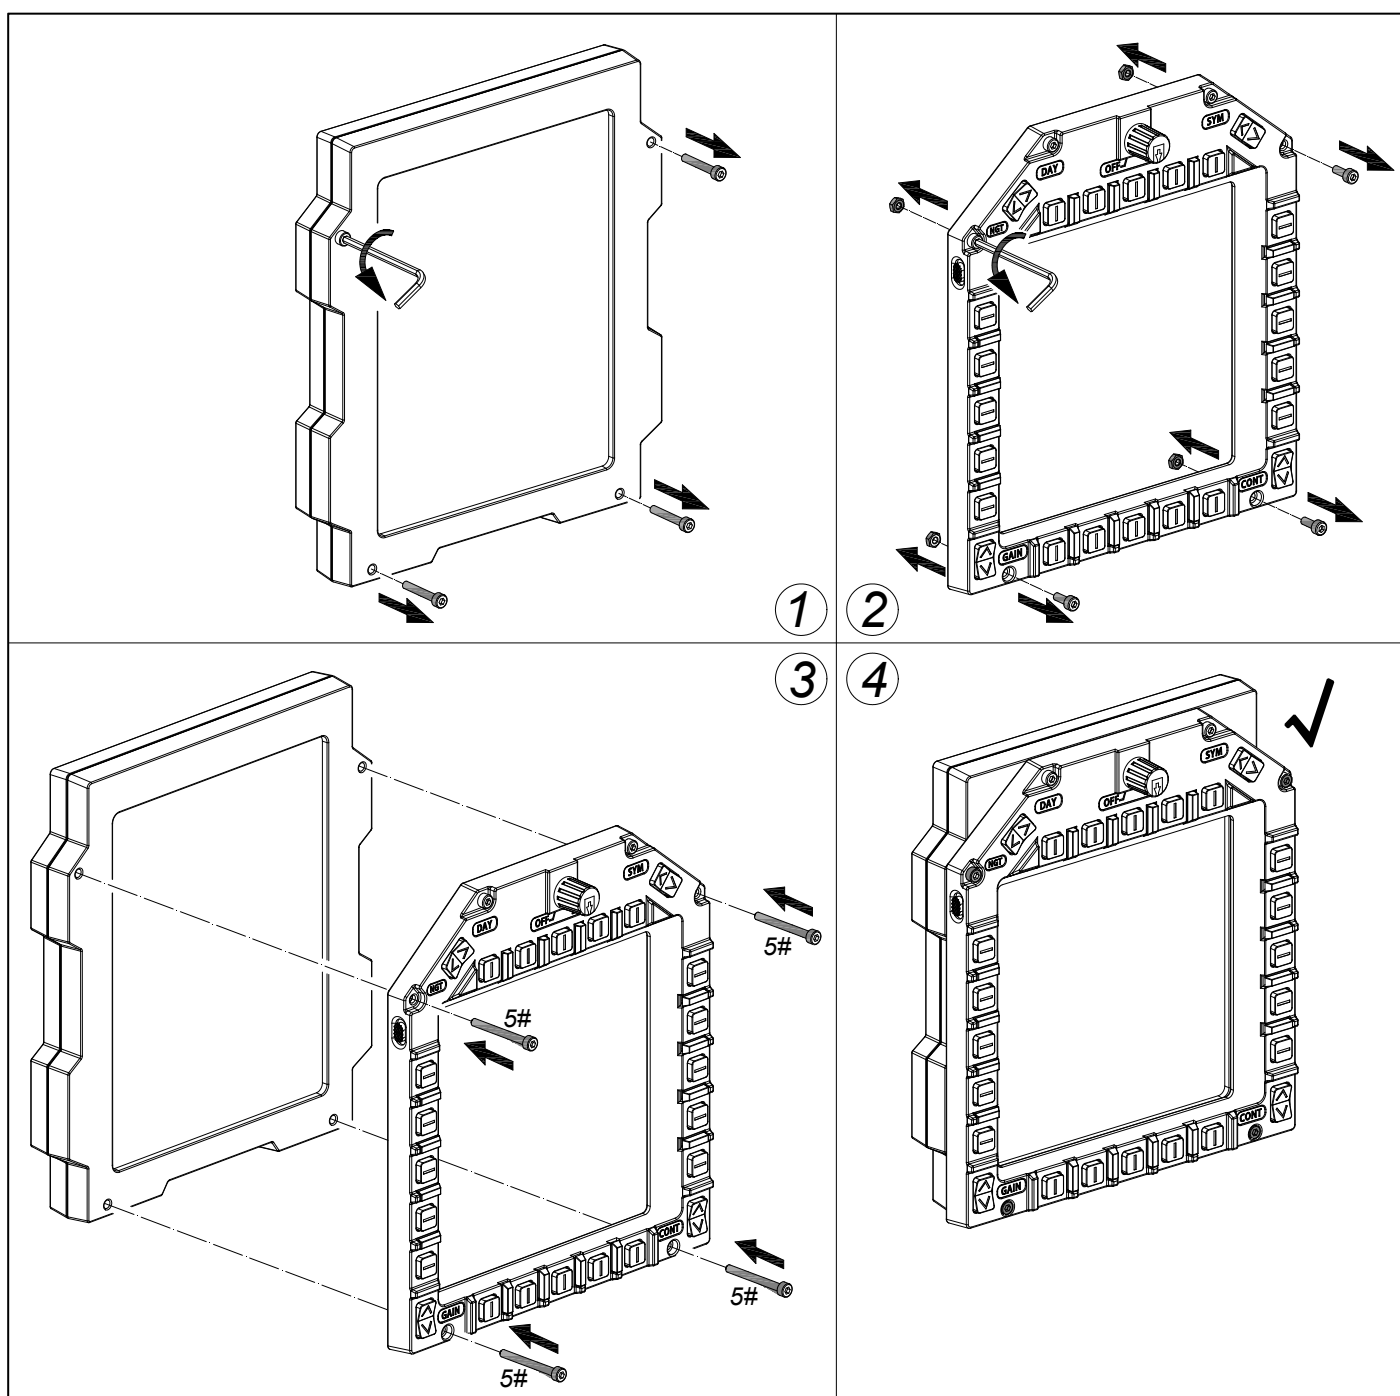



- ① Remove 4 screws on the D1 (1#)front.(Remain the Nuts)
- ② Remove four screws on the MFD1 front. (Take down the nuts);
- ③ Attach MFD1 on the D1 front side and lock them with 5# screws.(Just fix them correctly,do not overtighten).

2 Holder attachment (51 degrees incline on table top)

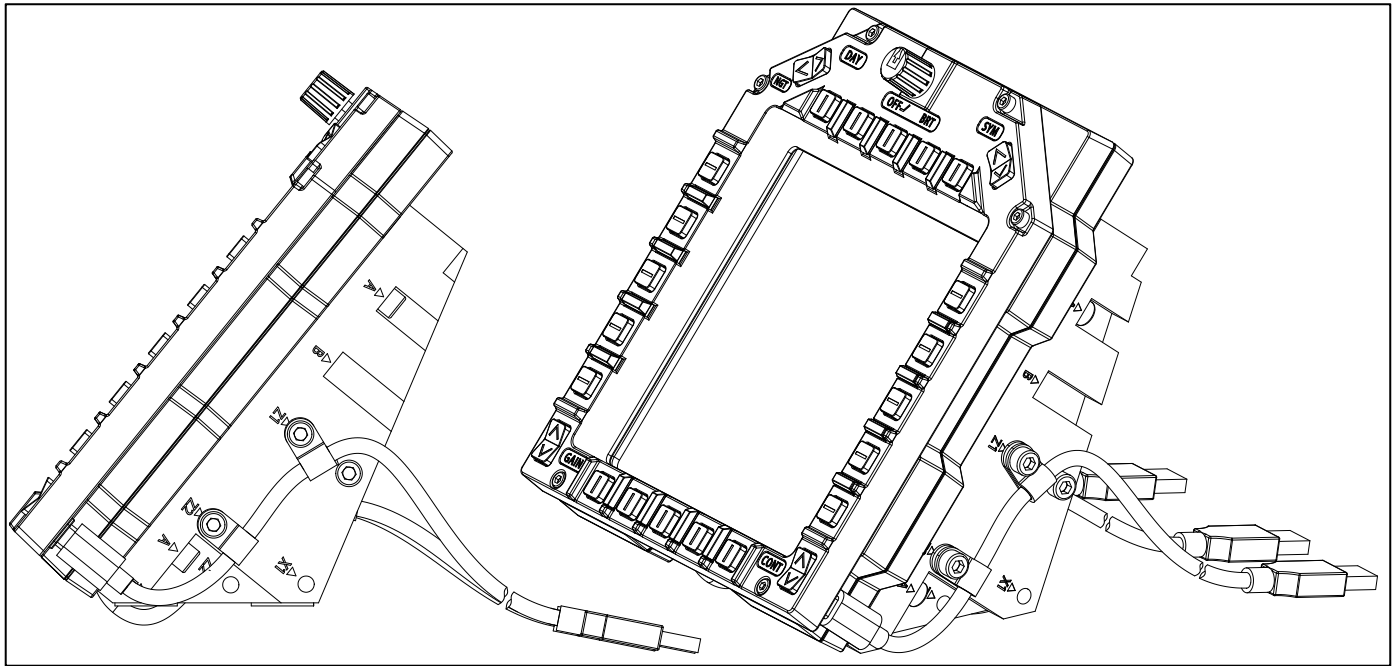


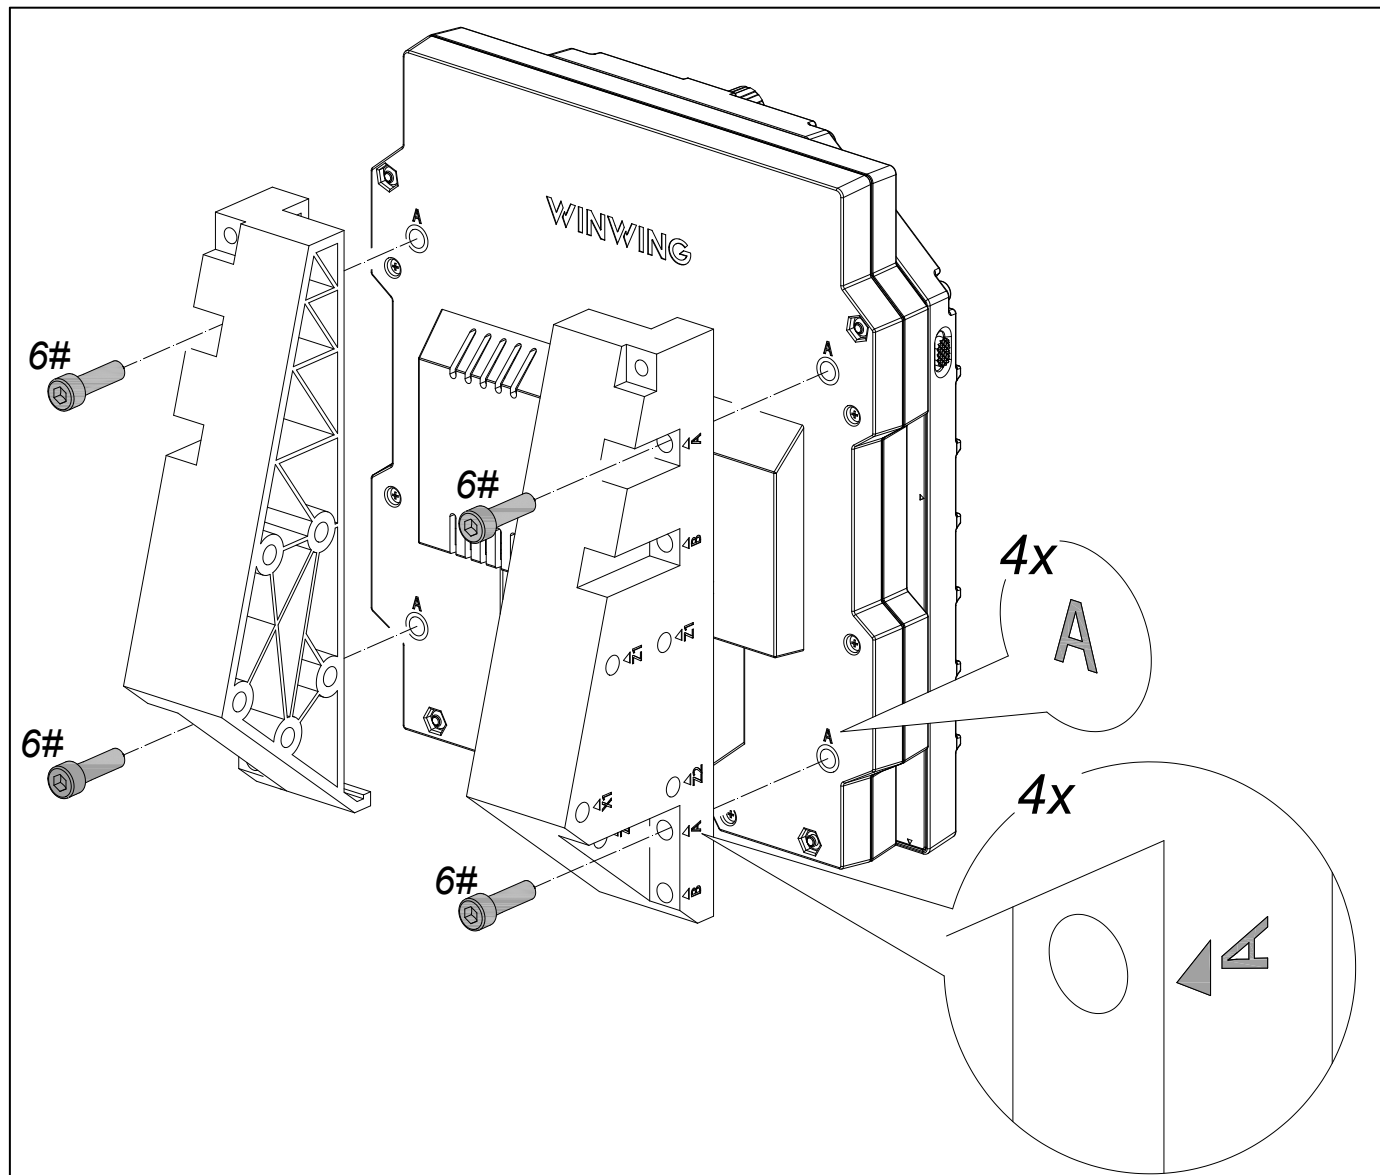


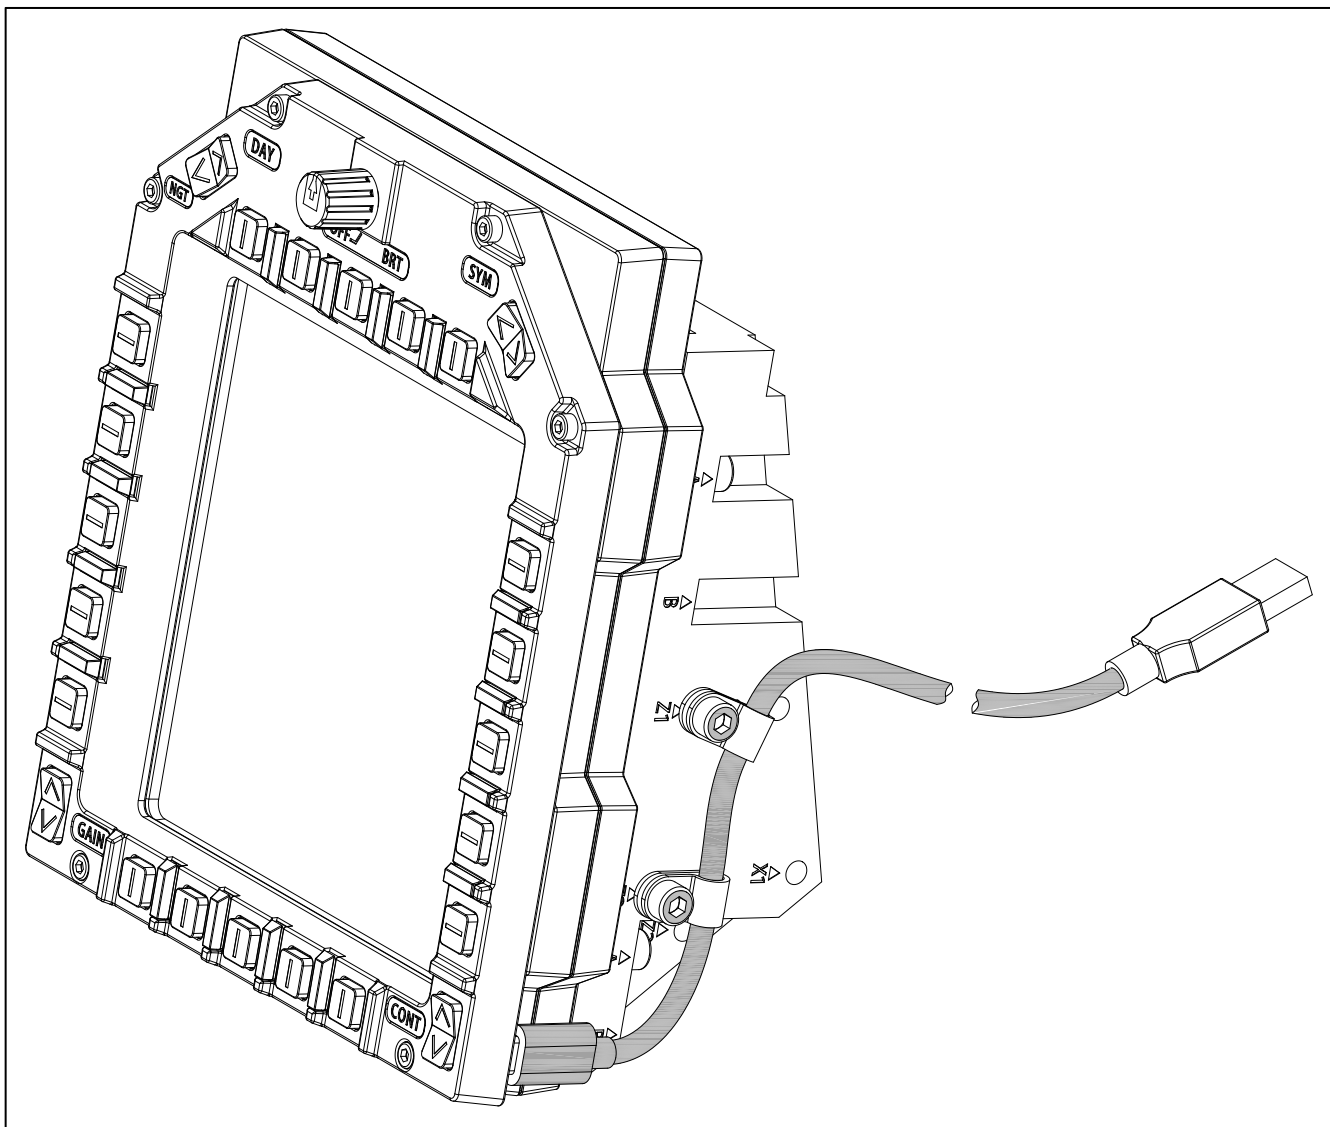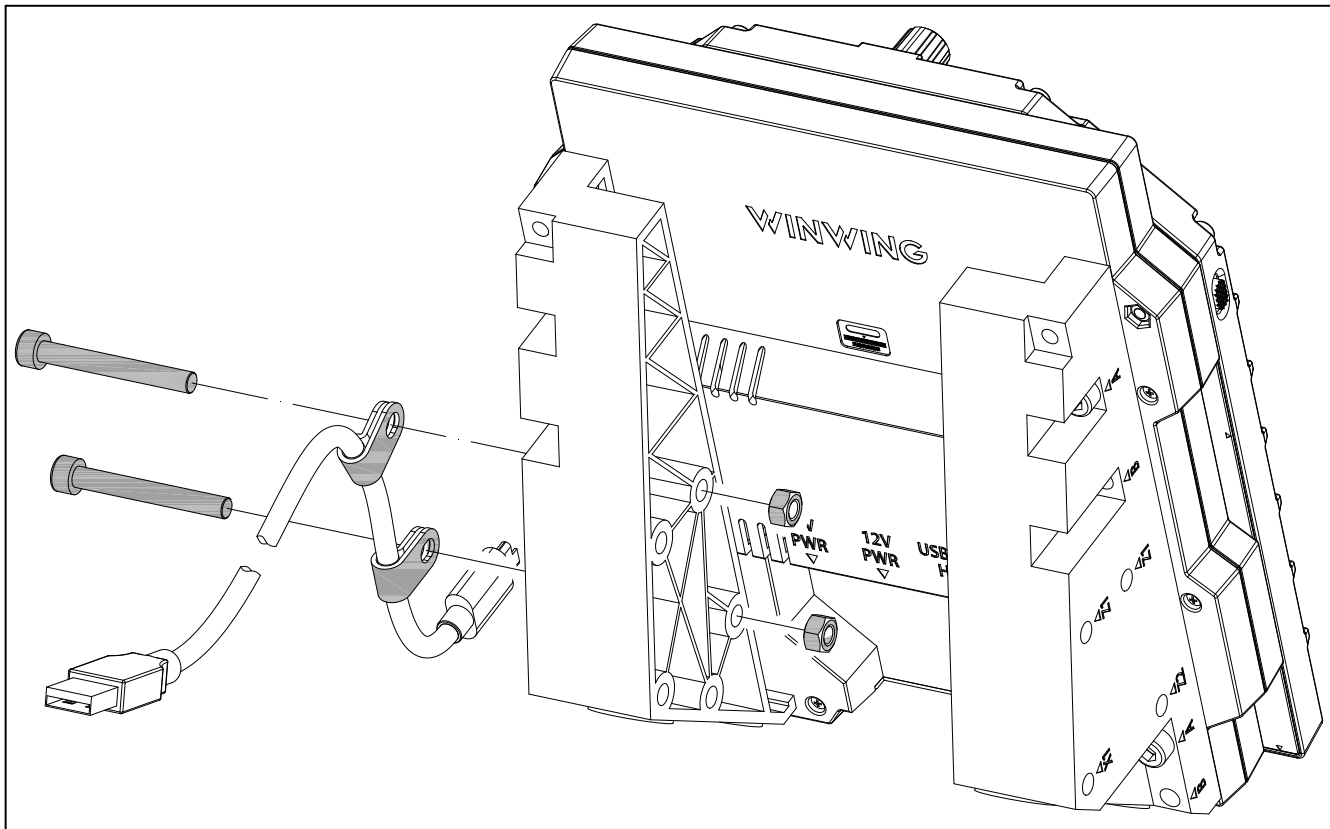

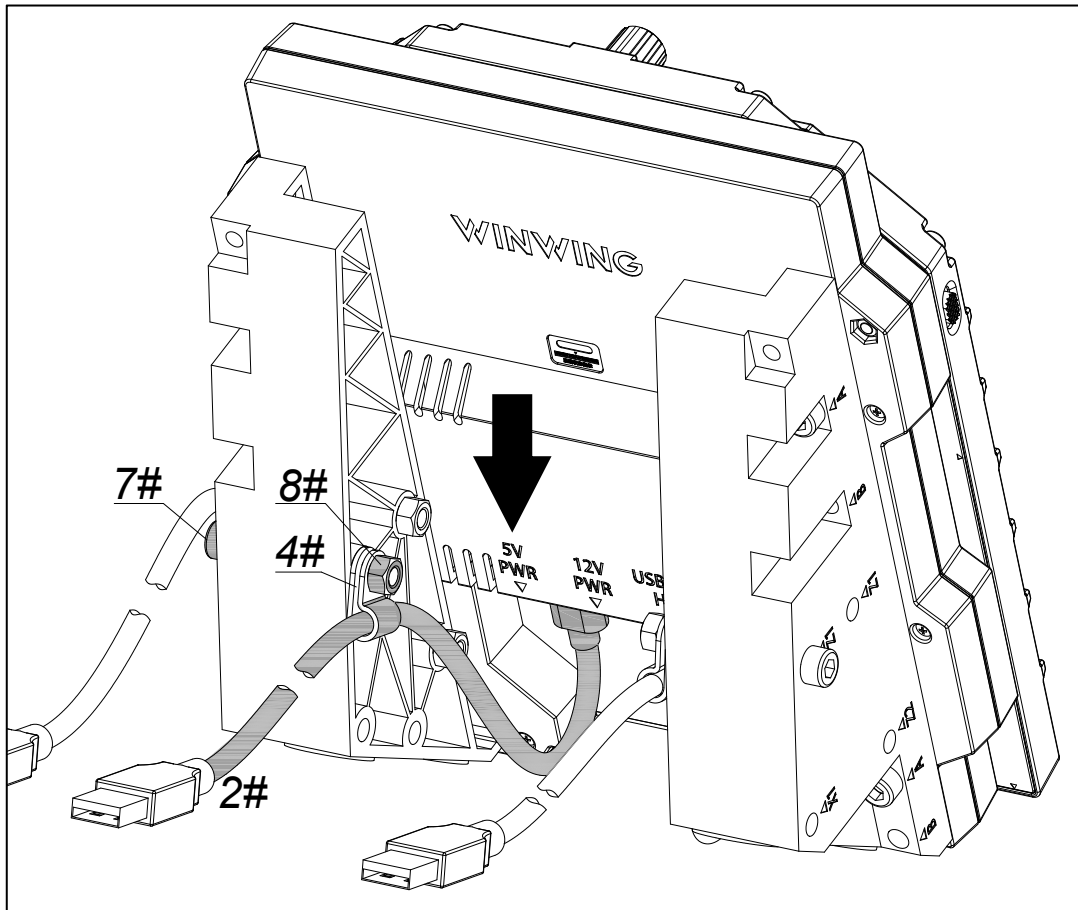



*Please plug in the 2# cable (not provided) to the “5V PWR” socket (power supply only) to supply a 5V power when the device is failed to be identified.


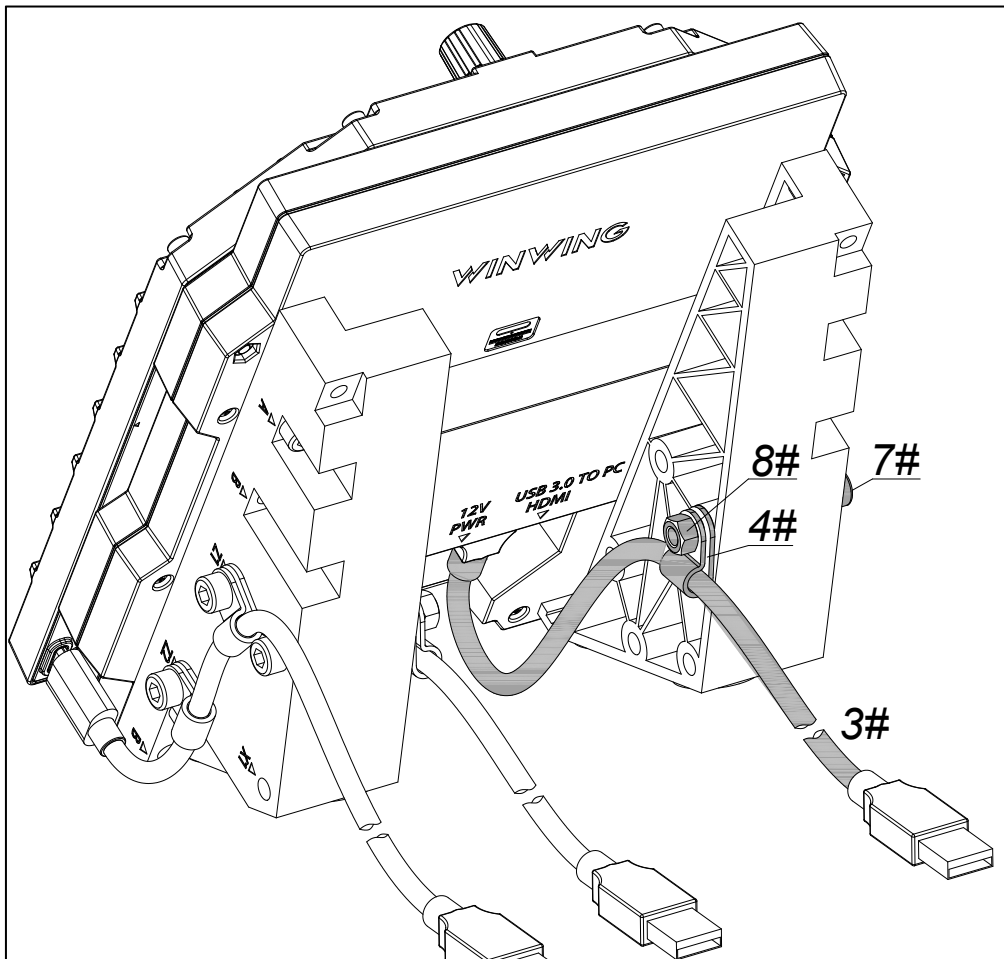


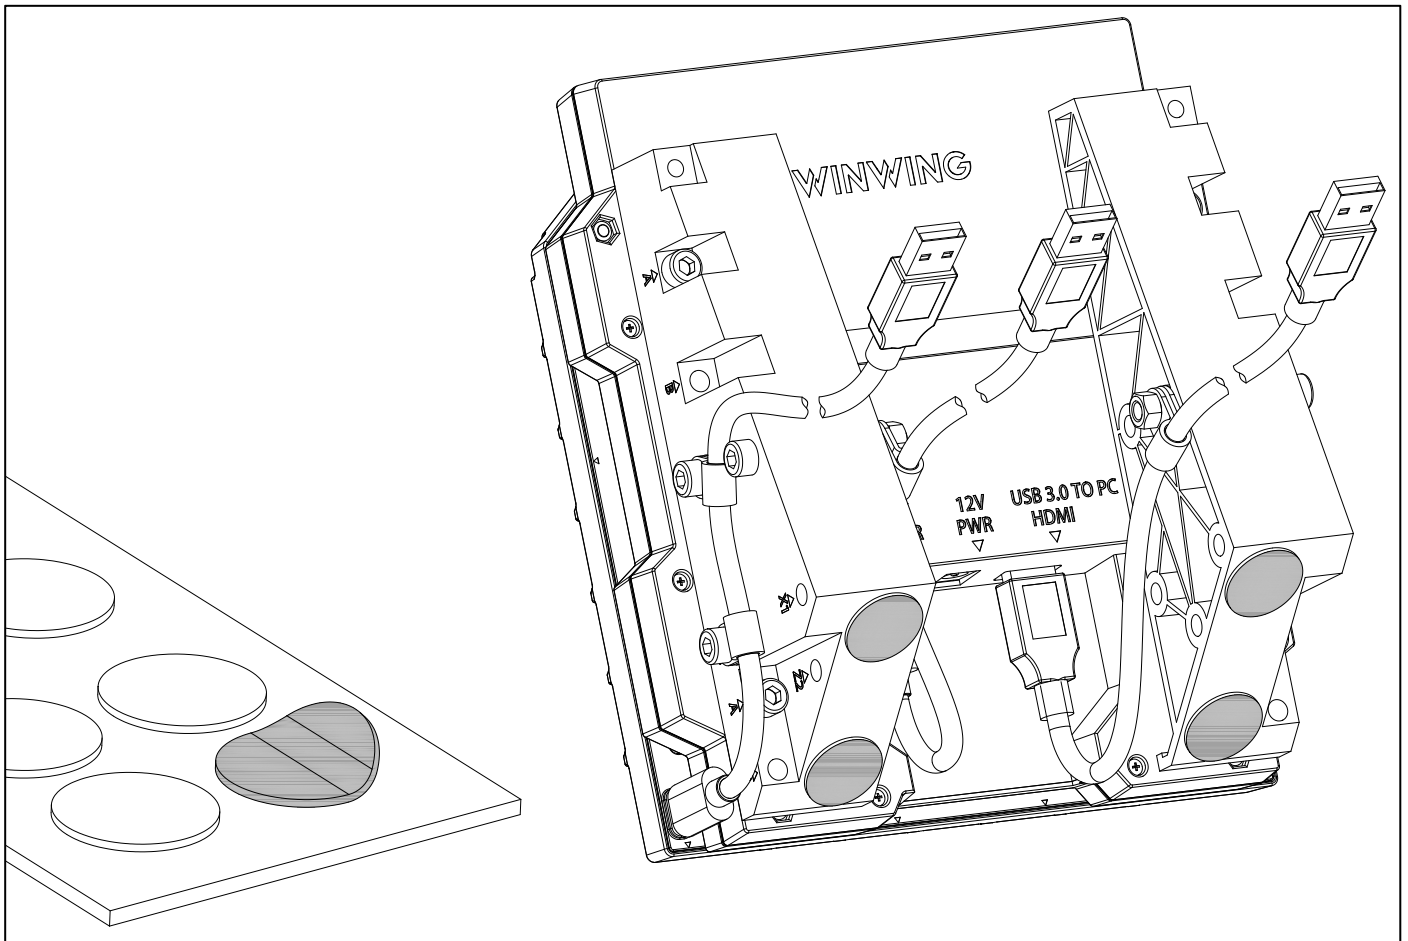


- ① Place the holders in the position shown in the diagram, put the screws through Hole A on the holder and turn it in the Hole A on D1 rear plate. Fix them correctly, don't overtighten;
- ② Wring, all holes unoccupied are available for wiring, please refer to the diagram;
- ③ Paste double sized glue dots on each side of the holders (as close to the edge as possible), then place and fix the panel on the table.

3 Holder installation (16 degrees incline on table top)

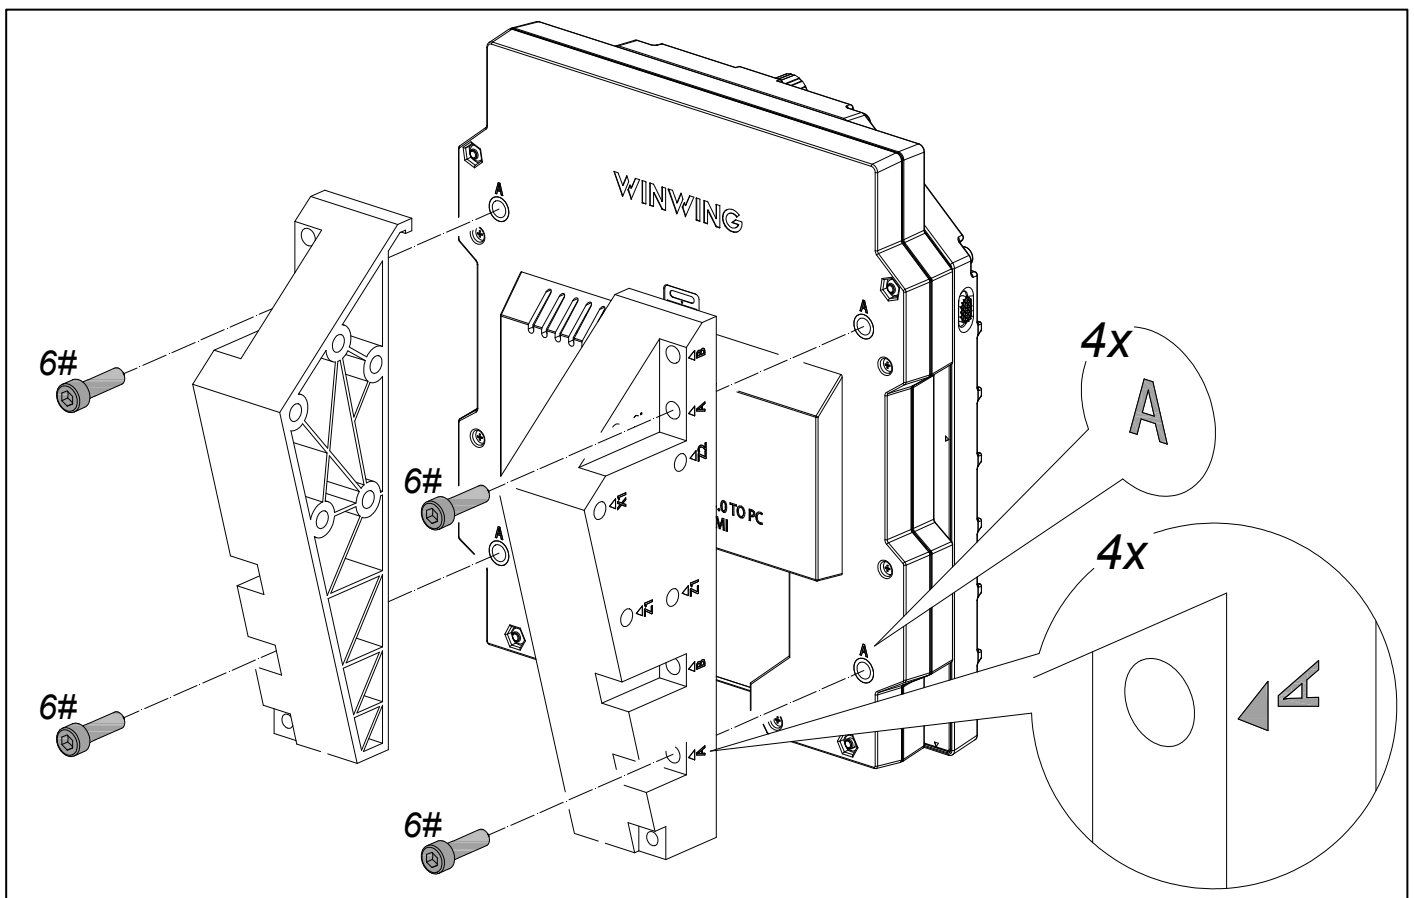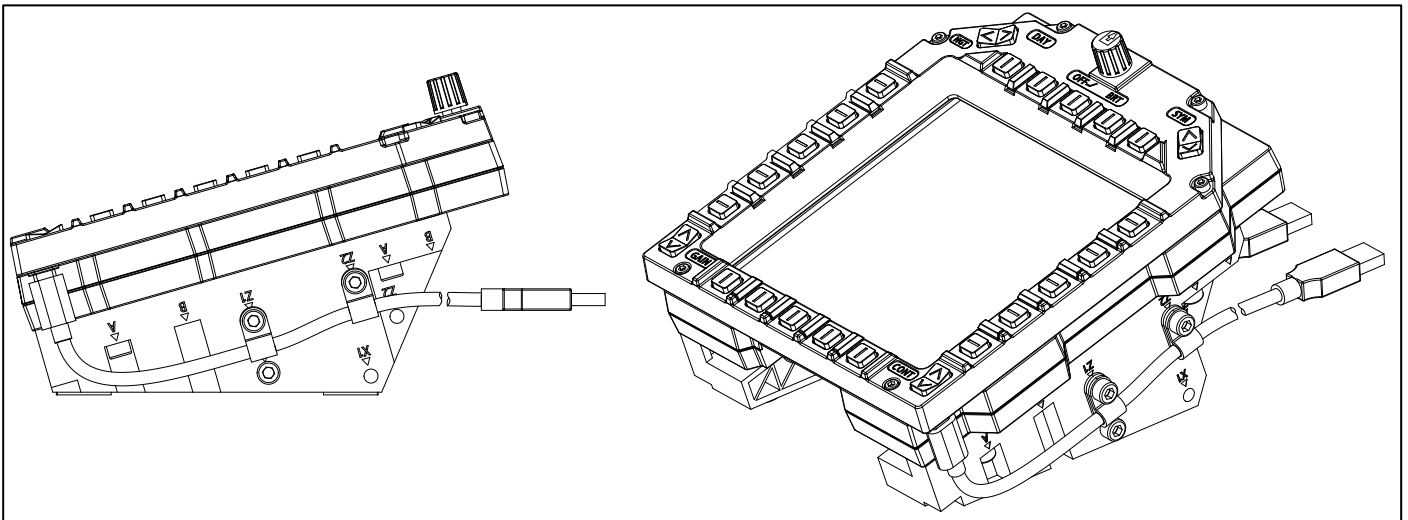

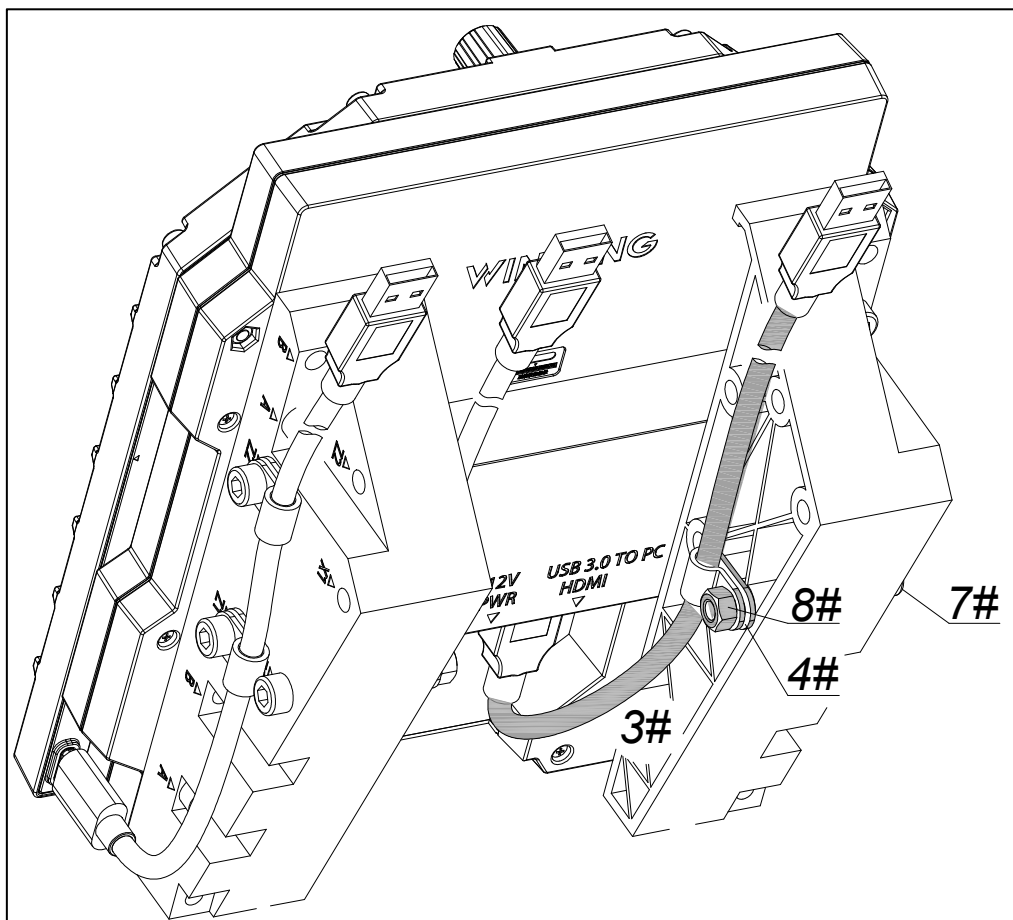
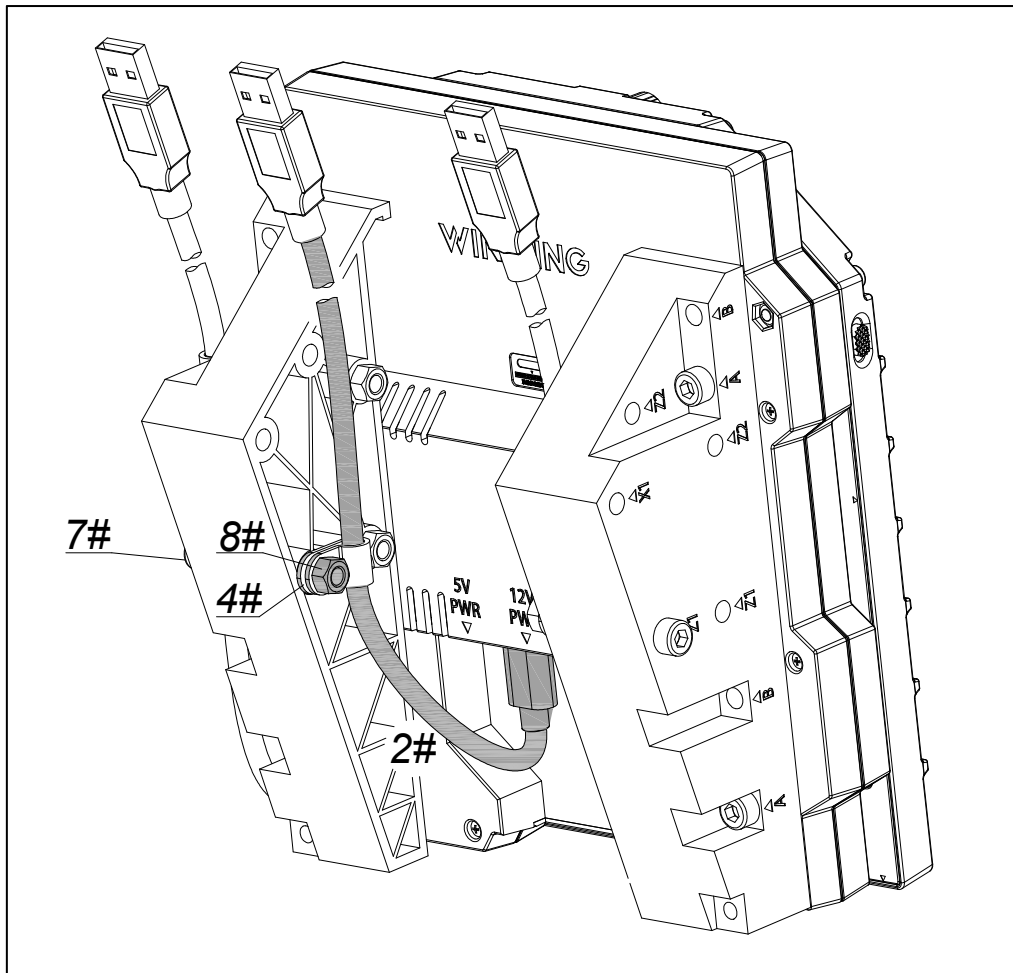


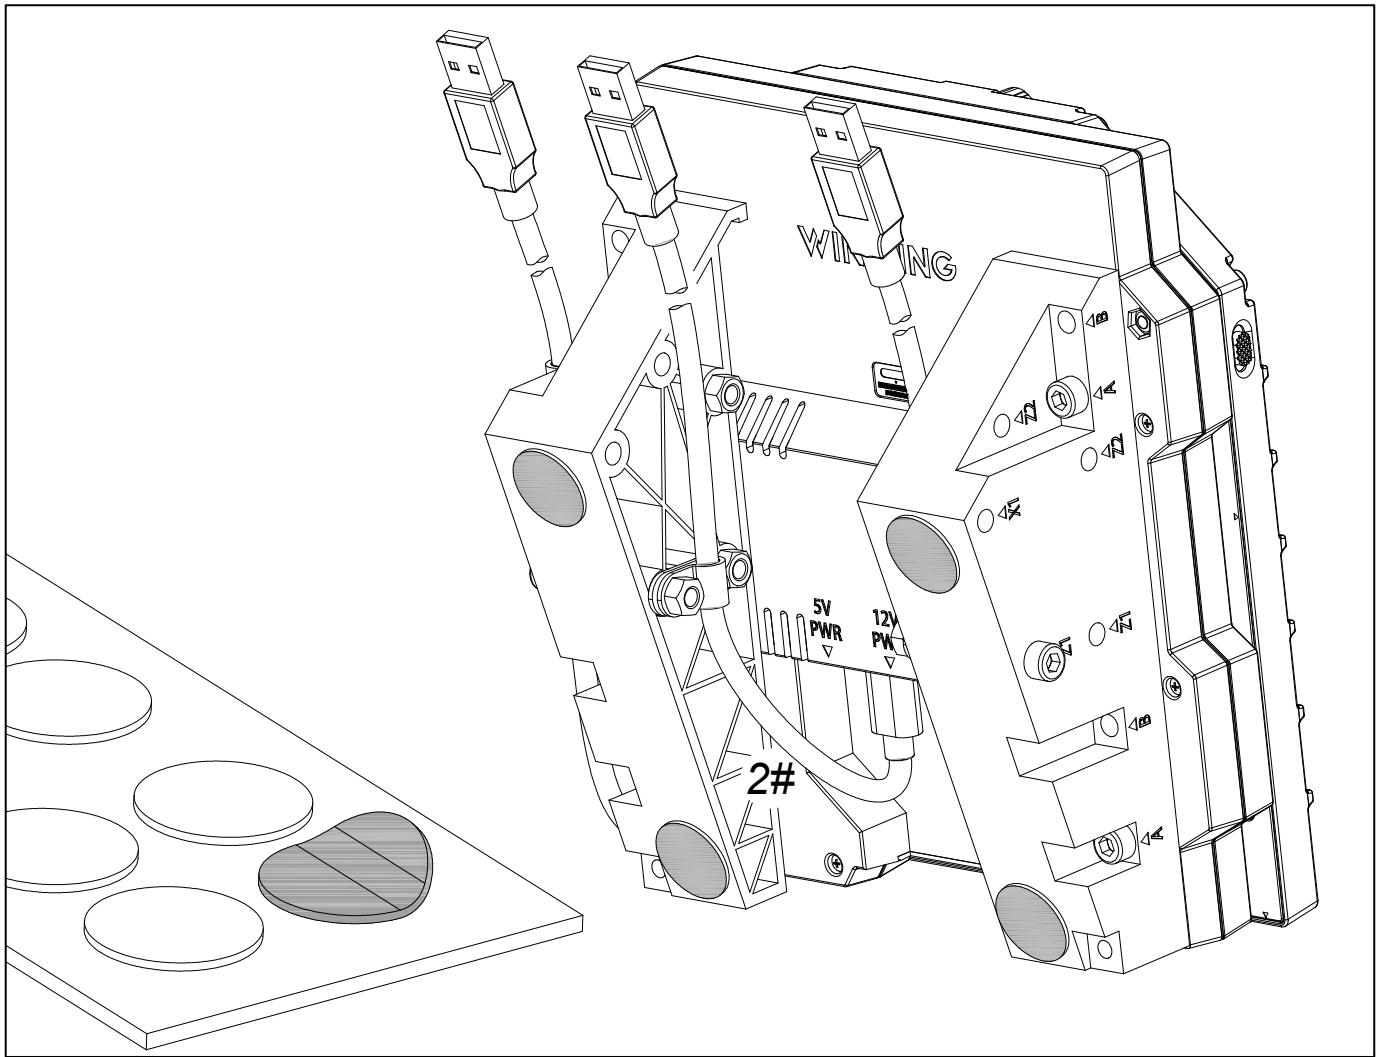

- ① Place the holders in the position as the diagram indicates, put the screws through Hole A on the holder and turn it in the Hole A on D1 rear plate. Fix them correctly, don't overtighten;
- ② Wiring, all holes unoccupied is available for wiring. Please refer to the diagram when you decided to directly place the panel on the table;
- ③ If you need to mount the panel on clamp holders (MP1), please refer MP1 User manual and complete wiring after installation;
- ④ Paste double sized glue dots on each side of the holders (as close to the edge as possible), then place and fix the panel on the table.


4 Mount on clamp holders after connection

*Users need to purchase the clamp holder and accessories. Provide following combine installation:

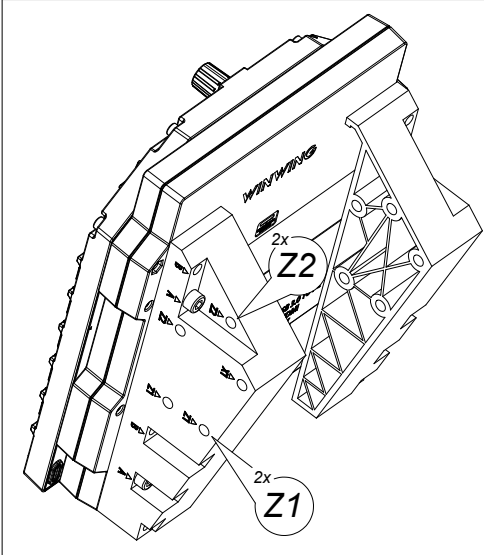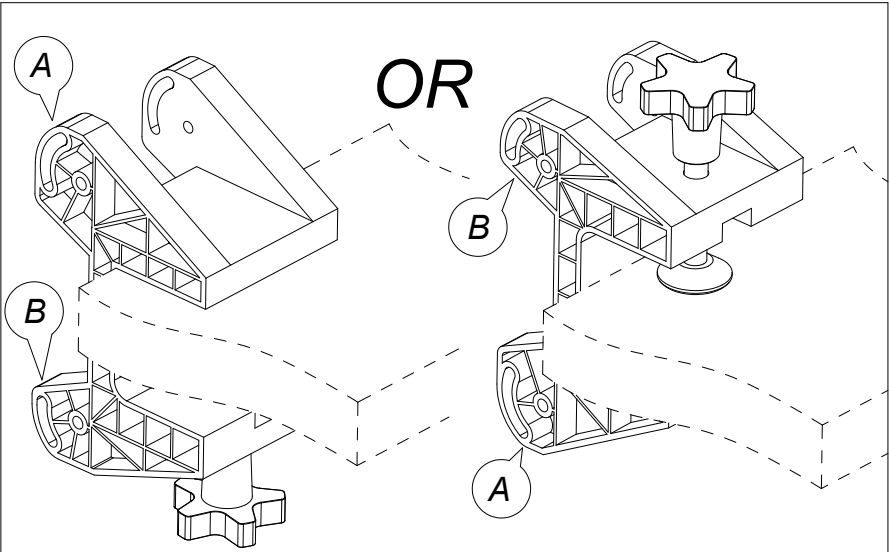

安装孔	A	B
Z2	Z2+A	Z2+B
Z1	Z1+A	Z1+B

Other installation methods not described in this manual are all identical.

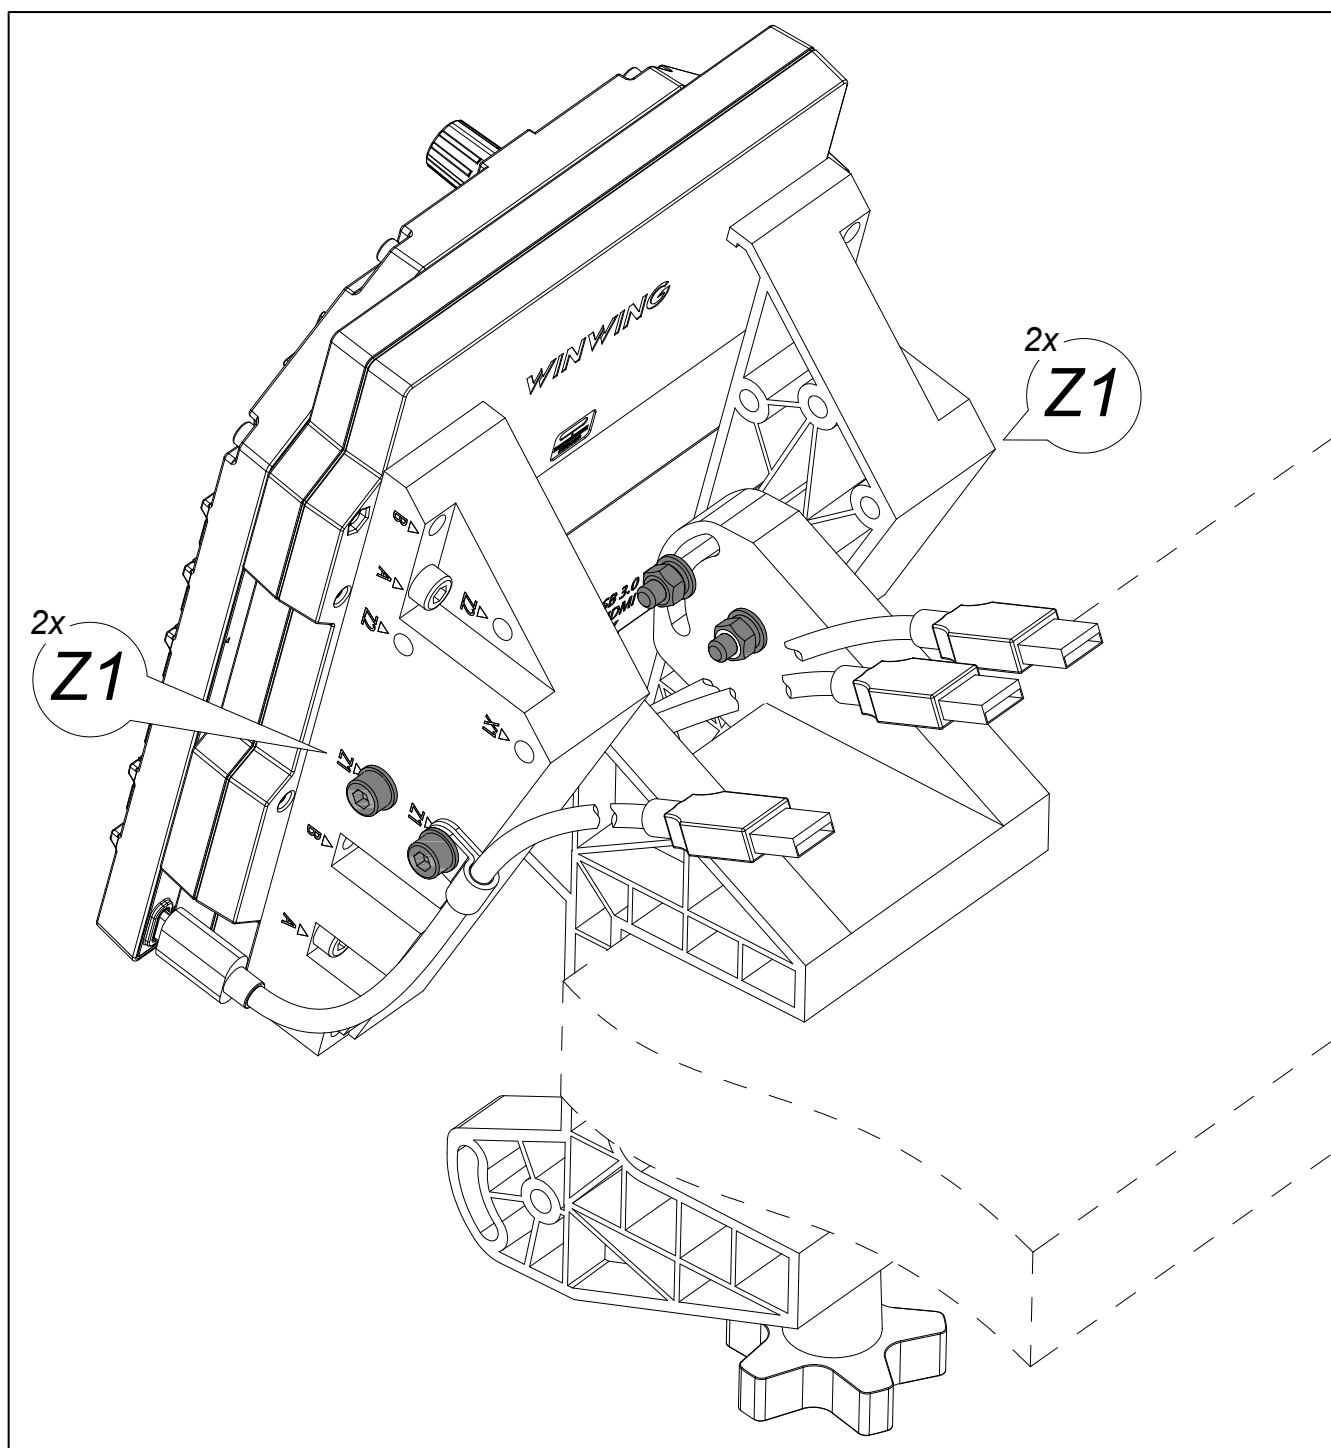

*This is the final version of the manual,all update will be made online.

成都翼胜科技有限责任公司

WWW.WINWING.CN

INFO@WINWING.CN

High-tech International Enterprise Zone No.19 Building,Changshengqiao

Road 1111#,Pidu District, Chengdu,China 610000.