


UFC1


User Manual V1.3 2023.11

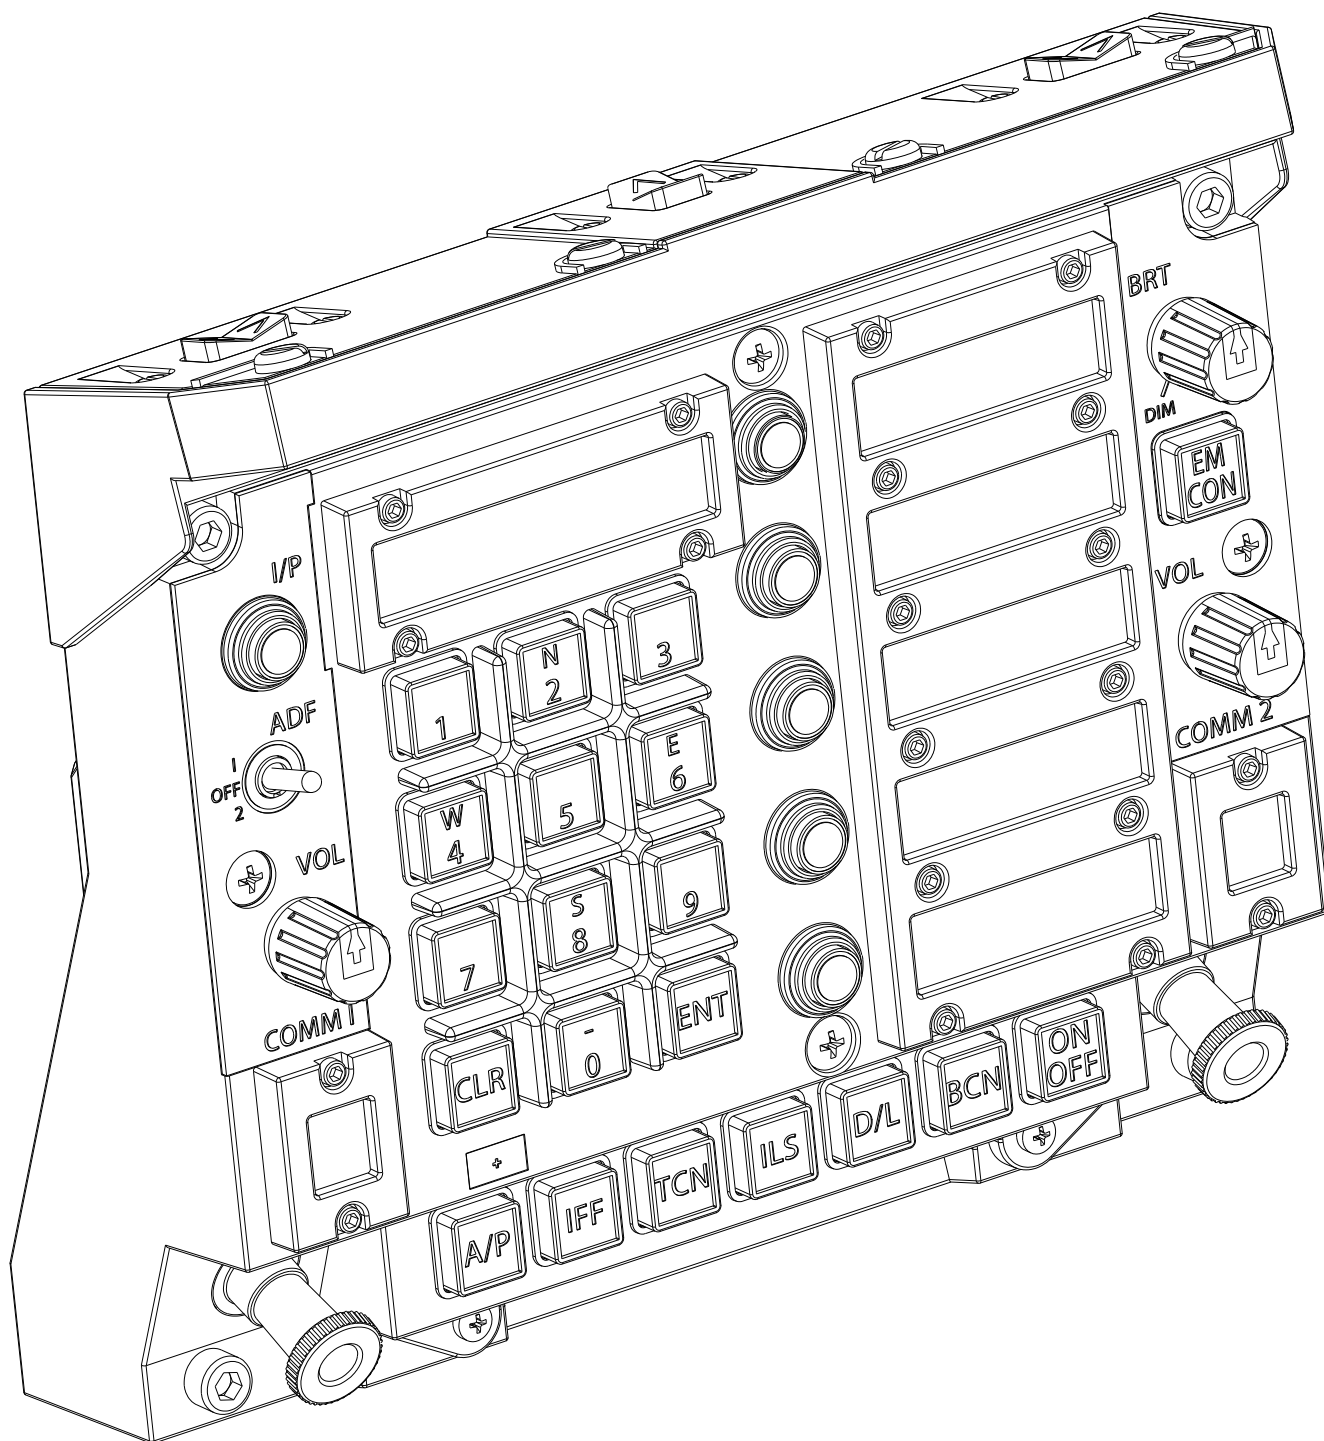

Catalogue:

Package list.....	1
1 Parameter	2
1.1 Performance parameter	2
1.2 Applicable models	2
1.3 Dimension.....	3
1.4 Installation dimension	3
2 Functions	4
2.1 Mechanical and special functions	4
2.2 Key positions.....	5
2.3 Adjustment methods.....	6
3 Parts installation and disassemble.....	6
4 Installation methods.....	6
4.1 Holders installation.....	6
4.2 Game seat installation	8
4.3 Cockpit installation.....	8
4.4 Connection	8


Package list

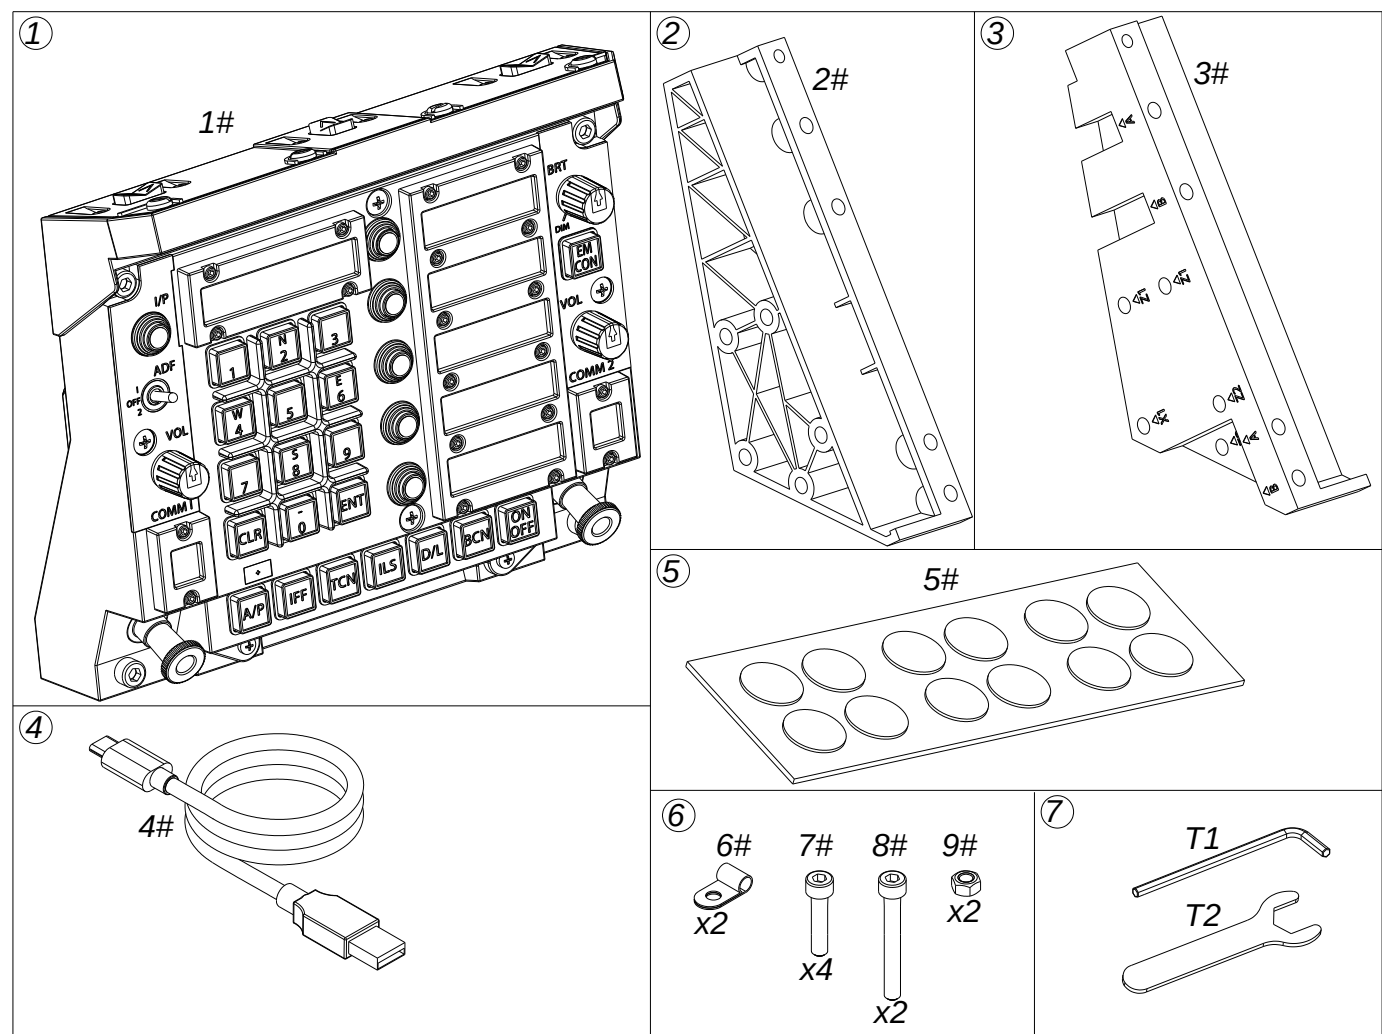

①	UFC1 (1#)			1
②	Mount holder-left (2#)			1
③	Mount holder-right (3#)			1
④	Data cable (4#)			1
⑤	Nanometre double sided adhesive dots (5#)			1
⑥	Accessories kit (6#~9#)			1
6#	UC-0.5	7#	Hexagon Socket Head Cap Screws M5*18	
8#	Hexagon Socket Head Cap Screws M5*40	9#	Hexagon Nuts M5	
⑦	Tools kit (T1、T2)			1

1 Parameter

1.1 Performance parameter

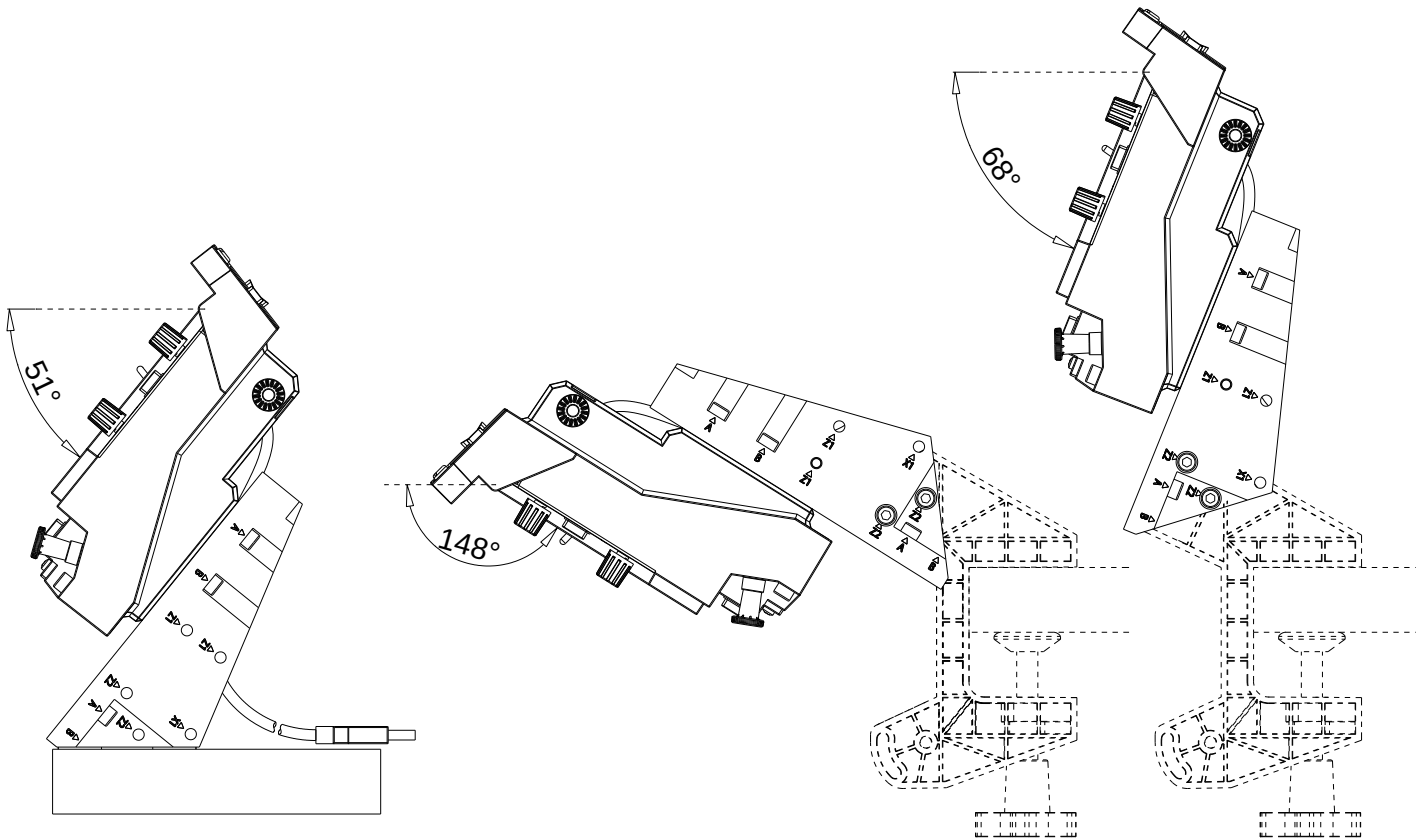


- 1 It can be mounted on the table with a 16° or 51° angle;
- 2 For more mount methods and angles, please buy a clamp holder;
- 3 Can be mounted on 4080 aluminium profiles (Not provided).

1.2 Applicable models


- ① Can be used alone;
- ② Connect with HUD1;
- ③ Can be mounted on special supports (not provided) and connect with other control panels.

1.3 Dimensions

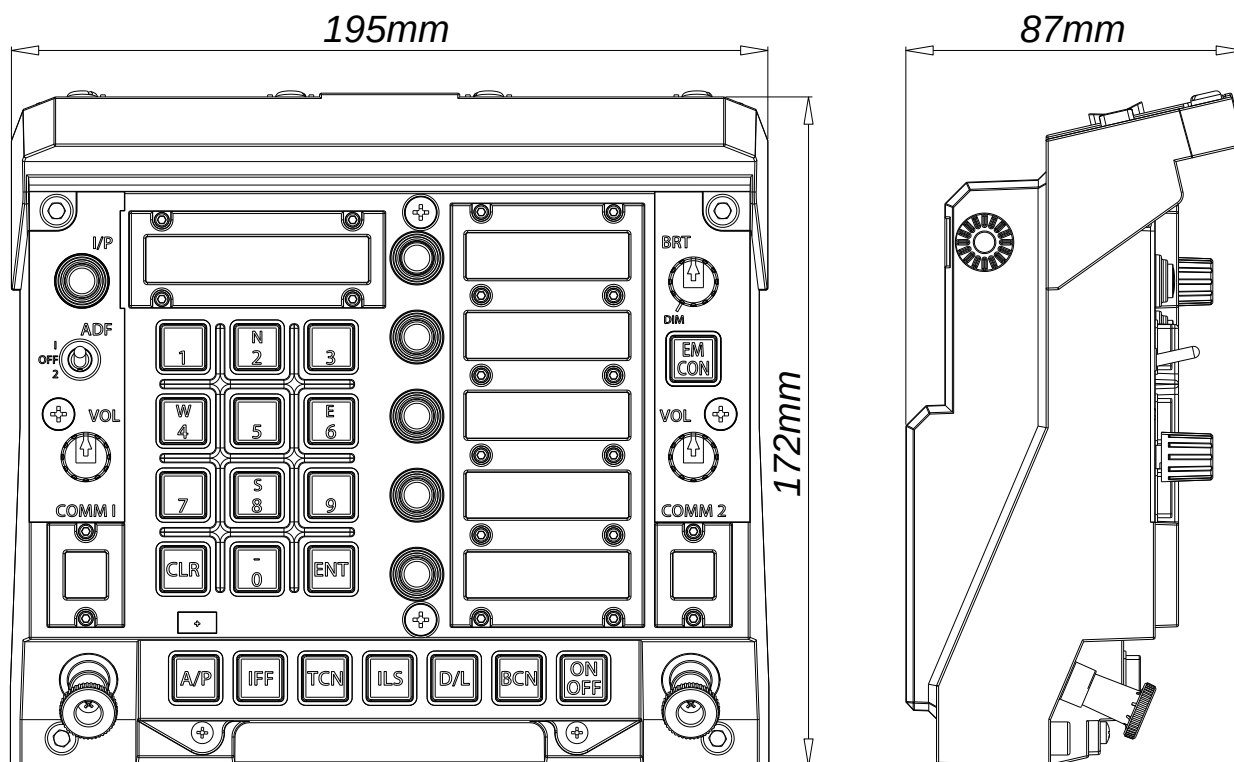


Lenth*width*height:195mm*87mm*172mm; Mass: 1.5kg=3lb.

1.4 Installation dimension

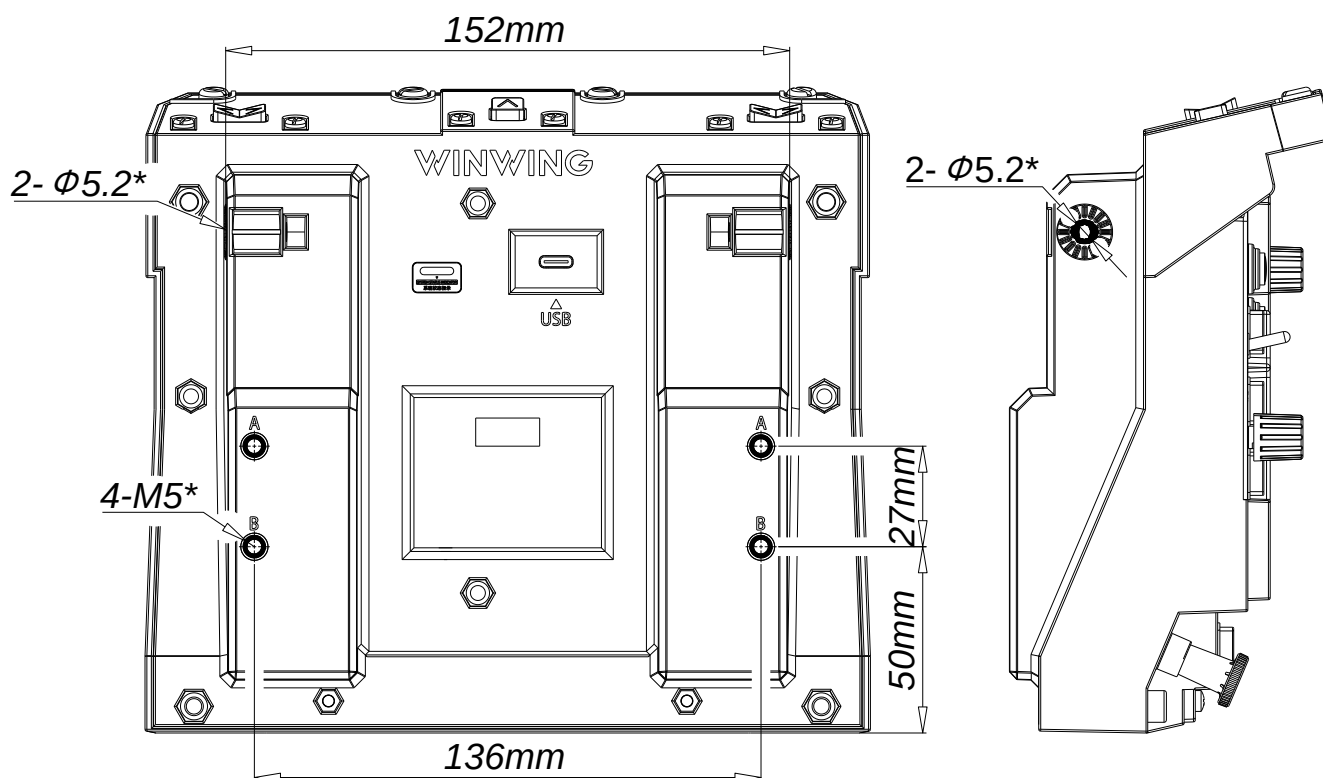

*2-Φ5.2: Additional mounting holes ;4-M5 maximum depth: 5mm.

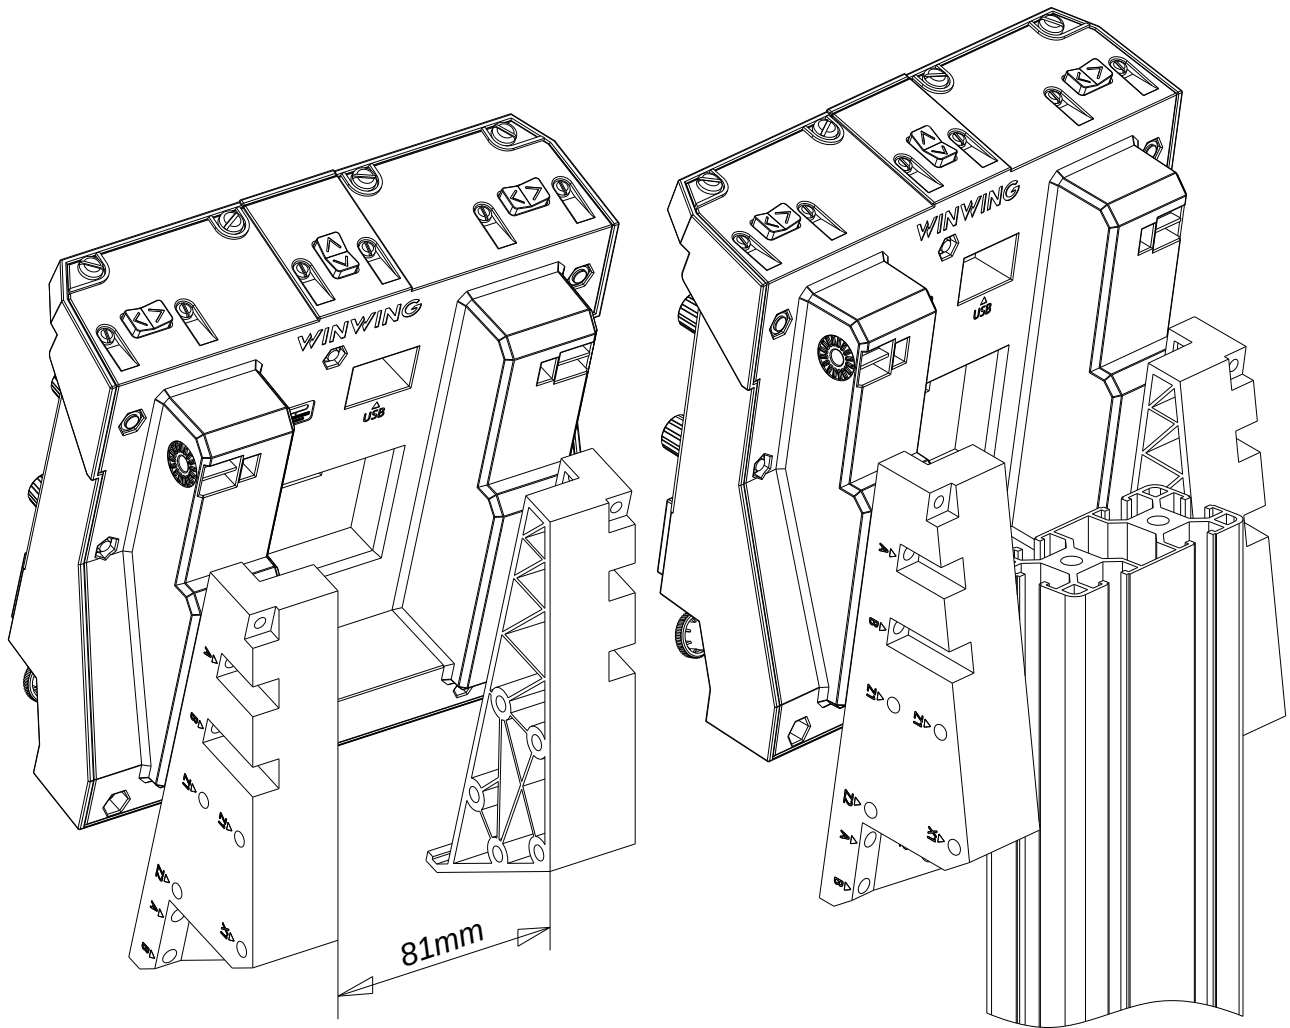


Can be mounted on 4080 aluminium profiles (Not provided). (Screw:M5*40.M5 T-Nut for 40 Sereis Aluminum Profile)

2 Functions

2.1 Mechanical and special functions

\

2.2 Key positions

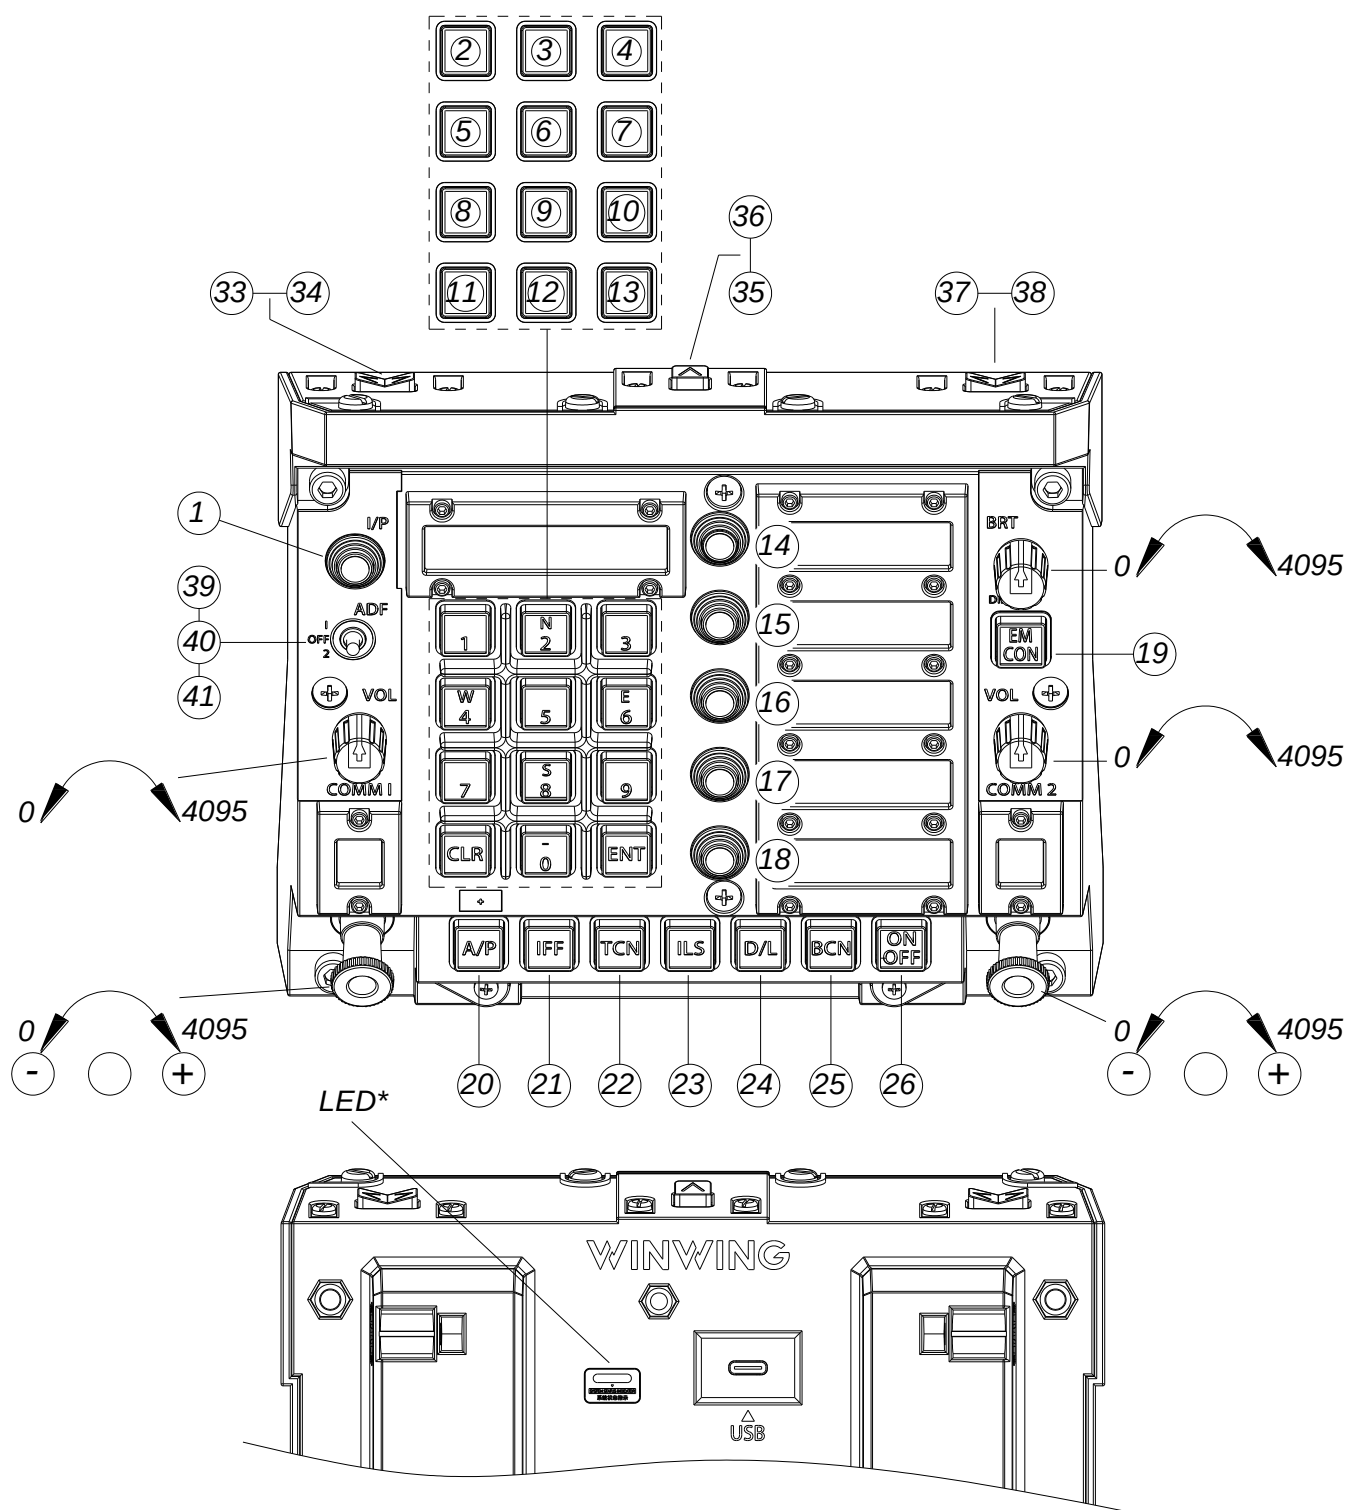

* LED status: Steady slow flashing in green (1s interval) - BOOT mode.

Slow flashing in green (1s interval) for 5 times, then steady ON - Operational mode.

Slow flashing in green (1s interval) for 5 times, then OFF - Power supply only mode.

2.3 Adjustment method

\


3 arts assemble and disassemble



\

4 Installation method

4.1 Holder installation


1. In 51 degrees on the table

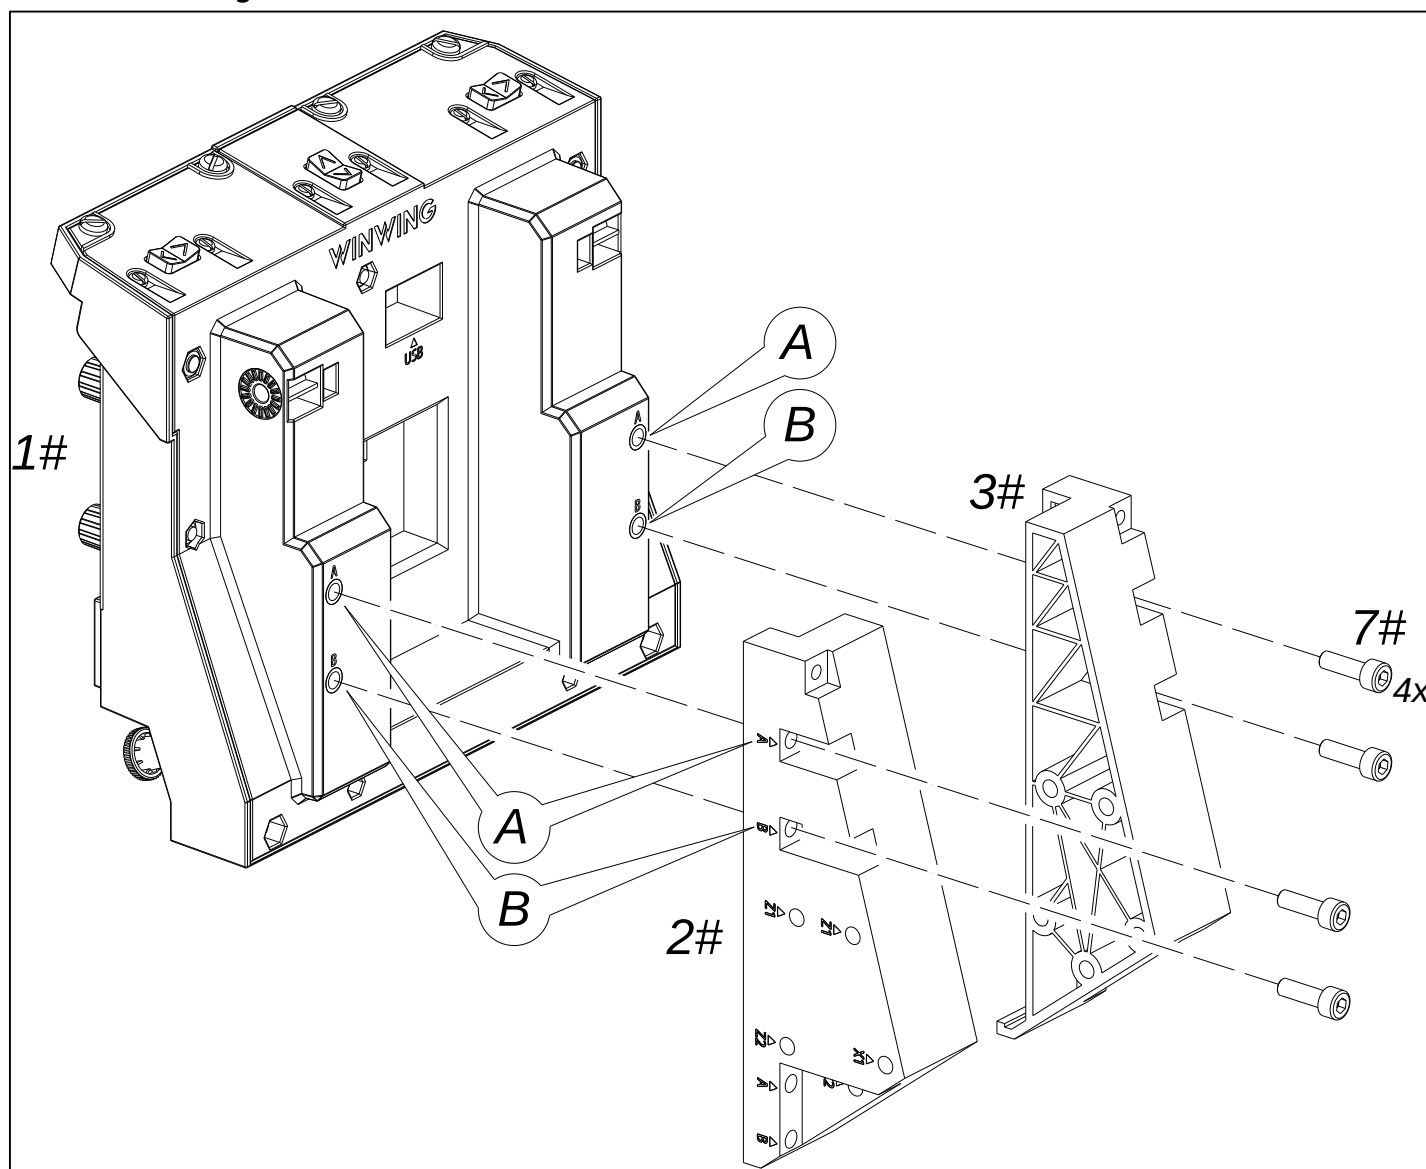

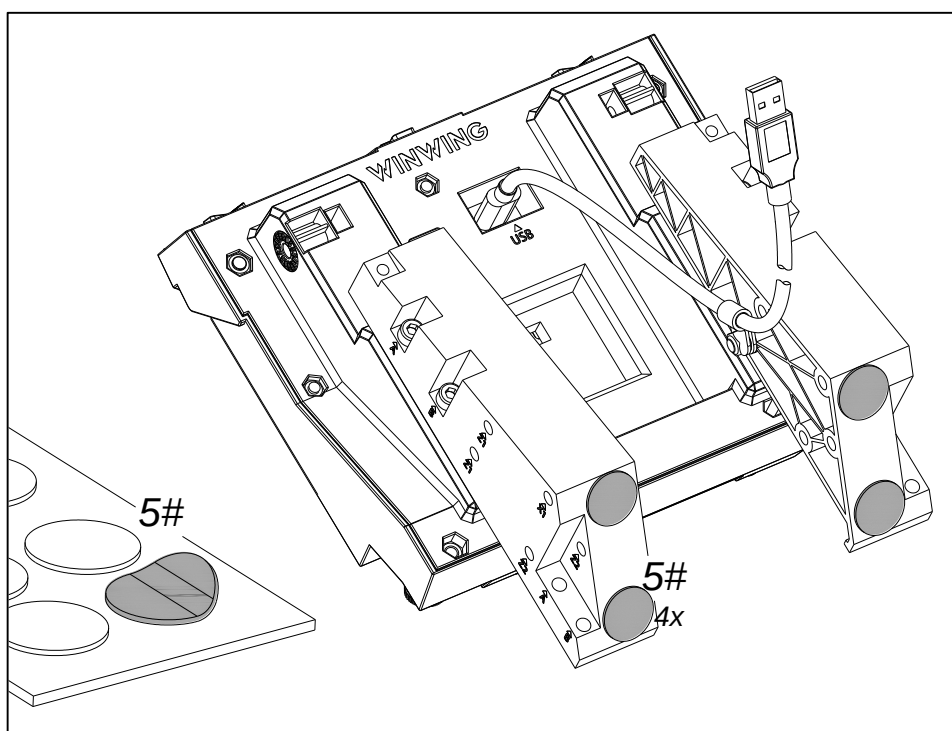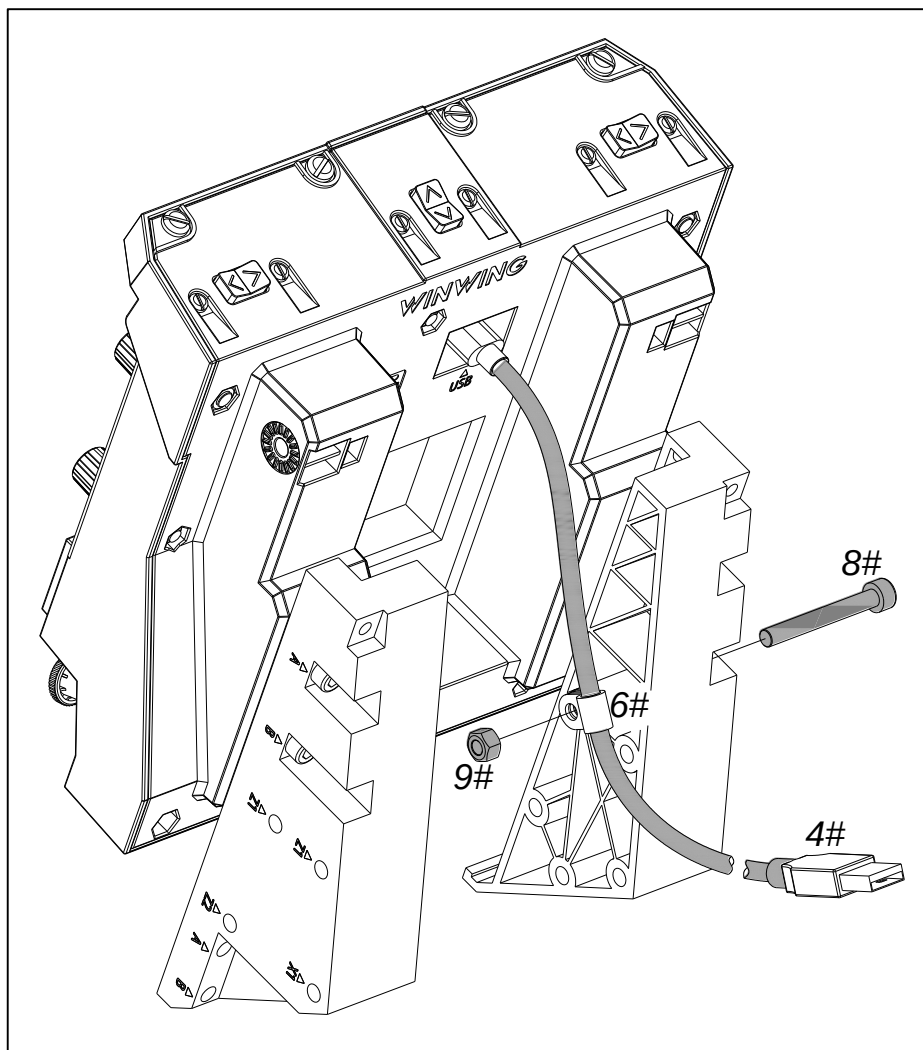

- * Tighten the screws properly, over tighten might cause damages;
- *All holes unoccupied can be used for wiring.

2. Mount on clamp holders * The clamp holders and relative accessories will not be provided

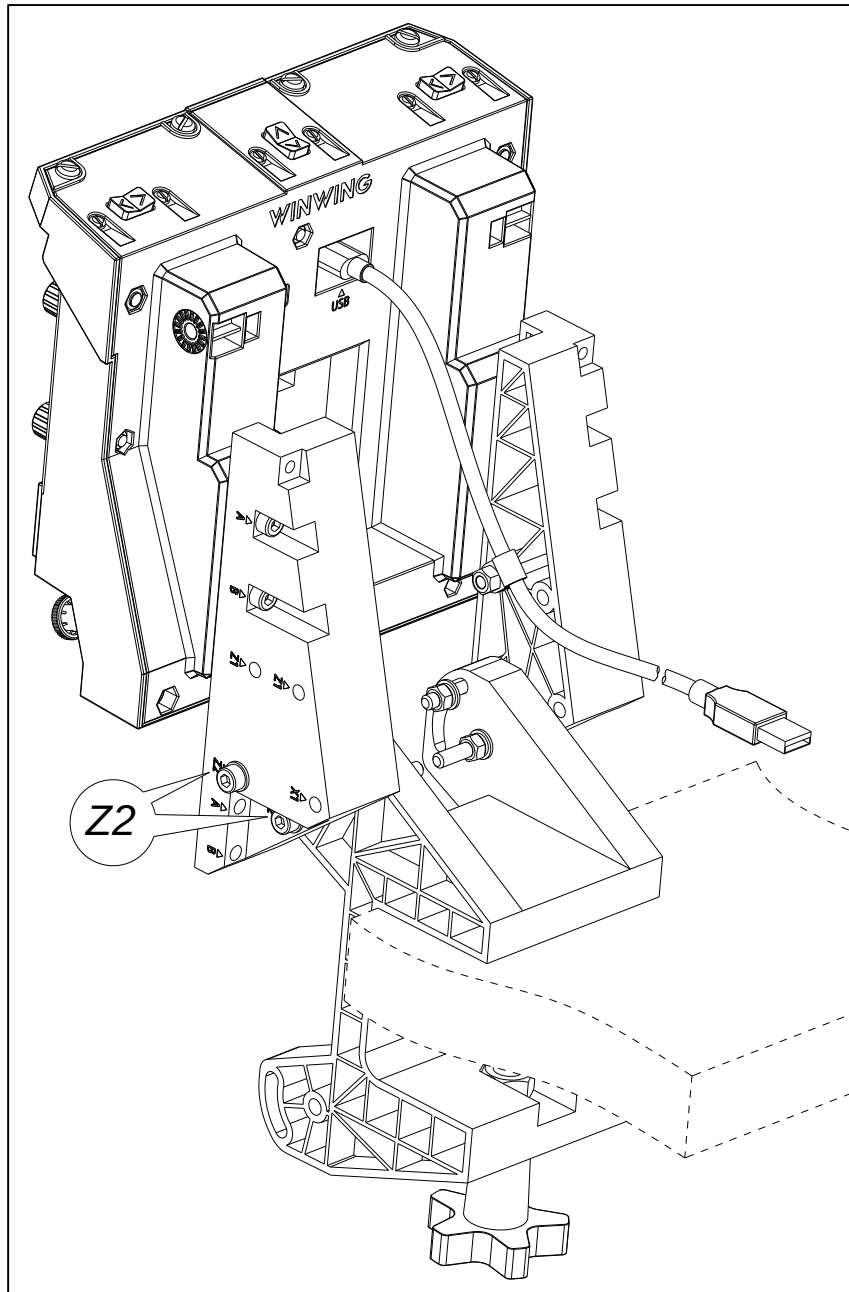

* To connect with clamp holders, please refer to *MP1 User Manual*.

4.2 Game seats installation

\

4.3 Cockpit installation

\

4.4 Connection

To connect with HUD1, please refer to *HUD1 User Manual*.

* This is the final version of the manual,all update will be made online.

成都翼胜科技有限责任公司

WWW.WINWING.CN

INFO@WINWING.CN

High-tech International Enterprise Zone No.19 Building,Changshengqiao Road

1111#, Piddu District, Chengdu,China 610000.