


ADAPTOR-T1-16


User Manual V1.0 2022.07

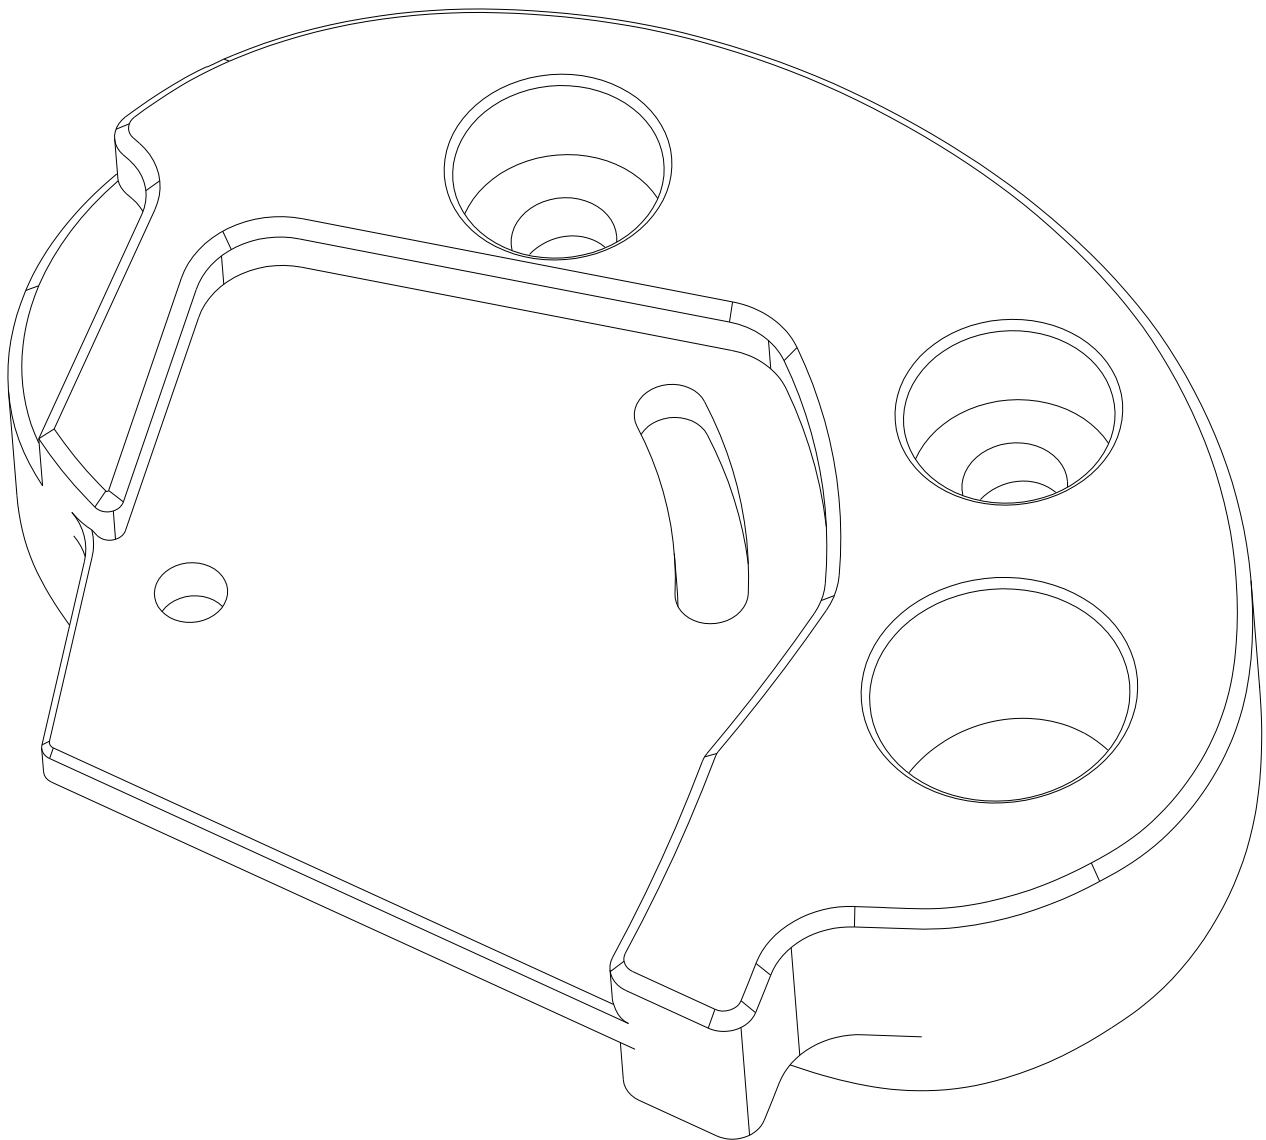

Catalogue:

Packing list	1
1 Parameter.....	2
1.1 Performance parameter.....	2
1.2 Applicable model	2
1.3 Outline dimension.....	3
1.4 Installation dimension.....	3
2 Installation method	4
3 Adjustable method.....	8


Packing list

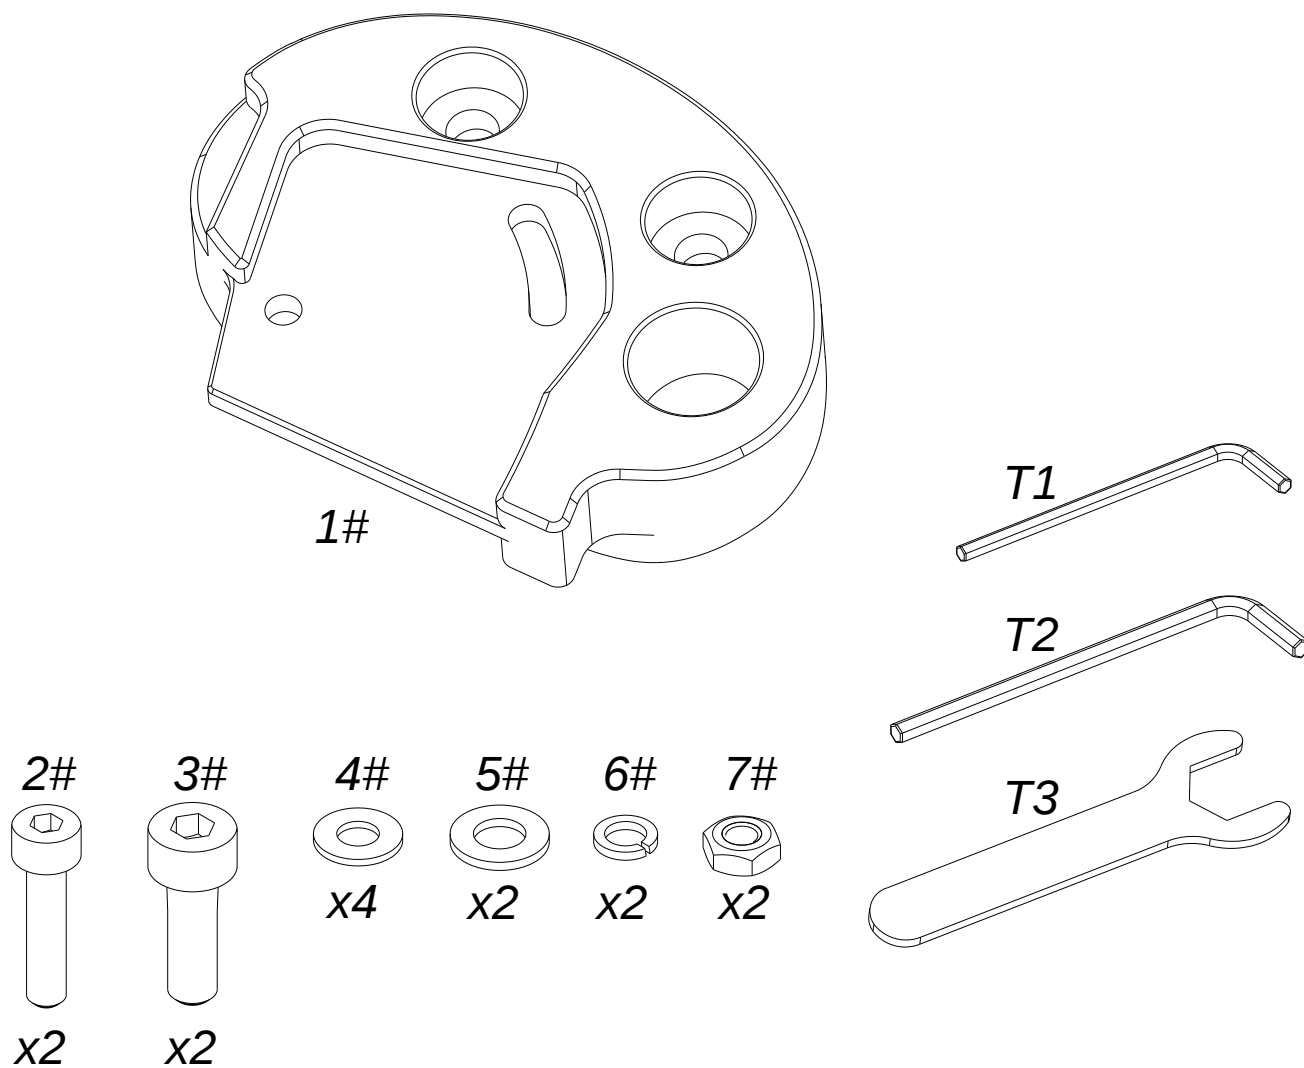

① Connecting rod (1#)	1
② Accessories bag (2#~7#)	1
③ Tools bag (T1、T2、T3)	1

1 Parameter

1.1 Performance parameter

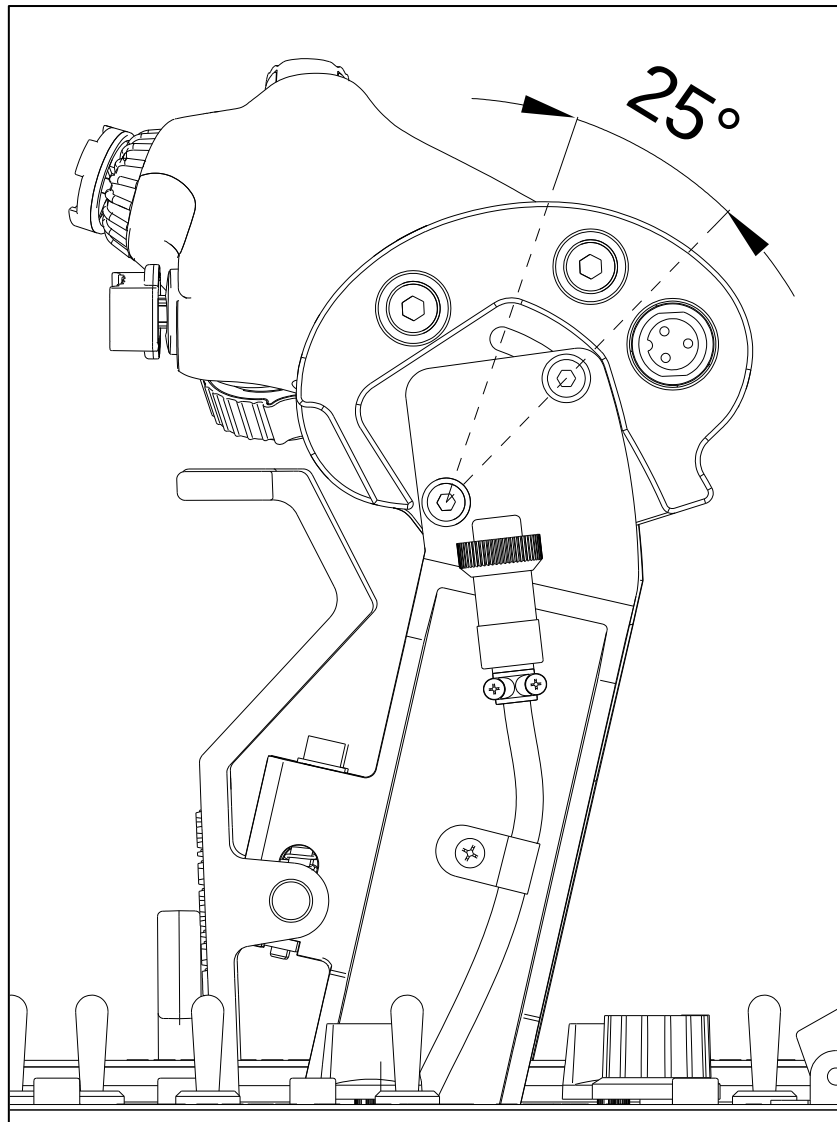


Adjustable angle for initial installation 25° .

1.2 Applicable model


- ① T1 (Taurus Throttle) base;
- ② Adaptable handle/grip: THROTTLE HANDLE OF 16 H.O.T.A.S.

1.3 Outline dimension



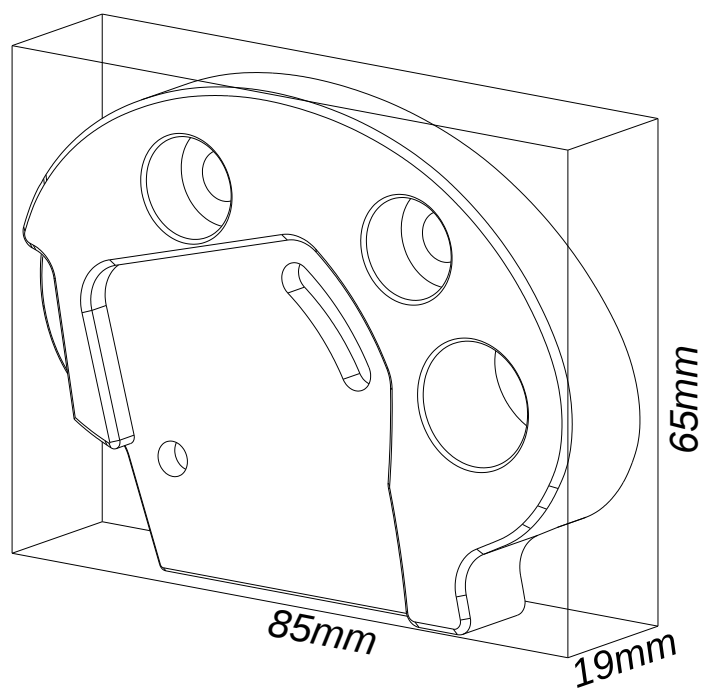




Mass:0.44kg=0.97lb.



1.4 Installation dimension

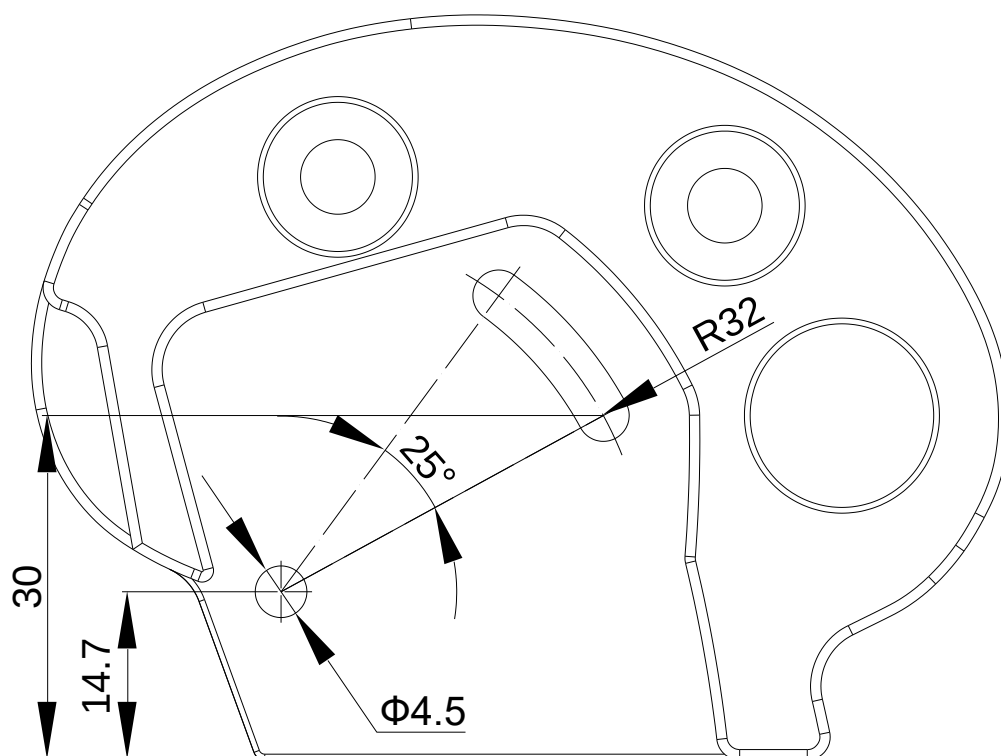


2 Installation method

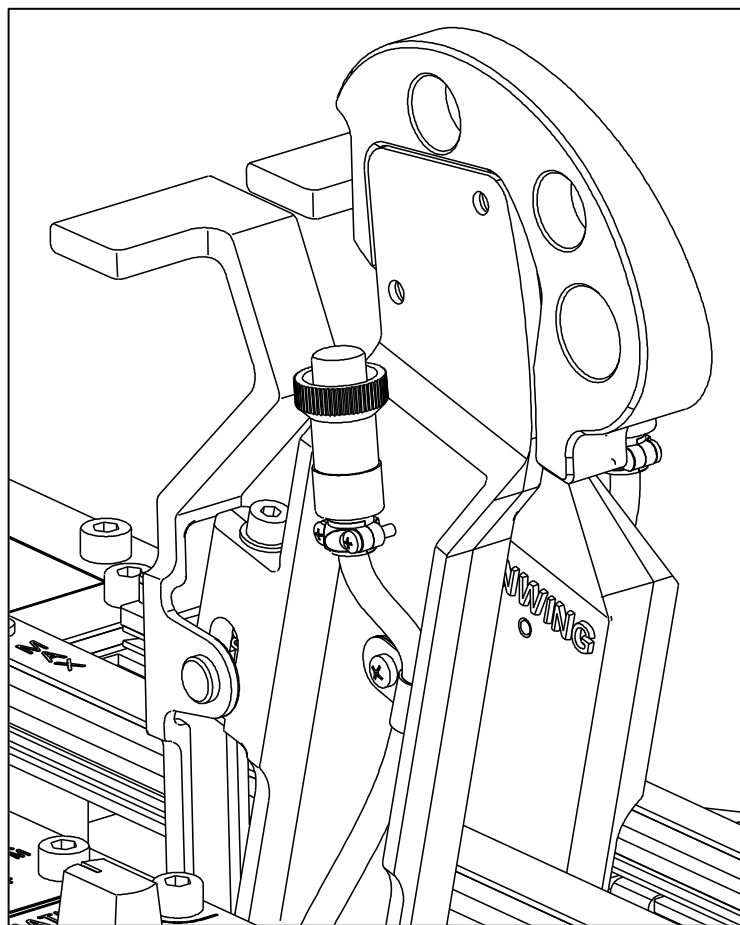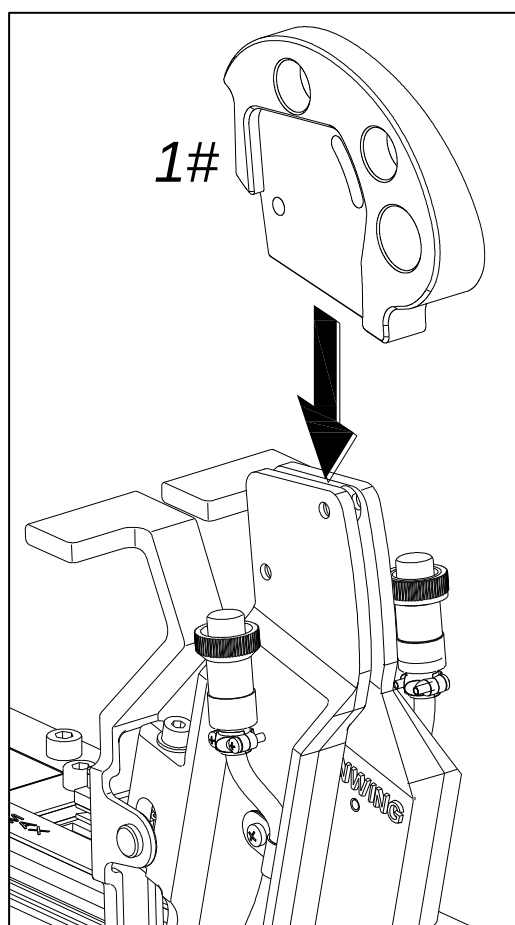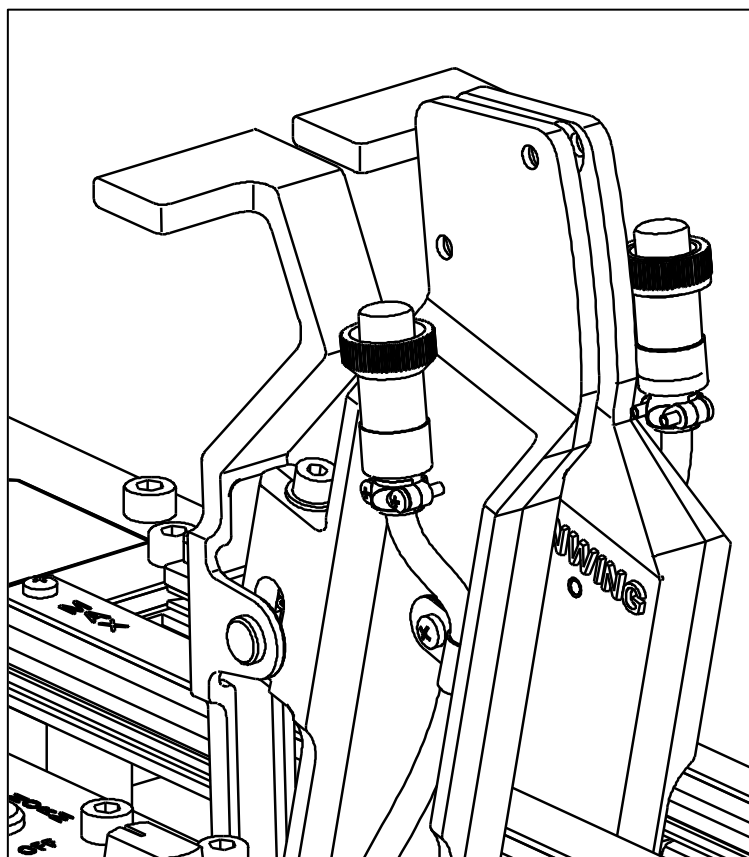

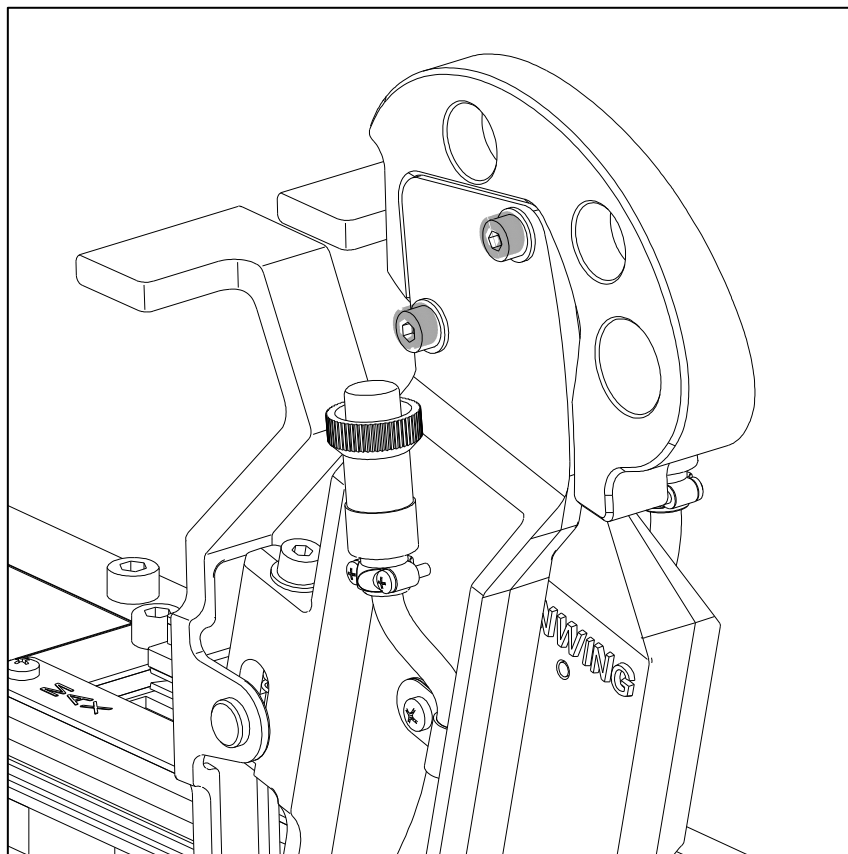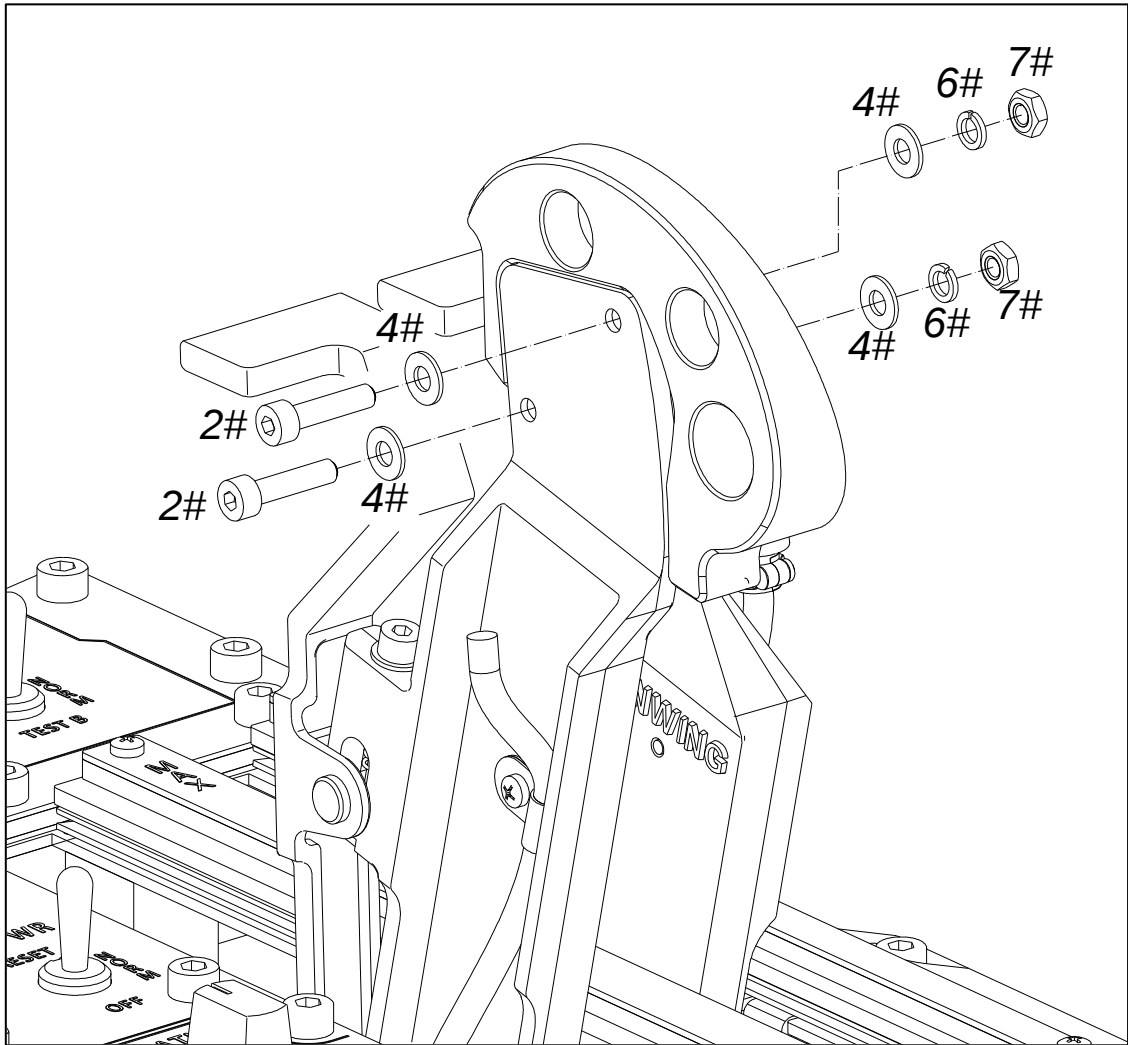


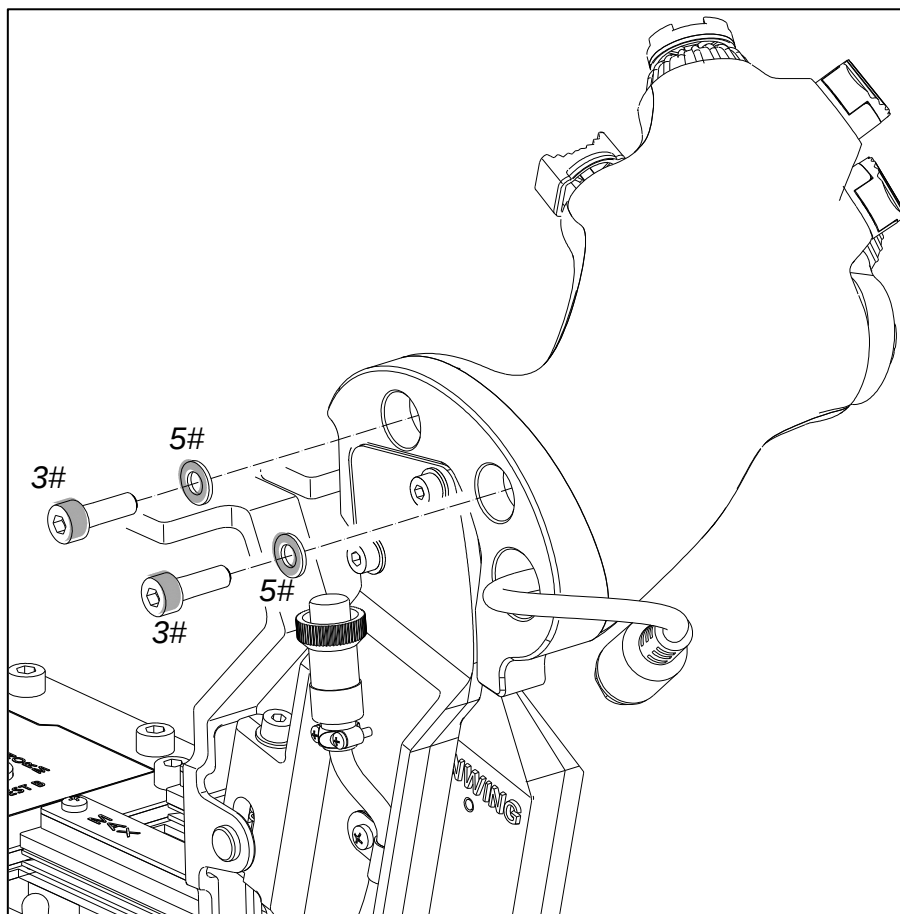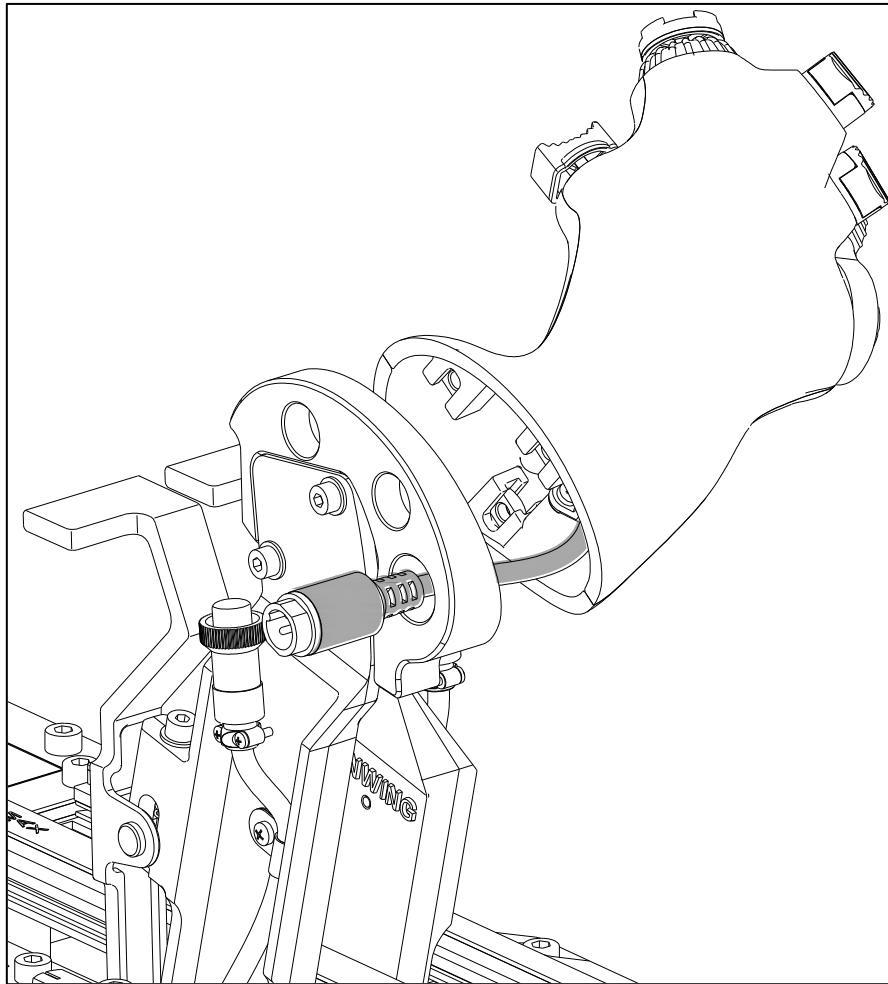

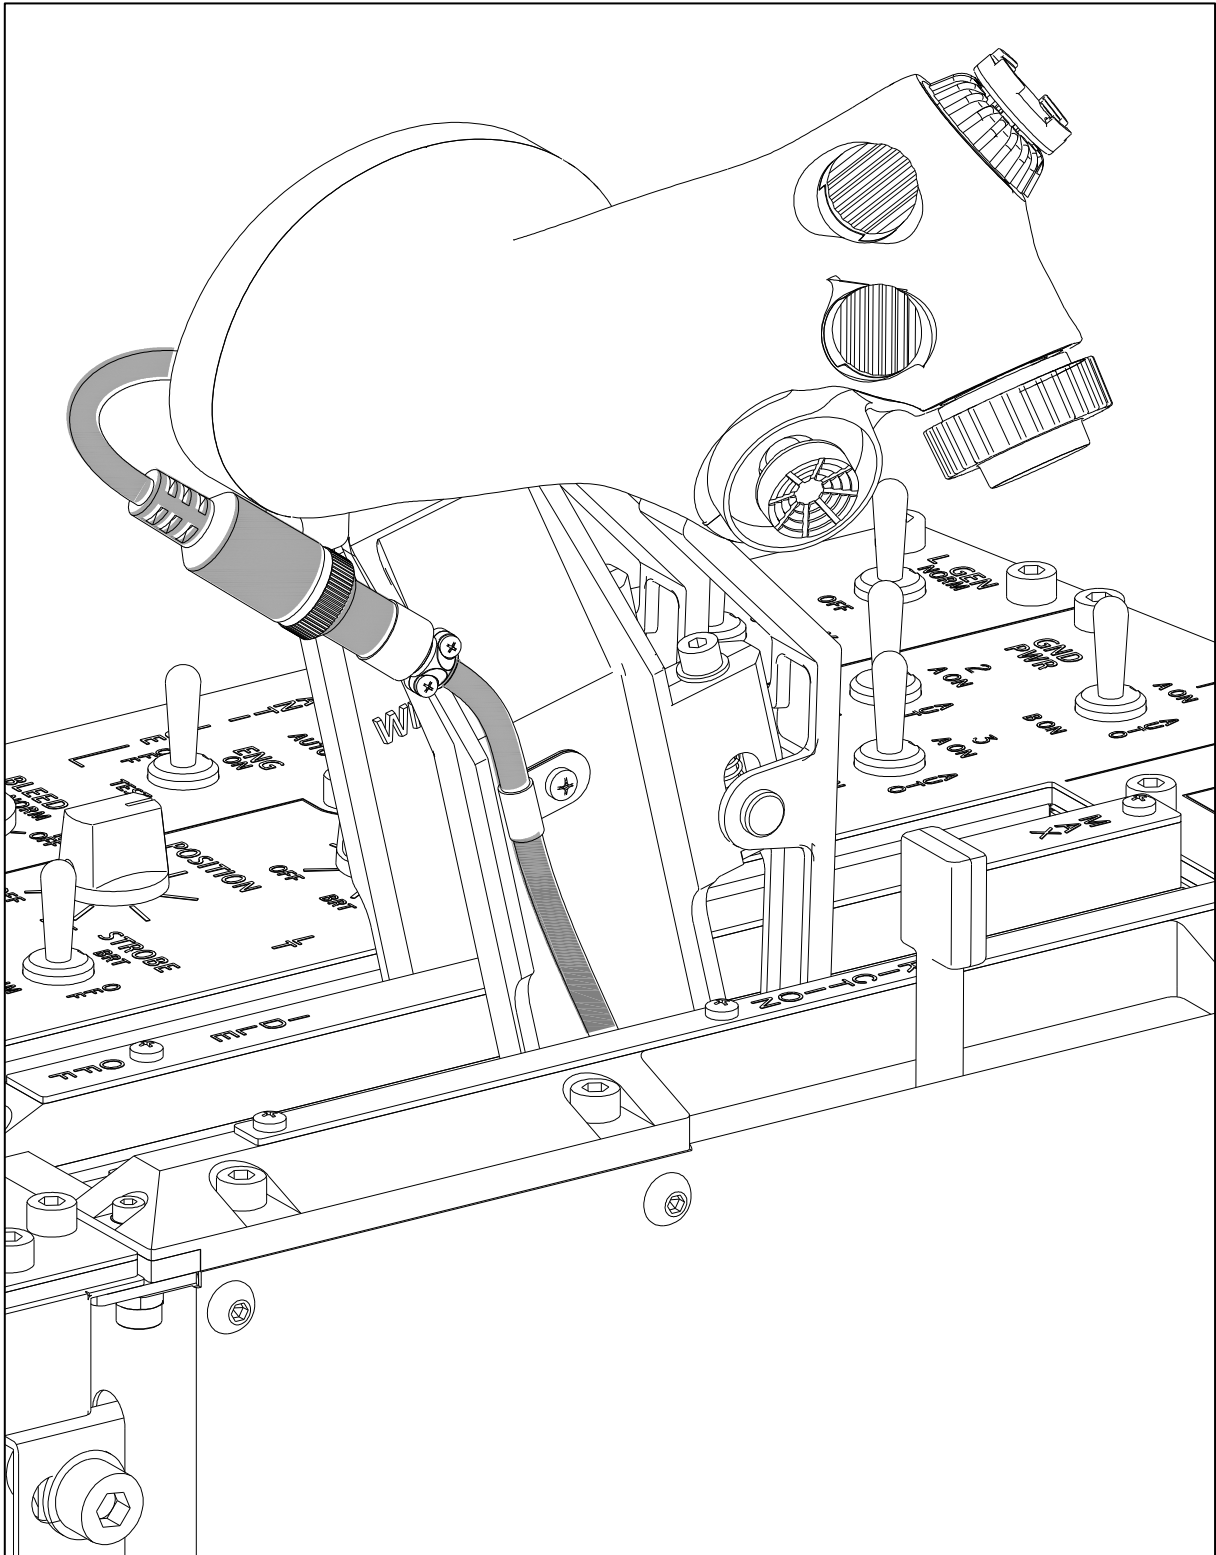

- ① Align the left and right cams on T1;
- ② Insert cam (1#) from the top into the seam between the left and right ones;
- ③ Install bolts and tighten the connecting part on the T1 left and right cam;
- ④ Insert the 16 throttle grip cable through the cable hole on the cam (1#), and bolt tighten the grip;
- ⑤ Connect the 16 throttle grip cable with the T1 right side cable.

3 Adjustable method

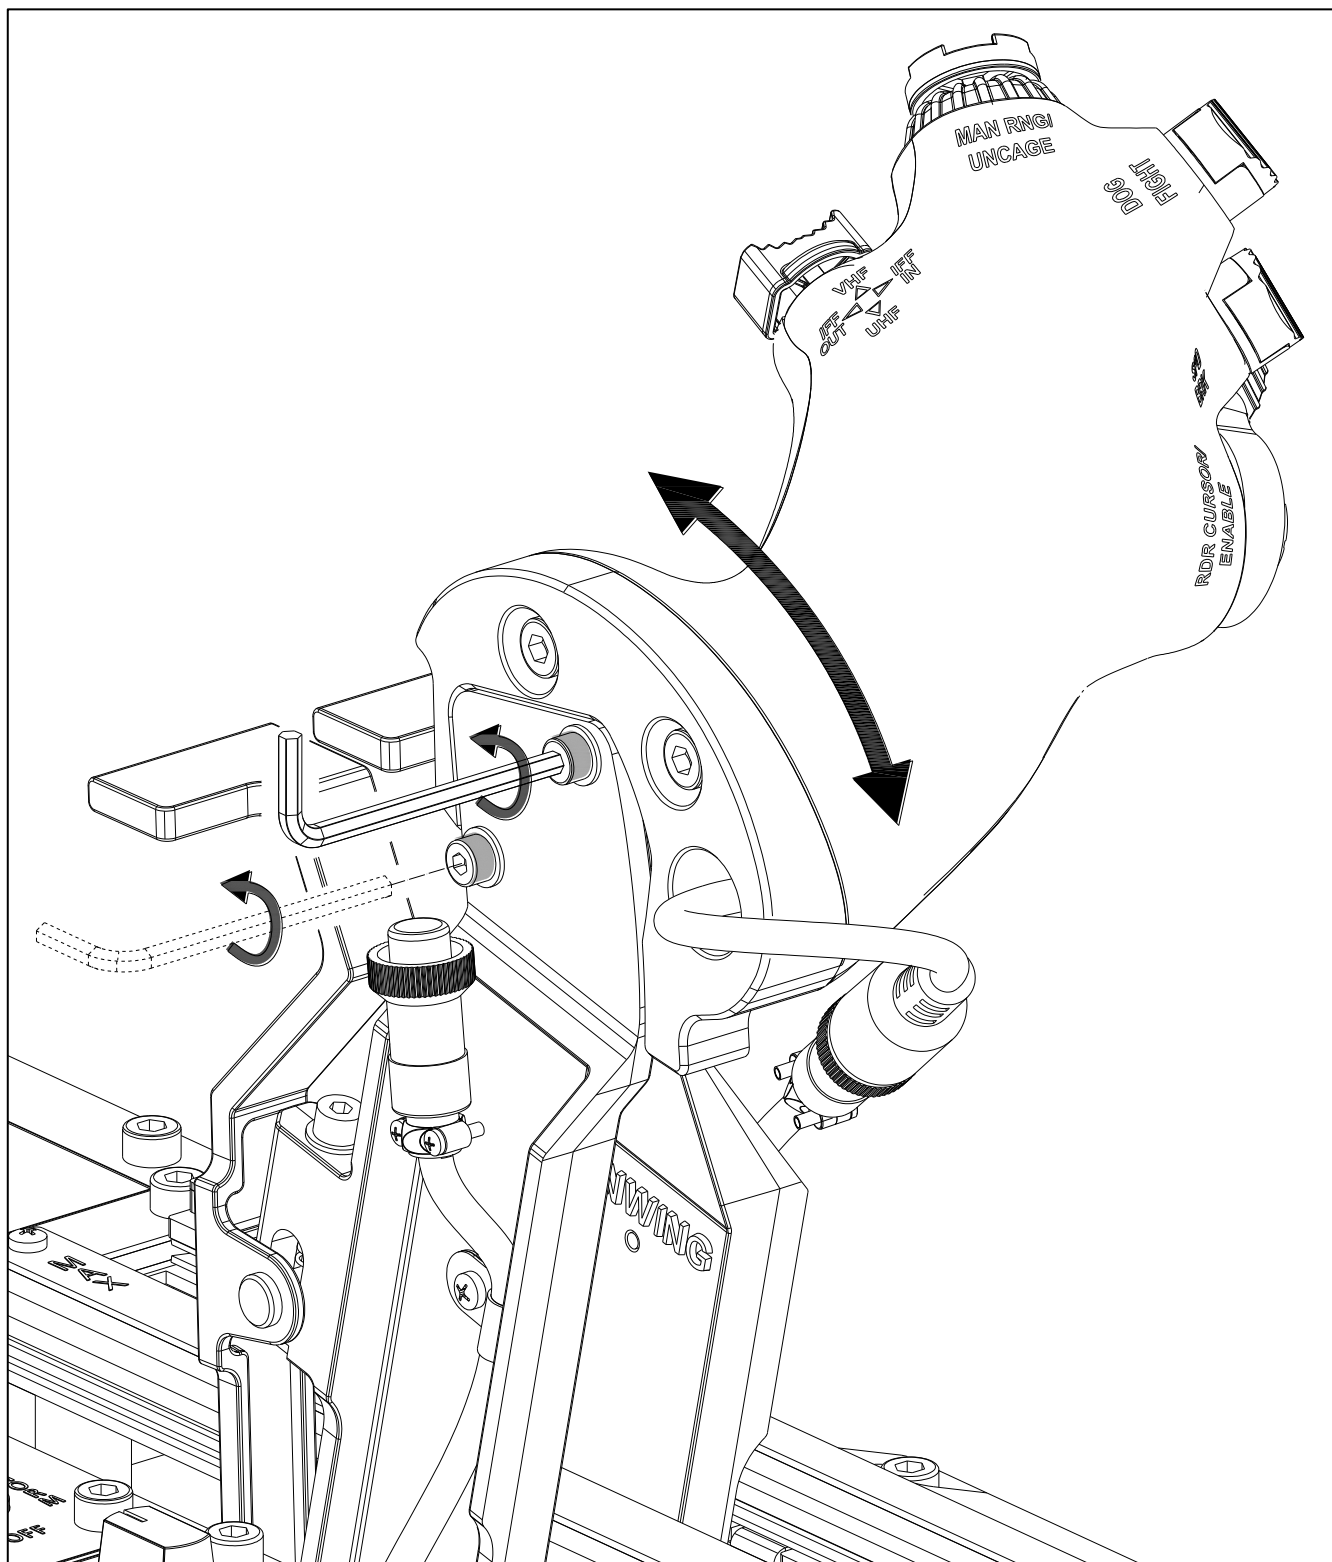

Loose these two bolts, adjust grip to a favorable angle, then tighten them back.

* This is the final version of the manual,all update will be made online.

成都翼胜科技有限责任公司

WWW.WINWING.CN

INFO@WINWING.CN

High-tech International Enterprise Zone No.19 Building,Changshengqiao Road
1111#, Pidu District, Chengdu,China 610000.